

GM01

Jobsite Bluetooth Speaker USER GUIDE

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**





CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**



(Used without word) Indicates a safety related message.


NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**

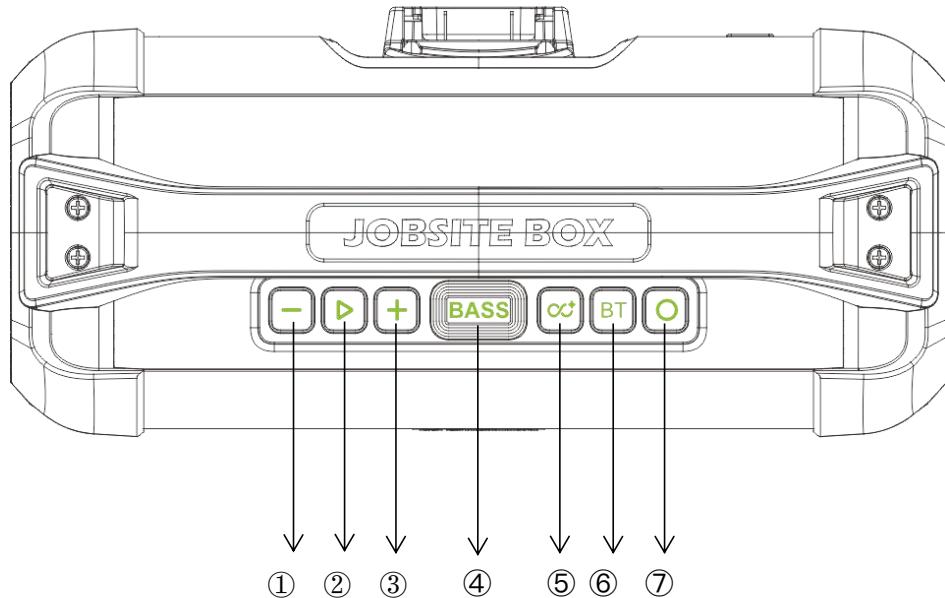

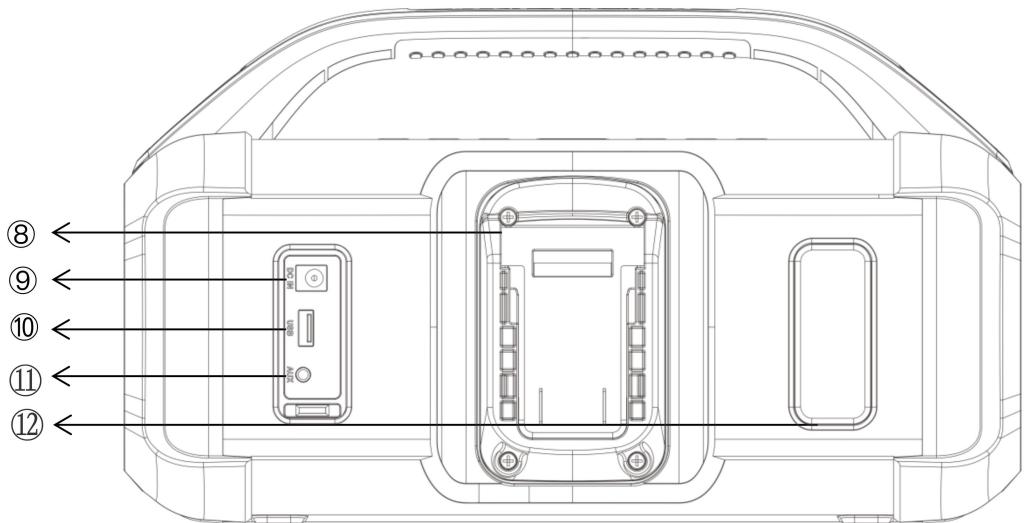

- ①Vol-/Previous/Reset ②Play pause ③Vol+/Next track ④Bass ⑤TWS Pair ⑥BT Pair
 ⑦ON/OFF ⑧Battery adaptor ⑨DC power port ⑩USB ⑪AUX ⑫Subwoofer

To Install the Battery Adaptor into the Speaker

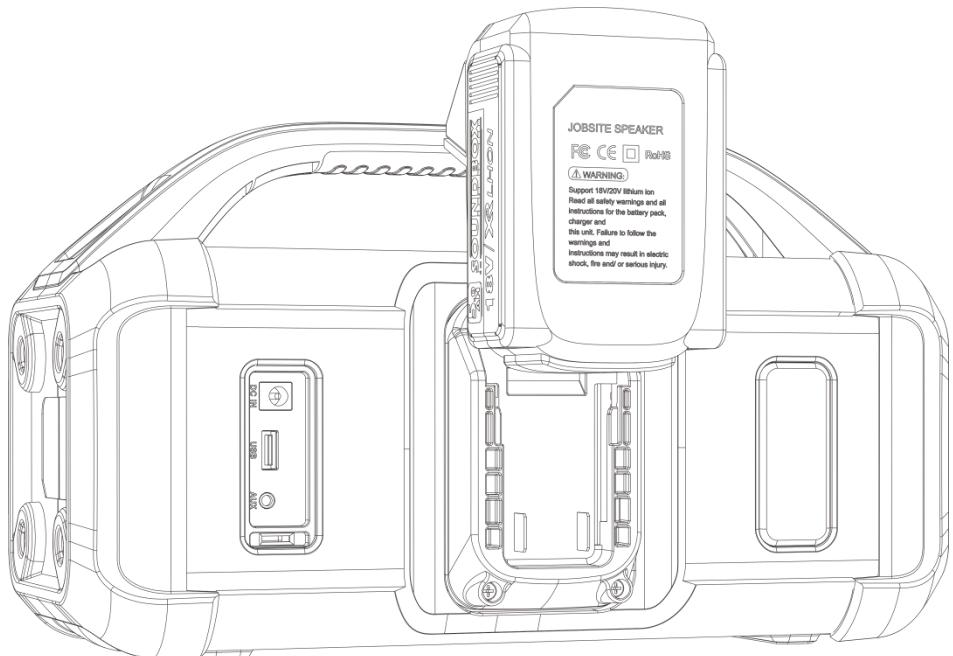

- 1) Align the battery pack with the guides inside the speaker battery port.
- 2) Slide it in until the battery pack is firmly seated and ensure that you hear the lock snap into place. Be sure that it does not disengage.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in shock circuit, fire and/or serious injury.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Use in accordance with the manufacturer's instructions.
8. Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
14. Do not use under wet conditions or in the presence of flammable liquids or gases.
15. Do not keep ears close to this appliance.

Safety Instructions for Speakers

1. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
2. Do not abuse the cord. Never carry the speaker by its cord. Never pull the cord to disconnect from the socket. Keep the cord away from heat, oil, and sharp edges.
3. Remove the battery pack. Switch off the device before leaving it unattended. Remove the battery pack when not in use, before changing accessories or attachments, and before servicing.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. No exposed flame sources, such as lighted candles, should be placed on the speaker.
7. To reduce the risk of hearing damage, do not place ears too close to the speaker.

8. The mains plug is used as the disconnect device; the disconnect device (plug) shall remain readily operable.

Attention: Using Supplied AC Power Adaptor

CAUTION:

1. Always disconnect the AC power adaptor completely before moving the speaker. If the AC adaptor is not removed, it may cause an electric shock.
2. Never pull and/or drag the cord of the adaptor. If not, the speaker may accidentally fall down, causing injury to you or someone around you.
3. **IMPORTANT:**
4. The mains adaptor is used as the means of connecting the speaker to the mains supply. The mains socket used for the speaker must remain accessible during normal use.
5. In order to disconnect the speaker, the mains adaptor should be removed from the mains outlet completely.
6. Do not hold the power supply cable and plug by your mouth. Doing so might cause an electric shock.
7. Do not touch the power plug with wet or greasy hands.
8. Damaged or entangled cords increase the risk of electric shock.
9. After use, always store the AC power adaptor out of the reach of children. If children play with the cord, they may suffer injury.

NOTE:

Ensure the specification of your external device, such as a mobile phone or player, is compatible with the speaker. Please read the instruction manual of your external device before charging.

IMPORTANT:

The charger may not supply power to some USB devices.

When not using or after charging, remove the USB cable and close the cover.

Do not connect a power source to the USB port. Otherwise, there is a risk of fire. The USB port is only intended for charging lower voltage devices. Always place the cover onto the USB port when not charging a lower voltage device.

Do not insert a nail, wire, etc., into the USB power supply port. Otherwise, a circuit short may cause smoke and fire.

Do not connect this USB socket with your PC USB port, as it is highly possible that it may cause a breakdown of the units.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- English:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

Parameter

Product name: Jobsite Bluetooth Speaker

Product Model: GM01

Bluetooth version: 5.3

Bluetooth range (barrier-free): >10-15 meters

Battery: 18V/20V Li-ion

DC input: 20V 1A

Supply voltage: 100V-240V-50/60Hz

USB output: 5V=2.1A

Rated power: 40W

Peak power: 80W

Speaker: 2 x 3 inches

Product size: 300*134*134mm

Weight: 2.14KG

Power On:

Long press 2 seconds, blue light flashing on. (Battery power, the red light off status); The red light on if power by DC adaptor.

Power Off:

1. Manual Power Off:

Long press 2 seconds

2. Automatic Power Off:

Preconditions: The product is in the power-on state.

- In Bluetooth mode, if the phone is not connected, the device will automatically power off after 10 minutes.
- In Bluetooth mode, if the phone is connected but there is no playback and no button operation for 10 minutes, the device will automatically power off.
- Not any music playing in USB/AUX mode after 10 minutes
- When the battery is low (voltage value), the device will automatically power off.

Listening to music via Bluetooth streaming

Pairing your Bluetooth device for the first time

1. No Connection Record:

First time connect, after power on, one press on the "BT" button to enter pairing mode with a "Beep" prompt. Turn on the Bluetooth of your mobile device search for "GM01" and press to connect, once connected, the blue light stay on.

2. With Connection Record:

- After power on, it will connect to the last paired device automatically. If connected fail will have blue light flashing on. Press "BT" button to reconnect.
- If the device out of Bluetooth range, speaker will attempt to reconnect with the device, If disconnected for more than 10 minutes, the device will automatically turn off.
- Manual play music after reconnected.

3. TWS Pairing

Bluetooth connected with mobile device

Long press the “TWS” button of one GM01 device, when in TWS pairing mode the white light flashing fast, than short press the “BT” button of the another GM01 device. The master GM01 device’s white light on all the time, the slave GM01 device’s white light flashing on.

Bluetooth not connected with mobile device

Short press “BT” button on one GM01 model to pairing mode, long press “TWS” button on another GM01 device to TWS mode. After paired successfully, the master device is the long press “TWS” button one, slave device is the short press “BT” button one.

Un-pairing TWS

Long press “TWS” button on any GM01 device, it will be Bluetooth pairing mode.

※The device should be re-pairing again to TWS mode if TWS pairing failed within one minute.

The GM01 devices would pairing automatically after power on(Except un-pairing GM01 devices manual) . The GM01 devices would TWS pairing prior, than connect with other mobile device.

4. Switch songs

Long press “+” button for next song, Long press “-” button for previous song

5. Adjust volume

Short press “+” button for volume up, Short press “-” button for volume down

6. EQ

Short press “BASS” button to switch from Bass and Normal style.

7. Factory Reset

Long press “-” button 5 seconds, the connection record would be cleared and power off, the volume back to factory reset; The slave GM01 device remain the same when factory reset the master GM01 device;

※Note Please

- The device playing music automatically when connect with USB or AUX; When both USB and AUX connected, it will only play the last connected one.
- The AC adapter power for the product but not charge the tool battery. When the AC adapter cord and tool battery connected the product simultaneously, only AC adapter supply power.

Power Adapter (18V/20V 2A):

When using a 18V/20V 2A tool battery, The red light keeps on.

Package Contents:

- 1x Jobsite Bluetooth Speaker
- 1x AUX Audio Cable
- 1x Instruction Manual