

INSTRUCTIONS

AGES 3+

Thank you for using our company's toy products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.

 
NOTE

This product is suitable for children 3 years old and above. After assembled / charged by adults, play with children again.
Please Use This Product Under The Supervision Of An Adult.
Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.


SPECIAL WARNING:

The used output power of charging plug should be 5V. Please do not use the quick-charging plug and quick-charging cable, so as to avoid the condition that the too quick current output during charging causes overheated battery charging and results in dangerous matters such as product burnout.

Product Configuration

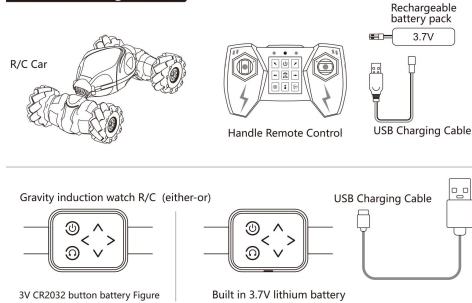


Car Battery Installation

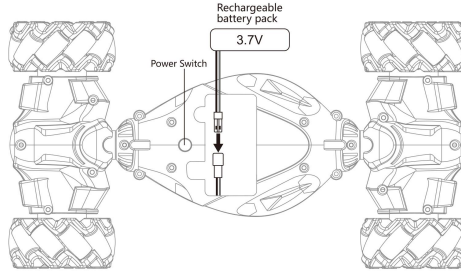 


Battery installation
Open the body battery cover, Connect the rechargeable battery pack to the power socket, Close the battery cover.

 Battery Charging Mode

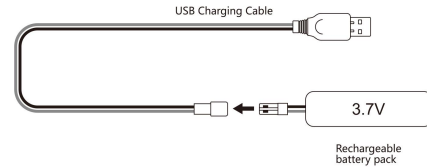


1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

 R/C Function introduction and battery installation

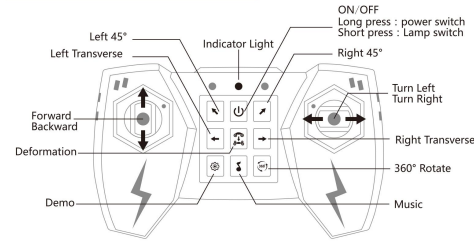

 1. Press down the "Demo" key: the R/C car enters the automatic demonstration mode; press any key to exit from the automatic demonstration mode.
2. Press down the "Music" key: Press the first time to play the engine sound, Press the second time to play music, Press for the another music a third time, and press the fourth time to stop the music.
3. The effective control distance of the handle remote controller is about 40m.



Battery installation

Open the body battery cover and install 2x 1.5V "AA" non-rechargeable batteries in the right polarity direction and cover the battery cover. (Battery not included)

Function introduction of remote controller of gravity induction Watch

ON/OFF
Long press: power switch

Short press: Lock all function, All lights are on at the same time.

 
Short press again to release, Light 2 and Light 3 are on.

Function Conversion

Long press: Enter automatic presentation mode (Press any key to exit)

Short press: Enter mode two (Press any key to exit)


The effective control distance of the gravity induction watch remote controller is about 35m.

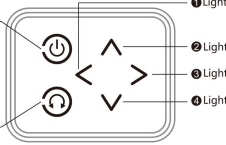

Gravity sensing watch remote control battery description


- 2 Gravity Induction remote controls (Operate as shown below)
1. Built in 3.7V lithium battery 2. 3V CR2032 button battery

 BUILT-IN BATTERY CHARGING



1. Connect the Gravity Induction R/C to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging












 
INSTALL THE BATTERY



Open the battery cover, Install 3V CR2032 button battery, Close the battery cover.

PRECAUTIONS FOR BATTERY USE

            - * Before playing please charge the new battery pack.
- * The output power of charging plug is 5V;
- * The higher the actual milliampere of the rechargeable battery, the longer the charging time;
- * Rechargeable batteries can only be charged under adult supervision;
- * During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- * First plug the battery pack plug in the charger, then plug the charger plugged in the socket.
- * Take out and put in the battery according to the mark on the toy battery room;
- * Non-rechargeable batteries cannot be charged;
- * Use only the same or identical battery as recommended;
- * Do not mix-use old and new batteries or different types of batteries;
- * Batteries should be placed in the correct polarity;
- * Remove the exhausted battery from the toy;
- * Power terminals should not be short-circuited;
- * The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

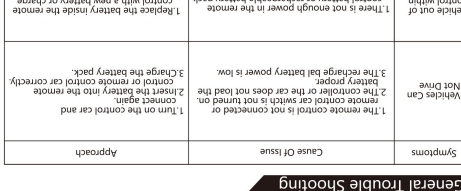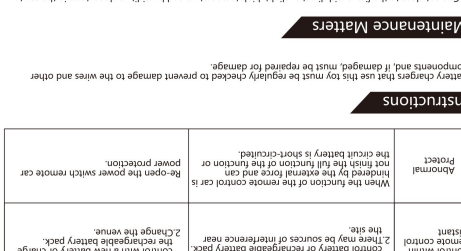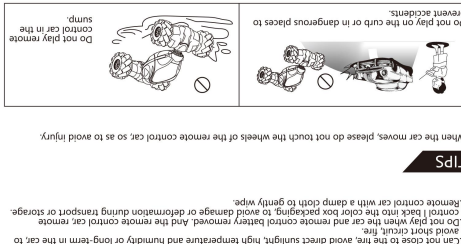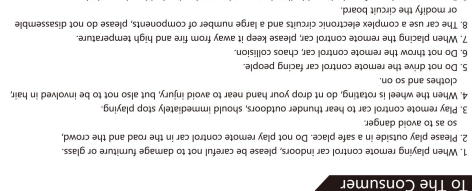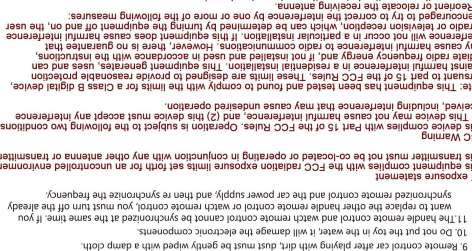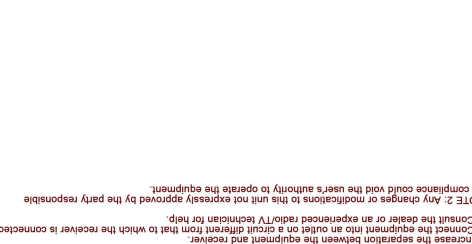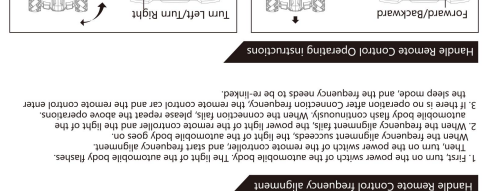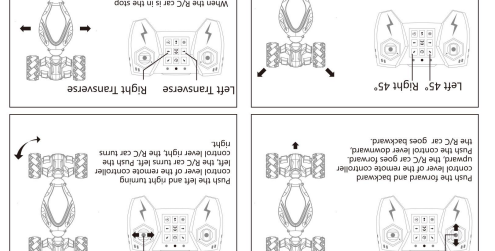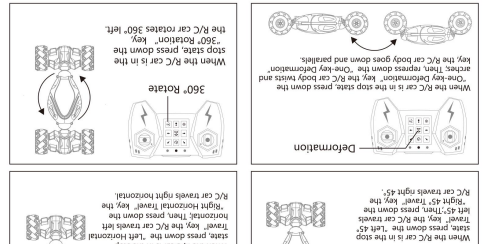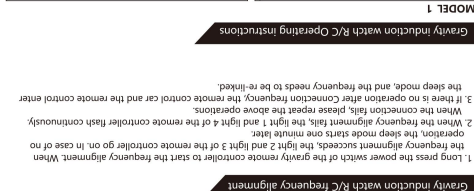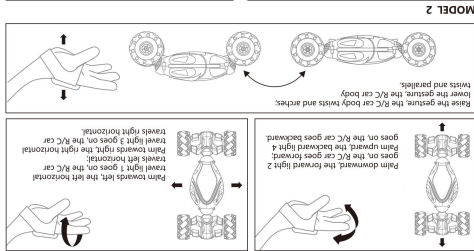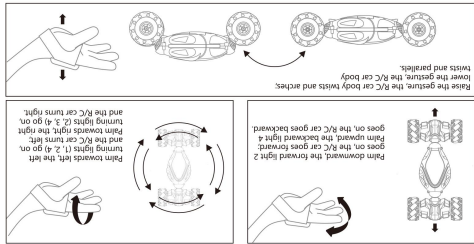

General Trouble Shooting	
Symptoms	Cause Or Issue
Vehicle Can Not Drive	1. The remote control is not connected or the remote control car switch is not turned on. 2. The controller or the car does not load the rechargeable battery pack correctly. 3. Change the battery power. 4. Turn on the control car and connect again.
Abnormal Protect	When the function of the remote control car is not finished, the full function of the function or the circuit battery is short-circuited. Re-open the power switch remote car power protection.
While out of remote control within a certain distance	1. There is not enough power in the remote control battery or rechargeable battery pack. 2. The controller or the car does not load the rechargeable battery pack. 3. Change the battery power. 4. Turn on the control car and connect again.

Maintenance Matters	
1. Can not close to the fire, avoid direct sunlight, high temperature and humidity or long-term in the car to avoid fire.	2. Do not play when the car and remote control battery removed, and the remote control car remote control back into the color box packaging to avoid damage or deformation during transport or storage.
3. Remote control car with a damp cloth to gently wipe.	4. Do not play on the curb or in dangerous places to prevent accidents.
5. Do not play when the car and remote control battery removed, and the remote control car remote control back into the color box packaging to avoid damage or deformation during transport or storage.	6. Do not play when the car and remote control battery removed, and the remote control car remote control back into the color box packaging to avoid damage or deformation during transport or storage.

To The Consumer	
1. When playing remote control car indoors, please be careful not to damage furniture or glass.	2. Please play outside in a safe place. Do not play remote control car in the road and the crowd.
3. When the wheel is rotating, do not step your hand near to avoid injury, but also to be involved in hair, clothes and so on.	4. Do not drive the remote control car far people.
5. Do not throw the remote control car, please keep it away from fire and high temperature.	6. When playing remote control car, please keep it away from fire and high temperature.
7. When playing remote control car, please keep it away from fire and high temperature.	8. The car use a complex electronic circuits and a large number of components, please do not disassemble or modify the circuit board.
9. Remote control car after playing with dirt, dust must be gently wiped with a damp cloth.	10. Do not put the toy in the water, it will damage the electronic components.
11. The handle remote control and watch remote control cannot be synchronized at the same time. If you want to replace the other handle remote control or watch remote control, you must turn off the already synchronized remote control and the car power supply, and then re-synchronize the frequency.	12. The equipment complies with the FCC's radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning	
1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
3. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	4. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
5. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	6. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TIPS	
1. When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.	2. When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.
3. Remote control car with a damp cloth to gently wipe.	4. Do not play on the curb or in dangerous places to prevent accidents.
5. Do not play when the car and remote control battery removed, and the remote control car remote control back into the color box packaging to avoid damage or deformation during transport or storage.	6. Do not play when the car and remote control battery removed, and the remote control car remote control back into the color box packaging to avoid damage or deformation during transport or storage.

Gravity induction watch R/C frequency alignment	
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.	2. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.	4. When the frequency alignment fails, please repeat the above operations.

Gravity induction watch R/C frequency alignment	
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.	2. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.	4. When the frequency alignment fails, please repeat the above operations.

Gravity induction watch R/C frequency alignment	
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.	2. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.	4. When the frequency alignment fails, please repeat the above operations.

Gravity induction watch R/C frequency alignment	
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.	2. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.	4. When the frequency alignment fails, please repeat the above operations.

Gravity induction watch R/C frequency alignment	
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.	2. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.	4. When the frequency alignment fails, please repeat the above operations.