

INSTRUCTIONS

AGES 3+

Thank you for using our company's toy products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.


NOTE

This product is suitable for children 3 years old and above. After assembled / charged by adults, play with children again.
Please Use This Product Under The Supervision Of An Adult.
Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.


SPECIAL WARNING:

The used output power of charging plug should be 5V. Please do not use the quick-charging plug and quick-charging cable, so as to avoid the condition that the too quick current output during charging causes overheated battery charging and results in dangerous matters such as product burnout.

Product Configuration

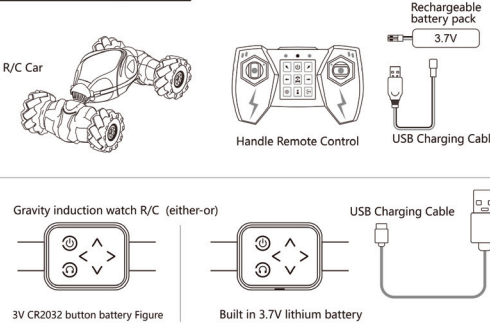


Car Battery Installation

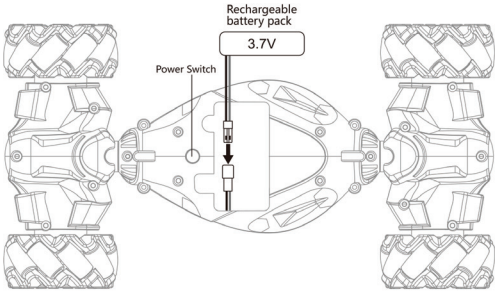


Battery installation
Open the body battery cover. Connect the rechargeable battery pack to the power socket, Close the battery cover.

Battery Charging Mode

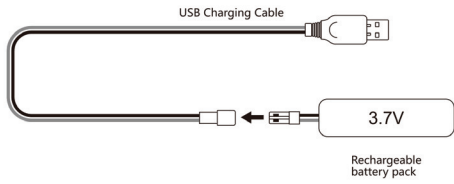


1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

R/C Function introduction and battery installation

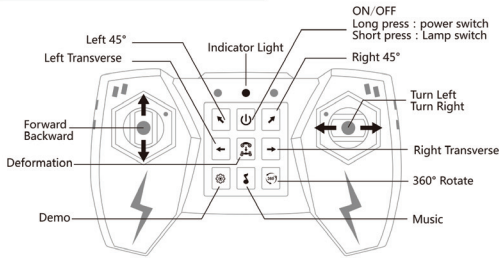


 
1. Press down the "Demo" key: the R/C car enters the automatic demonstration mode; press any key to exit from the automatic demonstration mode.
2. Press down the "Music" key: Press the first time to play the engine sound, Press the second time to play music, Press for the another music a third time, and Press the fourth time to close the music.
3. The effective control distance of the handle remote controller is about 40m.



Battery installation

Open the body battery cover and install 2x1.5V "AA" non-rechargeable batteries in the right polarity direction and cover the battery cover. (Battery not included)

 Function introduction of remote controller of gravity induction Watch

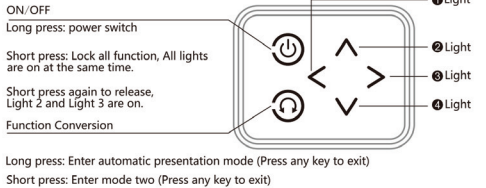

When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.

1. Can not close to the fire, avoid direct sunlight, high temperature and humidity or long-term in the car, to avoid short circuit, they
2. Do not play with the car and remote control car, remote control 1 back into the color box packaging, to avoid damage or deformation during transport or storage.
3. Remote control car with a damp cloth to gently wipe.


Battery chargers that use this toy must be regularly checked to prevent damage to the wires and other components and, if damaged, must be repaired for damage.

Symptoms	Cause Or Issue	Approach
Abnormal	When the function of the remote control is not finished, the full function of the function or power protection.	Re-open the power switch remote car
Vehicle out of control within remote control	1. There is not enough power in the remote control battery or rechargeable battery pack. 2. There may be sources of interference near the site. 3. Change the battery inside the remote control with a new battery or charge the rechargeable battery pack.	1. Replace the battery inside the remote control with a new battery or charge the rechargeable battery pack. 2. Change the venue. 3. Change the battery pack.
Not Drive	1. The remote control is not connected or disconnected. 2. The controller of the car does not load the remote control car switch is not turned on.	1. Turn on the control car and connect the battery into the remote control car correctly.

General Trouble Shooting

1. When playing remote control car indoors, please be careful not to damage furniture or glass.
2. Please play outside in a safe place. Do not play remote control car in the road and the crowd.
3. Play remote control car to keep thunder outdoors, should immediately stop playing as far as possible.
4. When the wheel is rotating, do not drop your hand near to avoid injury, but also not to be involved in hair, clothes and so on.
5. Do not drive the remote control car racing people.
6. Do not throw the remote control car, please keep it away from fire and high temperature.
7. When playing the remote control car, please keep it away from fire and high temperature.
8. The car use a complex electronic circuits and a large number of components, please do not disassemble or modify the circuit board.
9. Remote control car after playing with dirt, dust must be gently wiped with a damp cloth.
10. Do not put the toy in the water, it will damage the electronic components.
11. The handle remote control and watch remote control cannot be synchronized at the same time, if you want to replace the other handle remote control, you must turn off the already synchronized remote control, and then re-synchronize the frequency.
12. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
13. This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment.
14. This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
a) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To The Consumer

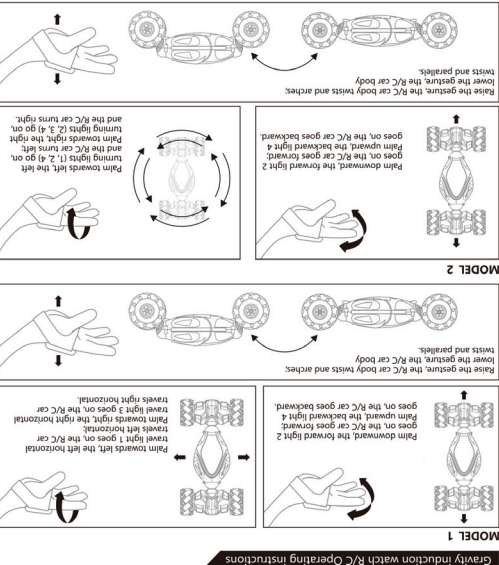


1. Long press the power switch of the gravity induction watch to start the frequency alignment.
2. When the frequency alignment succeeds, the light of the gravity induction watch and the light of the remote control will flash simultaneously.
3. If there is no operation after the connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.

Gravity Induction Watch R/C frequency alignment

Gravity sensing watch remote control battery description


- 2 Gravity Induction remote controls (Operate as shown below)
1. Built in 3.7V lithium battery 2. 3V CR2032 button battery

BUILT-IN BATTERY CHARGING

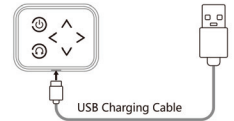

1. Connect the Gravity Induction R/C to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging


INSTALL THE BATTERY

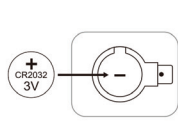

- Open the battery cover, Install 3V CR2032 button battery, Close the battery cover.

PRECAUTIONS FOR BATTERY USE

- Before playing please charge the new battery pack.
- The output power of charging plug is 5V;
- The higher the actual milliamperes of the rechargeable battery, the longer the charging time;
- Rechargeable batteries can only be charged under adult supervision;
- During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- First plug the battery pack plug in the charger, then plug the charger plugged in the socket.
- Take out and put in the battery according to the mark on the toy battery room;
- Non-rechargeable batteries cannot be charged;
- Use only the same or identical battery as recommended;
- Do not mix-use old and new batteries or different types of batteries;
- Batteries should be placed in the correct polarity;
- Remove the exhausted battery from the toy.
- Power terminals should not be short-circuited;
- The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

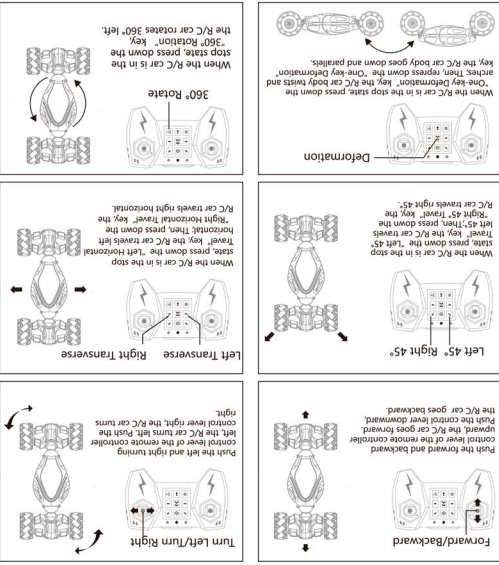

1. First, turn on the power switch of the automobile body. The light of the automobile body flashes, control the frequency alignment, and start frequency alignment.
2. When the frequency alignment succeeds, the light of the automobile body and the light of the remote control will flash simultaneously.
3. If there is no operation after the connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.

Handle Remote Control frequency alignment