 


memorex®

11" Tablet

MTAB_PRO_2700

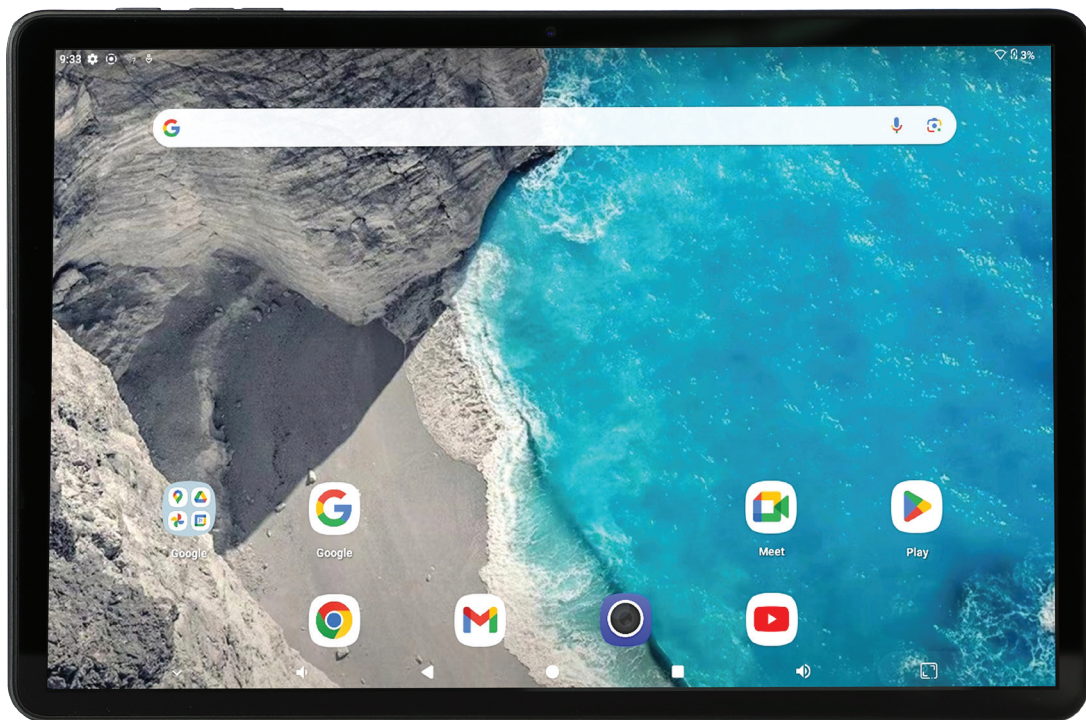

User Manual

Read me first

- Please read this manual before operating your Tablet, and keep it for future reference.
- The descriptions in this manual are based on the default settings.
- Images and screenshots used in this manual may differ from the actual product.
- Available features and additional services may vary by device, software or service provider.
- Our company is not liable for performance issues caused by third-party applications.

Contents

Assembling	1
Unpacking	1
Charging the battery	1
Installing the memory card	1
Getting Started	2
Turning Tablet on, Restart and Off	2
Switching to airplane mode	2
Home screen	2
Taskbar	2
Notification panel	3
Customizing your device	4
Auto rotation	4
Wallpaper & style	4
Display size	4
Lock & unlock the screen	4
Manage applications	5
Language and input method	5
Virtual Keyreturn	5
Privacy security	6
Application Notification Permissions	6
Security	7
Reset tablet	7
Communication	8
Email	9
Google Account	9
Web	10
Browser	11
Entertainment	11
Camera	11
Tools	12
Calendar	12
Alarm Clock	12
File Manager	12
Recorder	12
Calculator	12
Find Devices	12
Safety	13
Connectivity	13
USB Connection	13
Wi-Fi	13
Bluetooth	13
Safety Precautions	14
Data security information	14
Equipment safety	14
Care & Maintenance	14
Warnings	15

Assembling

Unpacking

Check your product box for the following items.

- Tablet
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

Charging the battery

Before using the device for the first time, you must charge the battery.

1. You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
2. Battery full icon is shown when finished if your device is off.

Warning:

Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

Installing the memory card

To store additional multimedia files, you need insert a memory card.

1. In the lower left corner of the prototype, remove the back cover of the phone battery.
2. According to the instructions next to the card slot, install a functioning SD card & T card above the SIM 1 card slot, ensuring that the gold contacts of the card are facing the device..
3. Push the SD or T card into the slot.
4. Check if the phone displays an SD or T card icon.

Notice: Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

Getting Started

When you turn on or off the device, you can see Power by Android™ on the device interface, which is about the device's operating system.

Turn on devices, restart and shut down

To turn on your device when your phone is turned off, press and hold the power key for about 5 seconds, then release your finger when the screen lights up [make sure your phone has enough battery.

To restart the device, hold down the power button for about 1 second, and then select Restart. Alternatively, pull down the status bar to the bottom, click the close button in the bottom right corner of the page, select the close button, and then click restart.

To turn off the device, hold down the power button for about 1 second, and then select Turn Off. Alternatively, pull down the status bar to the bottom, click the close button in the bottom right corner of the page, select the close button, and then click shut down.

Switching to airplane mode

To use only the device's non-network services, switch to airplane mode.

Follow the instructions below to turn on Airplane Mode:

1. From the list of applications, tap Settings Network and Internet

Airplane Mode to turn on Airplane Mode.

2. Drop down the status bar Airplane Mode shortcut button and click to open Airplane Mode

Home screen

The Home screen has multiple panels. Scroll left or right to the panel on the home screen, where you can view indicator icons, widgets, shortcuts to apps, and other items.

Long press the screen, click the wallpaper and style in the pop-up window, and change the dark theme or icon with a dark theme.

Taskbar

The taskbar appears at the top of the screen. It displays commonly used option buttons, battery level indicator, current time, and other indicator icons.

Indicator icon

Icon	Definition	Icon	Definition
	Time display		Plug in your headphones
	Wi-Fi connection		Power-saving mode
	Airplane mode is activated		New text or MMS messages
	Bluetooth connection		Video calling is turned on
	Do not disturb		Screen recording
	Download the data		Do not disturb
	Connected to your PC		Battery level
	The alarm is activated		Charging in progress

Notification panel

There is a horizontal sliding box above the notification bar, for the brightness adjustment of the prototype screen,  slide to the left, the brightness of the prototype is reduced, slide to the right, the brightness of the prototype increases, (adjust the brightness according to your own needs, you can also set to automatically adjust the brightness according to the environmental conditions, Note: the brightness increases. The power consumption will theoretically increase)

Drop down to open the top of the notification bar, display 11 shortcut switches commonly used by users, support click switch, and long press to enter the corresponding settings. If you continue to drop down the notification bar to show all the quick toggles;

Quick Toggle displays an Edit button  in the lower-left corner of the page, click the Add Remove Custom Shortcut switch, or drag to sort.

Quick Toggle will display a shutdown button in the middle of the page, click to quickly make an emergency call, shut down, restart operation. 

Quick Toggle will display a shutdown button in the lower right corner of the page, click to quickly enter the settings interface. 

Tap the icon to activate or disable wireless connectivity and other settings.

Wi-Fi: Click WIFI to quickly open WIFI, and change or perform other operations on the connected Wifi.

Bluetooth: Activates or disables a Bluetooth connection.

Do Not Disturb: Activate or disable Do Not Disturb mode to receive notifications only from important contacts and important apps.

Torch: Activates or disables the flashlight.

Auto-Rotate: Activates or disables auto-rotate.

Battery Saver: Activates or disables power saving mode.

Aeroplane mode: Turn off the wireless signal and telephone communication functions of the Tablet, such as WIFI, data stream, mobile signal reception and transmission, Bluetooth, etc. When the Tablet is turned on, you can continue to use other functions, such as viewing the phone book, enjoying articles, movies, playing games, calculators, etc. (applications that do not require data or wifi functions).

Night Light: Click to turn night mode on and off.

 
Scan QR code: Click to quickly enter the scanning QR code mode.

Screen record: Click to record the screen as required (you can select to record audio and display the touch screen position)

Nearby Share: Click to turn on the nearby sharing function (WLAN and Bluetooth need to be turned on temporarily when this function is turned on)

Quickly stop applications in the service.

You can complete the workflow through the drawer notification bar to stop the application with continuous foreground services (as shown in the following figure).

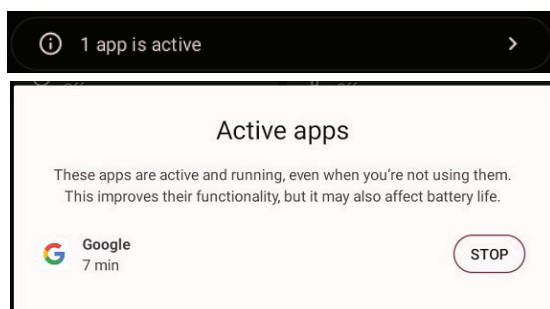

Customize your device

To customize your device based on your preferences, tap Settings in the app list or notification panel.

 
Auto rotation

The interface will also rotate automatically if you rotate your device while using certain features. To prevent the interface from spinning, open the notification panel, select **Rotate Screen Automatically**, and tap **To Close**.

Or Set → the Display → Advanced → Auto Rotate Screen toggle.

Wallpaper & style

You can press and hold the blank space of the screen to pop up the wallpaper and style settings pop-up window, update the wallpaper, and switch between dark themes or icons with themes.

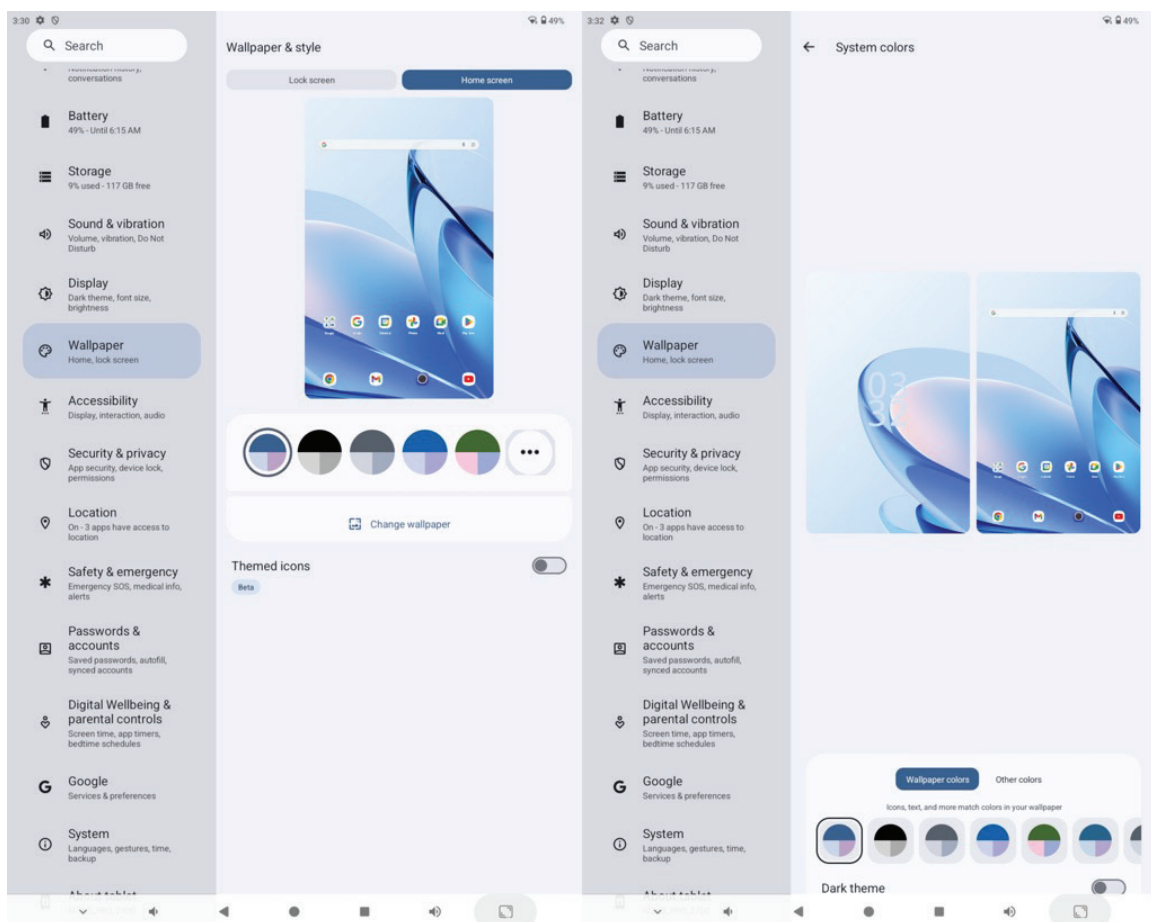

Display size

You can set it to Display → Advanced → font size.

You can change the font size by sliding the lower square point as needed.

Lock and unlock the screen

Swipe to your lock screen.

To lock the screen manually, press the Power key.

Manage Applications

To manage the apps installed on your device, tap **Settings** → **apps**.

1. To uninstall an app, select an item, press and hold the app icon, pop up app info, click **Uninstall**, and click **OK** to confirm.
2. To stop or change an app's settings, tap the → **Settings** → **app** → to locate the app and → **select the appropriate option**.

Language and input method:

3. Language and input method:

 
You can modify the system language and input method settings according to your usage habits (the path is as follows: Settings - System - Language and input method application language)

4. App language (as shown in the right figure):

In many cases, multilingual users will set their system language to a certain language (such as English) but want to choose another language (such as Dutch, Chinese, or Hindi) for a specific application. To help applications provide a better experience for these users, Android 14 introduces the following functions for applications that support multiple languages:

In this centralized location, the user can select the preferred language for each application (the path is Settings-System-Language and Input Method Application Language-Application Language).

5. Applications that do not support multiple languages are not affected by these changes.

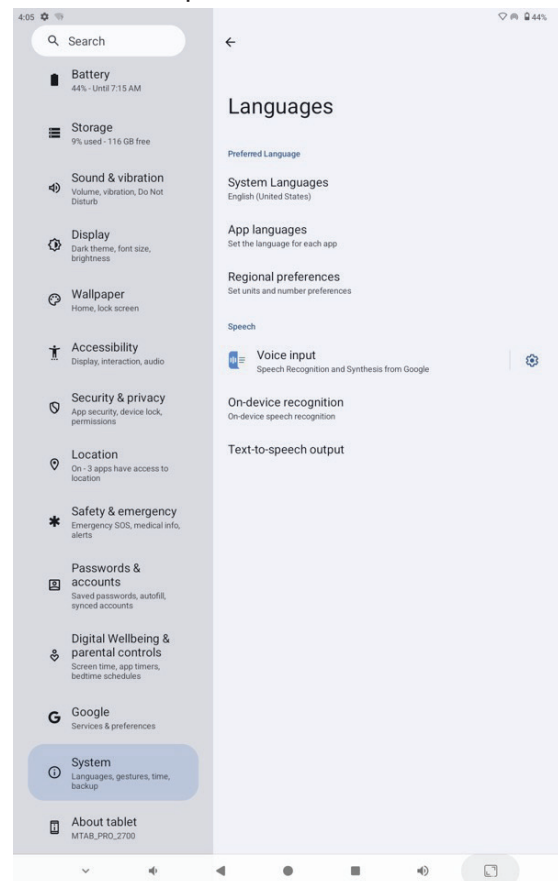

Virtual key return

Return

You just need to double-click the "Back" button  to return to the previous page or the previous operation interface.

Quickly return to the main interface

You only need the stand-alone home button  to return to the device's main interface.

Switch application

All you need to do is double-click the "Recent" button  and swipe left and right to switch apps.

Privacy security

Privacy security

To protect your privacy, when you open APK for the first time, the relevant permissions that APK will call will pop up. You can choose to allow only when using the application, allow only at this time, and not allow to set these three options.

In addition, you can directly check the usage of various permissions in the Settings Privacy Information Center for the past 24 hours at most. The usage of permissions, including system applications, can be seen here in minutes.

Hide sensitive content from clipboard

 
If your app allows users to copy sensitive content (such as passwords or credit card information) to the clipboard, you can prevent sensitive content from appearing in the content preview.

Video and picture privacy protection

You want to share a group of photos or videos with your friends in some chat software, but you don't want to grant the software access to all photos or videos on your phone. At this time, the newly added photo selector can manually select the photo or video content you want to share and only grant access to the photo or video you select to the chat application to minimize the risk of privacy disclosure.

Application Notification Permissions

The user must manually approve any APP that wants to send notifications.

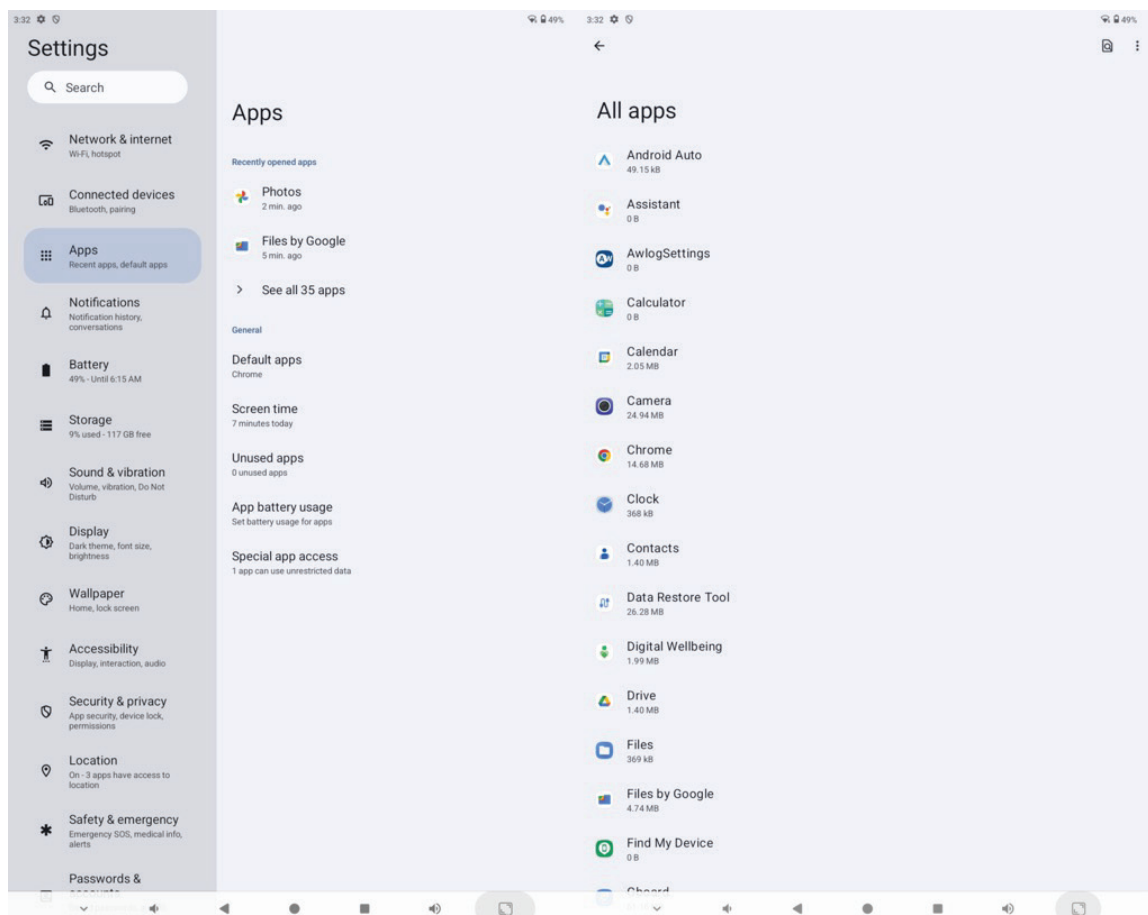

Security

You can protect your device and data by setting up a screen lock or encrypting your phone.

Set the screen lock

To set a screen lock, tap **Set** **Secure** **Screen Lock** from the list of apps.

- **None:** Disables screen lock.
- **Swipe:** Swipe to unlock the screen.
- **Pattern:** Draw the pattern you want to unlock. Follow the instructions to draw the lock mode. When prompted, draw a pattern to unlock the screen.
- **PIN:** Enter the numeric PIN you want to unlock. When prompted, enter a PIN to unlock the screen.
- **Password:** Enter the password to unlock. When prompted, enter the password to unlock the screen.

The screen times out

Select **Settings** **Display** **Advanced** **Screen timeout** from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Reset your tablet

You can reset the system and desktop settings to their original values (please select as needed) by following these steps:

1. Set **the system** from the list of **applications** **to reset options**.
2. Reset WLAN, tablet Data, and Bluetooth Settings: This action resets all network settings, including WLAN, Mobile Data, Bluetooth.
3. Reset app preferences: This will reset app preferences and you won't lose any app data.
4. Erase all data (factory reset): This action will erase **all data in your phone's internal storage space**, including your Google Account, system and app data and settings, downloaded apps, music, photos, and other user data, so choose carefully.

Communication

Tablet

1. Volume

You can adjust the volume in different situations (media volume, call volume, ring and notification volume, alarm volume). **Set the → sound →** to adjust as needed, then slide the volume progress bar to the appropriate position (Note: Too much volume affects yourself and others).

2. Dial pad touch-tone

Set → the sound → dial keypad tone.

You can **turn** the dial pad touch tone on or off.

3. Screen lock tone

Set the sound → → screen lock tone.

You can turn the screen lock tone on or off.

4. Charging sounds and vibrations

Set sound → → charge tone and vibration.

You can turn the charging tone and vibration on or off.

5. Touch tone

Set sound → → Touch tone.

You can turn the touch tone on or off.

6. Touch the vibration

Set sound → → touch vibration.

You can turn on or off tactile feedback for actions such as clicking, pressing keys, etc.

7. Voicemail

With the Call Forwarding Network service, you can direct incoming calls to voicemail.

Phone → Settings → Voicemail Tap Services in Advanced Settings to set up your voicemail service provider.

 
Tap Settings in **Advanced Settings** to set your voicemail number.

Email

To receive and send messages, you must have the Remote Mailbox service. This service may be provided by a service provider. Your device complies with the applicable Internet standards for POP3/IMAP/Switching.

Before sending or receiving mail on your device, you need to set up your email account and define your email settings correctly. You can define multiple mailboxes.

Set up your email

1. Click **email** from the application list
2. Link network.
3. You need to select the corresponding email address according to the actual situation, enter the account number and password, and click **Next** until it is completed.
4. If you need to add another email account, please click the Add other email address option in the middle of the screen  [Add another email address](#) . Then, you need to select the corresponding email address according to the actual situation, enter the account number and password, click Next, and wait until it is completed.
5. Click Go to Email to get started. 

Once you've finished setting up your email account, the email will be downloaded to your device. If you've created more than two accounts, you can switch between email accounts. Select the account picture in the upper-right corner of the screen, and then select the account name from which you want to retrieve messages.

Delete your email account

Click >**Settings users and**  **accounts** in the list of applications  Click the email address click the  button

Create and send emails

6. Open the **Email** application.
7. Click the Write to Compare button.
8. **In the To field**, manually enter the recipient's email address, separated by commas.
Add more **recipients by clicking Cc/Bcc**.
9. Click  to select the attachment you want to insert.
10. Enter a subject and text.
11. Click the **Send** button  to send the email.

Google Account

You can add your Google Account to a series of operations using Google-related services, such as setting up Google applications.

1. You need to open a network connection.
2. Click >**Settings - Google** to add a **Google Account**.
3. You can add your Google Account for a series of operations using Google-related services, such as setting up Google applications.
4. After successfully logging in, you can manage your account and use related services.

Web

Browser

Tap browser in the list of applications to access the web.

Browser web pages

1. **Select Browser** to launch the specified home page.
2. To access a specific Web page, select the URL Entry field, enter the page's URL, and then choose **Go**.

Set to homepage

3. Click the Options button in the upper right corner .
4. Select  **Settings**  **Advanced Home Page**.
5. Enter the URL of the desired page.

Add bookmarks

While browsing the website, click    to save the bookmark and easily access it later.

View bookmarks and history

Click the  options button on the top right corner  and select "**Bookmarks**" to open the bookmark list and recent history. Click a bookmark or any entry to display the webpage.

Customize your browser

To adjust your browser settings, click the Options button in the upper-right corner  and then select **Settings**.

Entertainment

Camera

With the camera feature, you can take photos and take videos.

Take a photo

1. Open the list of applications and select **Camera**.
2. Before taking a photo, you need to know some settings.
Place two fingers on the screen and spread them apart, or bring the device closer to zoom in or out.
3. Point the lens at the subject and tap  to take a picture. The photos are automatically saved to the DCIM folder.
4. Select the image viewer icon in the lower-left corner to view the picture.

Icon	Definition
	Set up
	Change to video mode
	Photograph
	Tap to switch between front and rear camera lenses
	Gallery preview
	Flash on
	Flash auto
	Flash off
	Recording time
	Pause recording
	End the recording
	Capture images in a video

Record a video

1. Open the list of applications and select **Camera**. Click  to change to video mode.
2. Click  **Start Recording**. The length of the video recording is limited by the space available on the storage.
3. Tap  to stop recording. The video is automatically saved to the DCIM folder.
4. After recording the video, select the image viewer icon at the bottom left corner to view the recorded video.

QR

The convenient button for scanning QR code is added. Users can turn on the scanning function in the camera to scan QR code faster.

Grant partial access to photos and videos

Android 14 introduces Selected Photos Access, which allows users to grant apps access to specific images and videos in their library, rather than granting access to all media of a given type.

If you don't use the photo picker yet, we recommend implementing it in your app to provide a consistent experience for selecting images and videos that also enhances user privacy without having to request any storage permissions.

Tools

Calendar

With the calendar feature, you can review your calendar by day, week, or month, create events, and set alarms as reminders if necessary.

To access calendars, tap Calendars in the list of apps.

1. To create an event, click the Add button in the lower-right corner, and then select **New Event**
 - Fill in the fields and set information like title, date, time, and location notifications.
 - When you're done, choose **Save**.
2. You can view the calendar in different rental views, days, weeks, months, etc.
3. To delete an entry, tap the event to open it ➡, tap the options button in the upper-right corner, then select **Delete** ➡ select **OK**.

Alarm clock

From the list of apps, tap **Clock**, and then select .

1. Tap  to add an alarm.

Tap the numeric keypad to set the alarm time, then select **AM** or **PM**, when you're done, click **OK**.

Tap time to change the alarm time.
2. Set the recurrence, alarm ringtone, vibrate and edit the tag message, click **OK** when done.
3. Tap "**Close**" to close the alarm, then tap "**Snooze**", and then the alarm will stop ringing for a few minutes.
4. Tap the arrow button for an alarm to expand , and then click  to delete the alarm.

File Manager

Many features of the device, such as downloaded files, pictures, videos, audio, documents, and other files and applications, all use memory to store data. With the File Manager, you can store and browse files and folders in your device or edit, move, and copy files. You can also send files to compatible devices.

Note:

1. Some file formats are not supported depending on the device's software.
2. Some files may not play properly, depending on how they are encoded.

Recorder

With Audio Recorder, you can record voice memos. From the list of applications, tap Audio Recorder.

1. To record a voice memo, tap .
2. To pause the recording, tap .
3. To end the recording, tap .
4. To listen to the recording you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides basic arithmetic functions. Click the Virtual Numbers and Calculate keys to perform the calculation.

Find Devices

After logging in to the Google Account, you can associate your device and run functions such as searching your device.

Safety

Personal safety

Quickly connect to the correct help through emergency sharing, security checks, and other functions.

1. **Add emergency contacts** (they will be used for personal security functions. In order to help in an emergency, people can view and call these contacts without unlocking the device)
2. **Add medical information** (to provide help in an emergency, users can view this information without unlocking the device), including: Name, Blood type, Allergy, Medications, Address, Medical notes, Organ donor, etc.

Note: The privacy clause may be involved. This information is only saved on your device.

Connectivity

USB Connection

You can connect your device to your PC and use it as a removable disk, allowing you to access the file directory.

1. If you want to transfer files from your device or transfer files to your device, insert the memory card into your device.
2. Connect your device to your PC using a USB cable.
3. Open the notification panel and **transfer files** using USB.
4. Open the folder to view the files.
5. Copy files from PC to device memory or memory card.

Wi-Fi

With Wi-Fi, you can connect to a wireless network or other network device when an access point or wireless hotspot is available.

Activate the wireless network feature

From the list of applications, tap **Set up** ➔ **Internet and Internet**. Open it **Wi-Fi** Function.

Find and connect to a wireless network

6. When the Wi-Fi feature is activated, the device automatically searches for an available Wi-Fi connection.
7. Select a network.
8. Enter the password for the network, if necessary.
9. Choose **Connect**.

Bluetooth

With Bluetooth, you can share music, pictures, videos, contacts with another phone. You can use Bluetooth headset phone or listen to music.

Activate the Bluetooth function

1. From the list of apps, tap **Settings** ➔ **connected device** ➔ **to pair with the new device new settings**.

Scan and connect to other Bluetooth devices

10. The device automatically searches for other Bluetooth devices.
11. Select a device and pair it.

Safety precautions

Data security information

To enhance user privacy, Android 14 increases the number of places where the system shows the information you have declared in the Play Console form. Currently, users can view this information in the data safety section of your app's listing in Google Play.

Equipment safety

Read these simple guides before using your device. Not following them can be dangerous or illegal.

Plane

Turn off the device while on the aircraft and follow the protocol. Wireless devices can cause interference to the aircraft.

Vehicle

Never use your device while driving. Keep it in a safe place.

Electronics

In some cases, your device may interfere with other devices.

Potentially explosive atmospheres

Turn off the device in any area with a potentially explosive atmosphere and follow all signs and instructions. Sparks in these areas can cause explosions or fires, resulting in personal injury or even death.

Pacemakers and other medical devices

Pacemaker manufacturers recommend maintaining a space of at least 8 inches between wireless devices and pacemakers to avoid potential interference with pacemakers.

The operation of any radio-transmitting device, including wireless telephones, may interfere with the functionality of inadequately protected medical devices. Consult with your doctor or medical device manufacturer to determine if your devices are adequately shielded from external RF energy or if you have any problems.

When regulations issued in these areas instruct you to turn off devices in health care facilities, do so.

Operating environment

Read their user guide for detailed safety instructions when connecting to other devices. Do not connect incompatible products.

Do not place the device in the airbag spread area.

Use the device only in the normal working locations described in the product documentation.

Always turn off the device when prohibited or may cause interference and danger.

The region where the regulation has been published

When any regulations issued in these areas instruct you to do so, turn off your device.

Care & maintenance

- Use only accessories approved by the manufacturer. The use of general accessories may shorten the life of the equipment or cause it to malfunction.
- Keep the device dry. Humidity and all types of liquids can damage device components or electronic circuits.
- Do not use or store your device in dusty, dirty places.
- Do not store your device in a hot or cold place.
- Do not store the device near a magnetic field.
- Do not store your device with metal items such as coins, keys, and necklaces.
- Do not discard or cause damage to the device.

Warnings

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.