

正反面印刷，风琴折，90*120mm

Smart Remote Control Fishing Bait Boat

"FISH" IS A LIFE OF MY LIFE

Accessories Introduction

- ♦Motor
turn radiusturn radius 0.8-1.0M
- ♦Night Light
the night light can help to fish-men to distinguish the direction and seduce the fish
- ♦Remote Controller
remote control distance
remote control distance above 300M
- ♦Boat Body
direction: forward, back, right and left turn, release the bait control flexibly and precisely , can resist the wave about 3-4 level."

Features Introduction:

- ♦Best Quality
The boat adopts the ABS which is without the poison and smell, the ABS is with the strong anti-resistant and abrasion resistance, the boat color can be kept a long time. It is easy to clean as the ABS can beats the chemical pollution.
- ♦Professional Digital Full Automatic FM Device
It can solve the phenomenon: interference of a few boats sailing; short distance of remote controlling;out of control to pick up the boat.

"FISH" IS A LIFE OF MY LIFE

- ♦Resistant the Strong Wind and Wave
Two motors design, it is with the waterproof function. It can stop the the boat from the water, the boat can run well and normally under 5 class wind.
- ♦Long Time Lasting
Simple operation, stability is strong, change the speed and direction freely.

♦ Introduction to hull

"FISH" IS A LIFE OF MY LIFE

Remote Controller Details

Function	Button	Set up	Precautions
Power on /off	Long press the power button	1. Remote control power on: long press the power button to turn on, long press the power button again to turn off,	1. The remote control battery cannot be installed upside down. 2. Charge the ship's battery firstReuse of electricity.
GPS		When this icon appears on the display, it indicates that the GPS signal has been found. It usually appears about 30 seconds after powering on.	The origin setting can only be used when the GPS icon appears.
Origin Setting	Press and hold the C key	After searching for GPS signals, long press the C key to set the shore origin. The origin is set to allow the ship to automatically return after losing connection or low battery.	Before each use or when changing the use environment, you must set the origin on the shore. If you do not set the origin, the remote control will keep beeping and will not automatically return.
Return to origin	Press and hold the C key	Press the C key, the ship will automatically return to the origin, and the arrow will appear on the display.	The origin must be set before the origin return function can be used.
Fishing spot setting	Long press the OK button	When there is a GPS signal, press and hold the OK button to set the target point. After the setting is successful, the remote control will beep to prompt.	The fishing spot can only be located when there is a GPS signal
Navigation fishing spot	Click OK	After setting the fishing spot, click OK and the boat will automatically go to the set fishing spot.	The error range of GPS automatic driving to the fishing spot is about 3 meters

Boat Light Control	Up key ▲	Press ▲ key once: on-flash-off, 3 modes switching.	If it is successfully turned on, the remote control will beep once.
Cabin control	Left button ◀	Press the button to open the silo tipping bucket.	The remote control will beep once when the silo is opened.
Cruise control	Directional joystick up	Push the joystick up and hold it for 3 seconds. The remote control will make a sound and enter cruise control. Push the joystick back to cancel.	When cruising, move the joystick left or right to change the direction of the boat.
Exit current state	Joystick down	Pressing the joystick downward can cancel the current positioning cruise, return home, and other functions.	Exit the current operation and start a new job
Clearing the origin and positioning points	Right button ▶	Long press the right button for more than 3 seconds to clear the origin and fishing point, and then reset the fishing point	When the distance display changes to 0, it proves that the positioning point has been successfully cleared
Boat and remote control pairing	C key + Power key	Long press the c key, then press the power button to turn on the device and enter the pairing mode. Then turn on the boat switch and the pairing will be successful after 2 seconds.	If you find that you cannot control the boat during use, you can add the code according to the instructions.
Low battery lost connection		When the boat and the remote controller reach the bottom (it is expected to run for about 10 minutes, 30 seconds later), the boat will automatically return to the origin and will not stop until it returns to the origin.	The premise is that the setting is the origin
Lost connection weak signal		When the boat detects a weak signal and loses control (about 30 seconds), it will automatically return to the origin and will not stop until it returns to the origin.	The premise is that the setting is the origin

Ergonomic remote control handle
Streamline boat body

- ♦running is more stable
- ♦Resistance to the wind and wave is more strong

Instruction to the battery usage and charging

- ♦ Main Battery (Standard)
- ♦ The power interface is connected with the battery
- ♦ Power charge

Maintenance

- ♦Controller
please kindly take out the battery if there is a long time for leaving unused.
- ♦Motor
Check the motor for debris after each use.
- ♦Boat Body
1.please keep dry and clean for the boat after using the boat.
2.please take out the battery and keep well if do not use the boat.
3.please do not put the boat with the corrosive liquid.
4.Do not close to the high temperature target.
5.please put the boat into the bag to keep the boat from the dusty if do not use the boat.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.