

Please read the instruction carefully before using it.

Note:

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help to achieve the required distance.


Specification:

Max output power:	10W	Frequency response:	100Hz-18KHz
Distortion:	≥80db	Work temperature:	-10℃-45℃
Charging voltage:	DC 5V 1A	Amplify time:	6-8 hours
Music-play time:	6-8 hours	Charging time:	3-4 hours

Features:

- 1.SHIDU patented appearance;
2. Stylish, ergonomic and comfortable design;
- 3.10W power output;
- 4.Support TF card and USB flash drive music playback;
5. Support Bluetooth 5.0;
- 6.Support Recording.
- 7.Support microphone ECHO adjustment

Function Illustration:

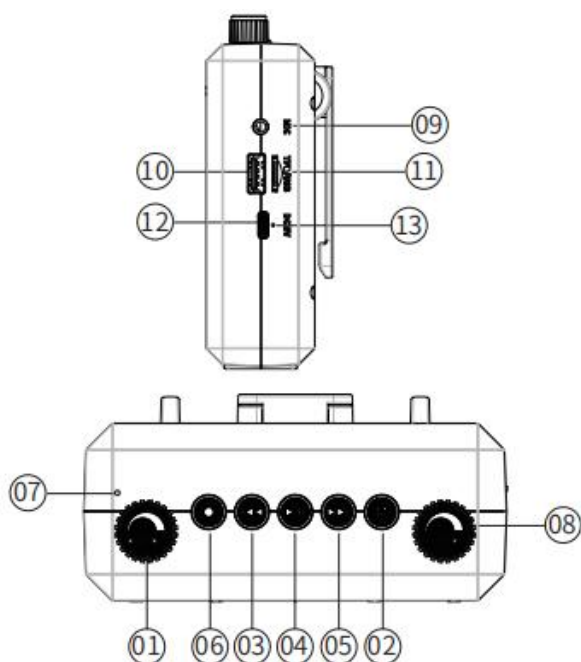

1. Power switch and volume control:

Turn the switch knob to the "ON" direction. When you hear a "click" sound, the blue indicator light will turn on, indicating that the device has been turned on; Simultaneously turning to the "ON" direction increases the volume, while turning to the "OFF" direction decreases the volume; Turn the switch knob to the "OFF" position. When you hear a "click" sound, the blue indicator light goes out, indicating that the machine is turned off. |

2.Mode:

Short press the "M" button to select the following modes: TF card mode, USB flash drive mode, Bluetooth mode. When playing music on TF card/USB flash drive, long press it for 3 seconds to switch to single song repeat, long press it again to switch back to all repeat.

3.Previous: Short press to play previous song; long press to fast rewind.

4.Play/ pause: Short press it to pause, and press again to play the music.

5.Next: Short press to play next song; long press to fast forward

6.Recording:

A. Plug in the wired microphone to the "MIC" port, insert an USB flash drive or TF card, short press "●" to start recording, short press "●" again to stop recording, it will save and play the present recording files automatically.

B. Play recording :Insert an USB flash drive or TF card with recording files, long press "●" to play recording. It will play the last recording by default, short press "◀" or "▶" to select the recordings.

Note: in recording mode, the wired microphone must be plugged in for proper recording.

7. MP3 mode indicator

8. Microphone ECHO

9. Microphone Jack: Insert the wired microphone into this socket to amplify voice.

10.USB port: Insert the USB flash drive to play audio, the maximum capacity is 32GB.

11.TF card slot: Insert the TF card to play audio, the maximum capacity is 32GB.

12. DC 5V charging port :

Please charge through Type-C charging cable with DC 5V output adaptor. The red indicator light will keep on when charging, and it will go out after fully charged. Unplug the

charger as soon as it is fully charged.(the charging time is about 3~4 hours)


Warning: do not connect the laptop's USB port to charge the speaker.

13.Charging indicator light.

Bluetooth Instruction

- 1.While powered on, short press “M” button to switch to Bluetooth mode. A voice will prompt “Bluetooth is waiting for connection" indicating that the speaker is in Bluetooth pairing mode .
- 2.Turn on your device's Bluetooth function,then search for “M802” and select it to pair. Bluetooth pairing is completed with a voice prompt “Bluetooth is connected”.

When playing music, please keep the speaker close to the device to maintain a stable connection.

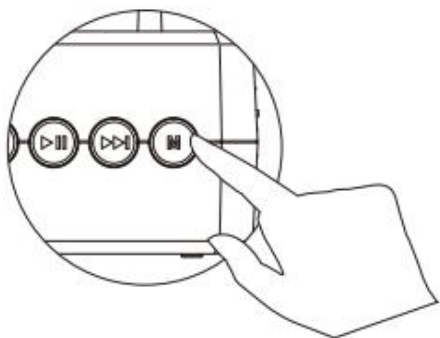

Trouble shooting:

1. Turn on the power switch, but the amplifier has no sound.
 - A. The blue indicator light is off: it means low power and you should charge the amplifier.
 - B. Turn up the volume on both the voice amplifier and the microphone.
2. Talk to the wireless microphone, but the amplifier has no sound.(for wireless version only)
 - A. Please confirm both voice amplifier and microphone are powered on.

B. Confirm the wireless microphone has been paired with the amplifier successfully .

Please pair the microphone manually again if necessary.

3. The voice amplifier has distinct howling.

- A. Make sure the microphone is not close to the amplifier;
- B. You may need to turn down the volume properly to avoid howling.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.