

## Quick User Manual



### Part Name



1

- 1 LED Light
- 2 Receiver
- 3 LCD Screen
- 4 HOME KEY
- 5 Backspace key
- 6 Menu
- 7 Answer button
- 8 Hang up button
- 9 MIC
- 10 Direction key
- 11 Enter Key
- 12 Numeric key
- 13 Speak
- 14 SOS key
- 15 Headphone jack
- 16 Charging /USB port

[Right view]



[Reverseside]



[Left view]



2

- 1 Power key
- 2 Submicrophone
- 3 Volume button
- 4 Volume button
- 5 PTT button

## Wireless terminal Setting

[how to insert battery and SIM card ]  
radio USES a microSIM card.


① open the battery cover on the  
back of the wireless terminal.



② Remove the battery



③ Insert the SIM card into the SIM socket.

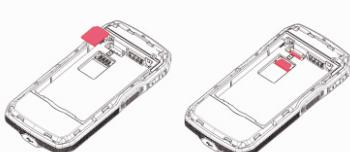


④ Put the battery and battery cover back in place.

Warning: make sure the battery cover is tightly  
sealed to maintain the waterproof performance  
of the wireless device

3

## Battery charging

① Remove the USB charging cover on the underside of the  
wireless device and connect the included micro-USB cable.

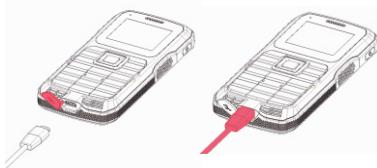

② connect the other end of the USB cable to the supplied AC  
adapter and then plug the AC adapter into the connector.  
Please put it in to t.

Warning: use the supplied AC adapter and USB cable.  
Using or modifying an incompatible charger may  
cause the device to fail. In this case, the warranty may  
not apply.

Warning: make sure that the micro-USB cable is  
correctly connected. After charging, make sure that the  
charging cover is tightly sealed to maintain the  
waterproof performance of the wireless device.

4

## Use wireless terminal

### [turn on/off]

#### Turn on the body

① Press and hold the power key until you see the screen.

Turn off the main unit

① Press and hold the power key until the power confirmation screen appears.

② Select exit to turn off your wireless terminal.

### [standby state recovery/transition]

I'll get you out of standby.

① To restore it, press the power key.

I'm going to move it to standby.

① To go to standby, press the power key.

## Guarantee of product

In the event that the product fails during the period specified in this product warranty, even though it has been used normally in accordance with the instructions, etc.. we will provide free repair. Please refer to these instructions before using the purchased product

### ■ Please confirm before use

If the internal battery discharges during the first operation, the device may not turn on. This is not a defect of the product

Depending on the situation, points that do not change in red, white, etc., appear on the liquid crystal screen of the purchased product. I have a problem. This is an unavoidable phenomenon in the manufacturing process of liquid crystal screen and is not a defect. The battery life depends on the usage environment of the product. And the batteries are consumables, and over time the usage time decreases with each step

■ Guarantee of product

In the event of product failure, we will provide free repair.

■ Product warranty period

The warranty period is one year from the date of purchase. If we cannot confirm the date of purchase, we will calculate from the date six months have passed since the date of manufacture.

■ Even during the product warranty period, it is excluded from free repair in the following cases.

intentional, negligent or careless use of the user (careless handling, drop, impact, damage, immersion, unreasonable action, etc.). In the event that the structure, performance, or function of a product is arbitrarily modified, altered, or arbitrarily disassembled by persons other than the company or the engineers delegated by the company. Replacement of consumable parts with reduced performance after normal use. In case of product failure due to natural disaster (fire, salt damage, earthquake, wind and flood damage, lightning strike, etc.). Failure due to an abnormal power supply or faulty connected equipment. Failure or damage that does not comply with the precautions in the instruction manual

Failure or damage that occurs during use in inappropriate use/storage environments, high temperature and humidity, storage in a closed car in summer, etc.)

Failure or damage caused by the user's arbitrary operation of software or hardware (routing, etc. failure occurs when installing and using an application not guaranteed by our company

In the case that the date of purchase, the name of the customer, and the shop name are not written on the warranty certificate presented at the time of our repair, or it has been written

■ Precautions when requesting repair

If the product fails, be sure to back up the software and data installed by the user before requesting repair. We are not responsible for any changes or deletion of the software and data that occur during the repair process and the product may be in its original state upon completion of the repair. Before requesting a product repair, remove any hardware, software, features, parts, options, selections and other attachments that are not attached to or installed on the product at the time of purchase. If you do not remove it, we will not be liable for any loss or damage.

• We do not guarantee damage caused by accessories not included in the product, damage to the surface, damage from external shocks, use of software, data or separable storage media.

• In the event that repairs cannot be made due to the suspension of supply of parts, etc... we may ask you to switch to a different product with the same function.

■ Send repaired goods

In the event of a product failure, regardless of the warranty period, the defective product must be sent to the seller first. The shipping cost will be borne by the sender.

■ Guarantee for replacement

The warranty period for replacement products is 3 months after the replacement is shipped. However, the remaining warranty period of the original product is 3 months or more if so, that warranty period shall be the replacement warranty period.

9

Product warranty

This product warranty is based on the product warranty policy established by mobile createco., LTD., and promises free repair of the product.

Warranty period: one year from the date of purchase

Date of purchase	years	month	day	store name, address and telephone number
Your name.				Please be sure to write your name (seal) and date of purchase (delivery date) to the dealer.
Your address.				
Telephone codenumber ( ) -				

\* documents will not be reissued. Please keep it safe

Mobile creation corporation.  
〒870-0823 No. 60, 2-Ding Mu 5-Pan, East Avenue, Oita City, Oita Prefecture

#### FCC Regulatory Conformance

##### RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types IM-530 (FCC ID: 2BHGN-IM-530) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.14 W/kg and when properly worn on the body is 1.16 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

11

NOTE: Unauthorized modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

12

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.