


100*75MM 4P

NCAA Championships Speaker

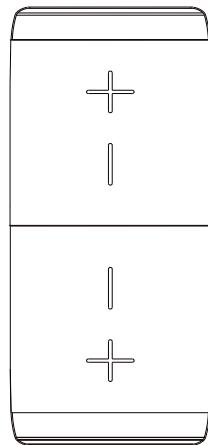

USER MANUAL

INSTALLATION / USE

1. BEFORE USING FOR THE FIRST TIME

-Unpack the appliance and its various components and check that each part is in good condition.

2. CHARGING THE SPEAKER

Fully charge the battery before using the device for the first time or when you have not used it for some time.
- Connect the USB end to an adapter or computer, then connect the USB-C end to the charging port on the device.

- When charging is complete, disconnect the USB-C end from the device first, then disconnect the USB end from the power supply.

3. TWO CLIP-ON SPEAKERS

The speakers can be used separately, for example, to optimise the sound from your computer, but they can also be joined together to enjoy powerful sound outdoors.
- To assemble them, place them one on top of the other, two speakers can connect each other by magnetic.

- Once separated, the speakers can operate together up to a distance of 5m. This range may be reduced by obstacles (walls, doors, windows, etc.).

4. TURNING THE SPEAKER ON OR OFF

You can switch the speaker on or off by pressing the on/off button on the back of the speaker for 3 seconds.

5. TWS MODE CONNECTION BETWEEN THE TWO SPEAKERS

The TWS function allows you to connect two devices at the same time, without using cables.
- Switch both speakers on using the on/off button, they will enter into TWS mode automatically, there will be a sound indicate that two speakers will pair. Once paired successfully, there will be a sound indicate. If two speakers can not connect to each other within 1 minute, please restart two speakers to connect.

- Simultaneously press the + and - buttons on one of the speaker(should be each side) to disconnect TWS connection.

- To re-connect TWS connection, need to disconnect bluetooth connection on the cellphone firstly.

6. WIRELESS MODE - CONNECTING TO A SMARTPHONE

When you connect the speaker to a smartphone for the first time, you must manually pair the device so that sound can be transmitted to the speaker.

- Once the connection between the two speakers has been established, activate the wireless function on your smartphone.

- Select the name of the speaker from the list : Ncaa Championships.

- When pairing is successful, both speakers will emit a sound.

- Press Play to start your music.

7. SD OR TF CARD MODE

The speaker is equipped with an SD or TF card reader.(This only works if a card is inserted)
- Record your music onto an SD or TF card, then insert it into the slot at the back of the device.

- Once the card is inserted, the device automatically switches to SD or TF card mode.

- When both the SD or TF card and the Aux cable are inserted, the mode activated is the one inserted the latest.


- Press the on/off button twice quickly to change modes in the following order: WIRELESS>TF>AUX.

- Press Play to start your music.

DESCRIPTION AND CHARACTERISTICS

DESCRIPTION

1. Device
2. Passive radiator
3. Volume up and next track (+) button
4. Volume down and previous track (-) button
5. On/off, play/pause and mode buttons
6. SD or TF card input
7. Aux input
8. USB-C charging port
9. Fabric strap
10. Protective band
11. USB-C cable
12. Magnetic connection between the two speakers

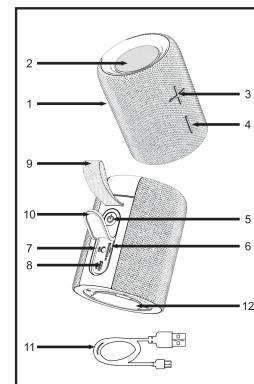

CHARACTERISTICS

- Power supply: 5V 1A
- Audio output: 2 x 10W
- Battery capacity: 2 x 2000mAh
- Mode: Wireless/Aux/SD or TF card
- Wireless Version: 5.3
- Maximum wireless range: 10 meters
- Charging time: 2-3 hours
- Operating time: 6-8 hours
- Speaker frequency: 60HZ-18KHZ
- Water resistance: IPX6
- Dimensions: 80*30*200mm

LED INDICATOR

Off: The device is switched off and fully charged.

Red: The device is switched off and charging.

Blue (flashing): Device is on, wireless mode is on, search is in progress.

Blue(static): The device is switched on, wireless mode is activated and the device is paired.

8. AUX MODE

The speaker is equipped with an Aux socket. (This only works if an Aux cable is connected).

- Connect your Aux cable to the speaker input and to your smartphone.

- Once the cable is inserted, the device will automatically switch to Aux mode.

- When both the SD or TF card and the Aux cable are inserted, the mode activated is that which was inserted last.

- Press the On/Off button twice quickly to change modes in the following order: WIRELESS>TF>AUX.

- Press Play to start your music.

9. MUSIC CONTROL

- Star/Stop: Press the Start/Skip button to start, pause and resume music playback.

- Press three times the Play/Pause button to open/close LED light.

- Long press the Play/Pause button for 8 seconds to reset.

- Next track: During music playback, press the + button for 3 seconds to select the next track.

- Previous track: During music playback, press the -button for 3 seconds to select the previous track.

- Increase volume: Short press + to increase the volume of the music.

- Decrease volume: Short press the button to decrease the volume of the music.

10. MAINTENANCE AND CLEANING

- It may be necessary to clean your appliance regularly.

- Clean the surface of the appliance with a soft, damp cloth.

- Do not use solvents, chemicals or cleaning fluids containing alcohol, ammonia or abrasive substances.

- WARNING: Never immerse the appliance in water or any other liquid.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2)This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by TWINTECH INDUSTRY, INC. may void the FCC authorization to operate this device.

Note: The user is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

Model: Breakaway Speaker
FCC ID: 2BHM-BREAKAWAY

