 


PRITOM

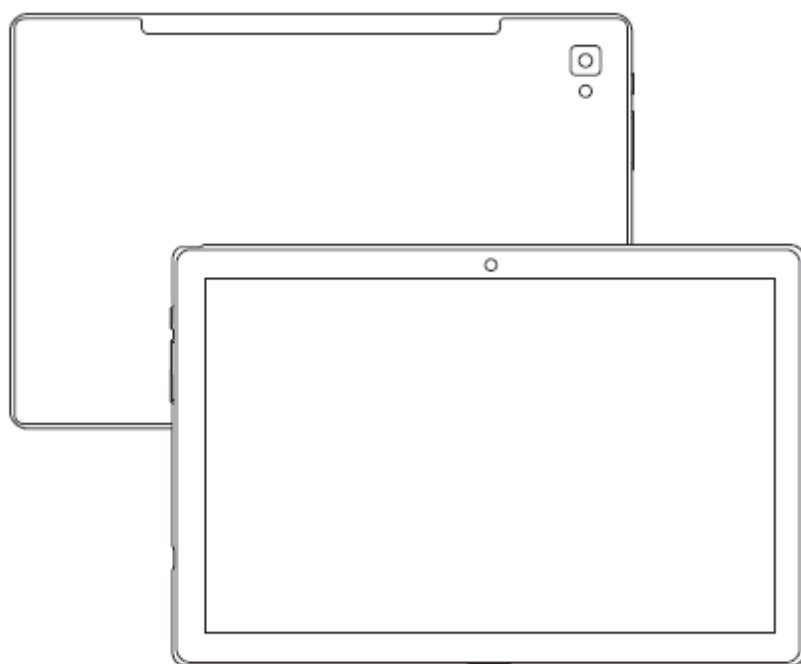

IRA T1029

USER GUIDE

Please read this instruction thoroughly before using this product and keep it for future reference.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

 
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PRITOM

FUNCTION OVERVIEW

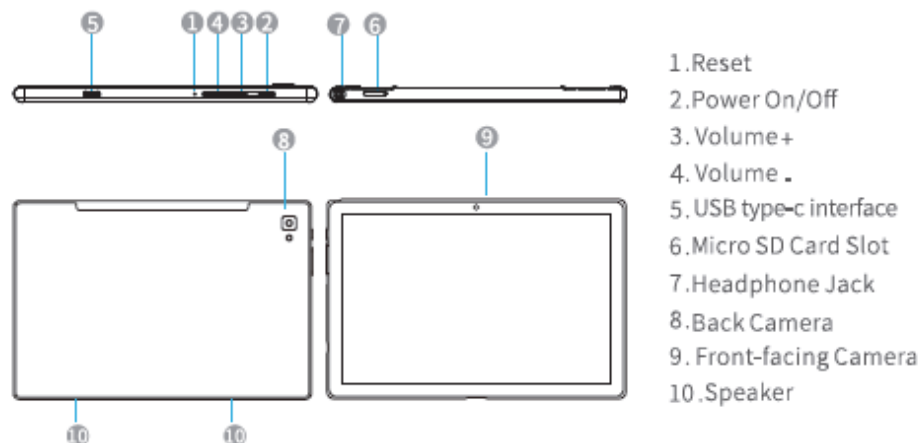

GETTING STARTED

Power On/Off

Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.

Press and hold the power button for 2s, then release it. It will show **Power Off** and **Restart** on the screen. Tap **Power Off** to turn off the tablet.

Press and hold the power button for 5s to do a forced shutdown when it's frozen.

Battery

A rechargeable Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if only use your tablet occasionally.

DO NOT dispose of tablet in a fire.

Sleep Mode

 
Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is **ON**; press again to wake it up.

Tip:

Go to **Settings > Display > Sleep** to set the time of entering the **Sleep Mode**.

HOME SCREEN

Icons on the Bottom Menu

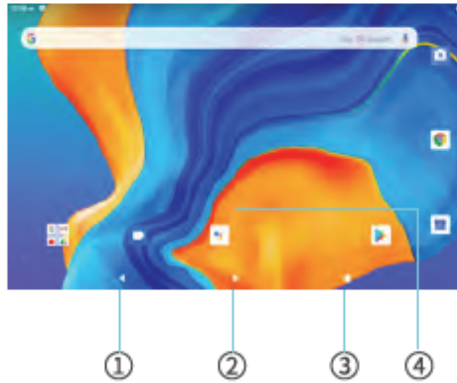

1. Back
2. Home Screen
3. Recent Activities
4. Apps Collection

Home Settings, Widgets and Wallpapers

 


Tap and hold the empty section of a Home screen, **Home Settings, Widgets and Wallpapers** will be displayed.

- * Tap **Home Settings** to enable/disable **Add icon to Home screen**. This is applicable to the new Apps installed from **Play Store**. It also provides the shortcut to enable/disable the notification dots.
- * Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.
- * Tap **Wallpapers** to change the current wallpaper of the tablet from the default wallpapers, Live Wallpapers or your photos.

SETTING BASICS

Quick Settings

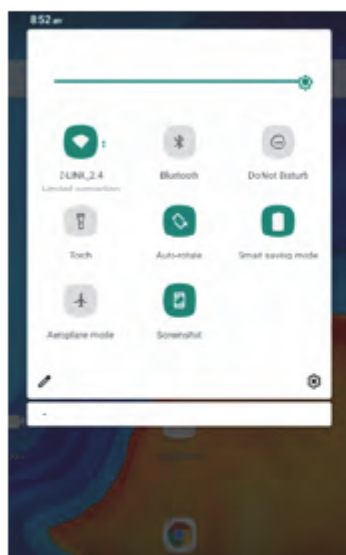

Swipe down from the top of the screen to access **Quick Settings**

-  : **Wi-Fi**. Tap to connect/disconnect to a wireless network
-  : **Bluetooth**. Enable/disable the Bluetooth of the tablet
-  : **Do Not Disturb**. Block sound or vibration after enabling this function
-  : **Torch**. Clicking this little icon will immediately start the flash
-  : Turn on/off the **Auto-rotate** of the screen
-  : **Battery Saver**. Enable/disable the low power mode
-  : **Airplane Mode**. Turn on/off all the network connectivity
-  : **Screenshot**. Click "Screenshot", You can get the image from the interface where you are Look

Tap the  icon to change the options in the **Quick Settings**.
Long press each icon to enter the interface of its detailed settings.

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the de Setting interface. Or, tap the **Settings** icon on the Home screen to enter.

Network & Internet

- *Connect to any working Wi-Fi
- *Enable/disable the Airplane Mode
- *Monitor the data usage

Connected devices

- *Turn on/off Bluetooth
- *Pair with Bluetooth devices and check the paired devices
- *Cast device and check the cast device
- *Add and check printers

Apps & notifications

- *Check the Apps recently opened
- *Check all the Apps on the tablet
- *Set the App permissions
- *Uninstall the third-party Apps
- *Adjust App notification settings
- *Clear the cache of the Apps

Battery

- *Display the remaining battery power as a percentage
- *Enable/disable the **Battery Saver**
- *Adjust the time of entering the **Sleep Mode**

Display

- *Adjust the screen brightness
- *Adjust the font size and display size
- *Set a screen saver
- *Change the wallpaper
- *Adjust the time of entering the **Sleep Mode**

Sound

- *Set volume levels for media, alarms, and notifications
- *Set preferences of **Do Not Disturb**
- *Set the tunes for notifications and alarms
- *Turn on/off the sound for screen lock, charging and touch

Screenshot

- *Set the delay time for a screenshot
- *Set the location folder of screenshots
- *Switch on/off **Show the screenshot button in the statusbar**

Tip:

Press the volume down button and the power button together to capture a screenshot. Or, switch on **Show the screenshot button in the statusbar**, then tap the  icon on the bottom menu to capture a screenshot.

Storage

- *View and manage your storage space

Security & location

- *Set screen lock pattern, e.g. password, PIN, Swipe etc.
- *Enable/disable all the notifications while the screen is locked
- *Turn on/off the location services for specific Apps
- *Set to show/hide the password when input a password

Users & accounts

- *Add and manage the user accounts on your tablet

Accessibility

- *For vision and hearing impaired users, manage settings for **Screen readers**, **Subtitle**, and more

Google™

- *Set the preferences for Google related services

System

- * Set Language
Tap **Languages & input** > **Languages** > **+add a language** to add your language. After adding, hold and slide the ≡ to the top to change the language.
- *Restore factory setting
Tap **Reset options** > **Erase all data (factory reset)** to restore the factory setting.
- *Set the date and time
- *Turn on/off the **Backup**
- *Check the detailed information about the tablet

 


NETWORK CONNECTION

Go to Wi-Fi settings in the **Settings** interface or directly enter through **Quick Settings**.

Wi-Fi Connection

1. Tap **Network and Internet** and turn on the **Wi-Fi**. All Wi-Fi connections available will be listed;
2. Select your Wi-Fi and input the correct password.

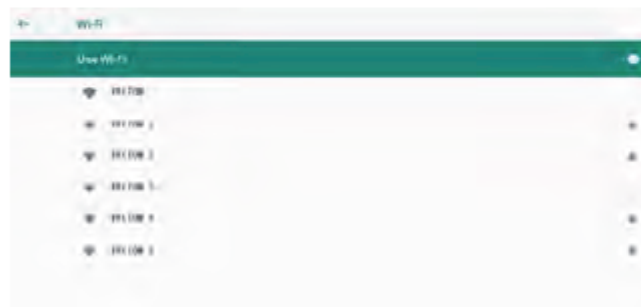

Bluetooth Paring

Please turn on the **Bluetooth** on your tablet and your bluetooth device.

1. Tap **Connected devices** and turn on the **Bluetooth**;
2. Tap **Bluetooth** > **+pair new device** to enter the scanning interface. Devices available will be displayed after a few seconds;
3. Tap the desired device to get a pairing code and click **PAIR** on both devices.
An automatic connection will be applied to some devices.

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen;
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Tap and hold the App, then slide to X to remove it from your Home screen.

Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps & notifications**;
2. Select an App > **Storage > CLEAR CACHE**.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet.

You may use the **Chrome** browser pre-installed or use another browser downloaded from **Play Store**.

MULTIMEDIA

 
Connecting to the Computer

1. Connect your tablet to the computer with USB cable and go to **Quick Settings**;
2. Tap **Android™ Systems. USB charging this device** > **Tap for more options** > **Use USB to**;
3. Select **Transfer files**;
4. Go to your computer and find your tablet **IRA T1029** to transfer files between your tablet and computer.

Tip:


Select **Charging this device** to charge your tablet;

Select **Transfer photos (PTP)** to transfer photos between the devices.

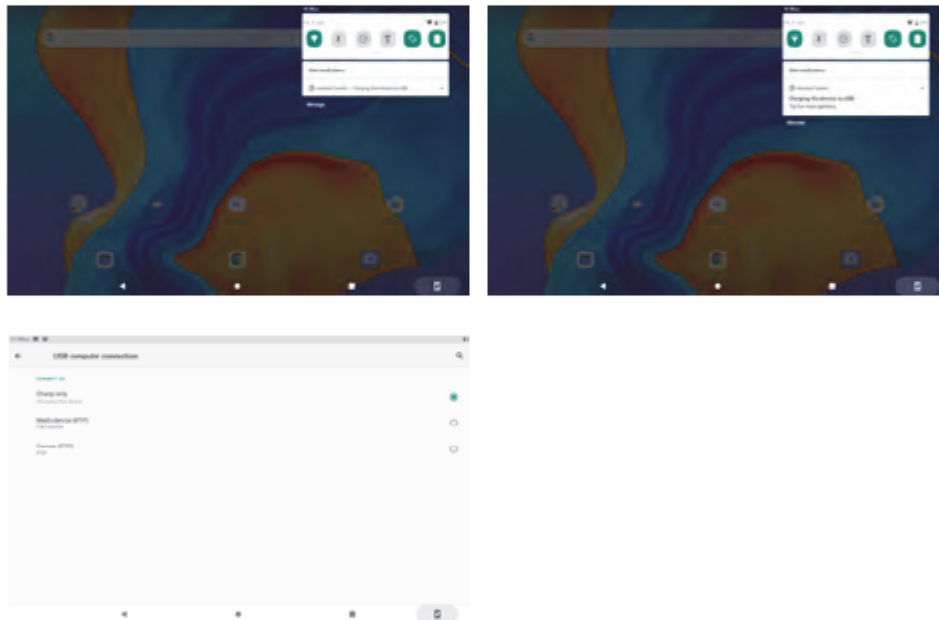

Connecting to an External Device

 1. Install a microSD card into the microSD card slot and go to **Quick Settings**;
2. Tap **New SD card detected** or **Set Up** prompt;
3. Set the microSD card as a portable storage by selecting **Use as portable storage**.
Enter microSD Card storage to move files between the card and tablet.

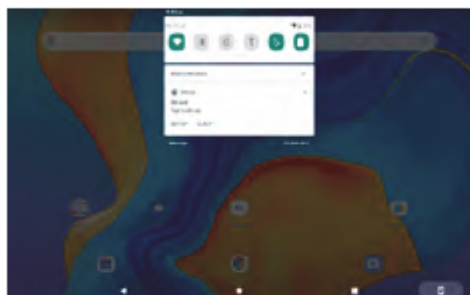

SPECIFICATION

Size	10.1"	Connection	Wi-Fi
Chipset	SC9863	CPU	ARM Cortex -A55
GPU	IMG8322	RAM	3GB
ROM	32GB	Display	IPS /1280*800
Front-facing Camera	5MP	Network	AC/a/b/g/n/(Wi-Fi 5),BT5.0
Back Camera	8MP	Power Supply	DC 5V 3A
Battery	6000mAh	Touch	Multi-touch
Operating System	Android 10	Ports	Type-c Port/ microSD Card Slot

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- *Reboot your tablet after charging for 30 minutes;
- *Press the power button to check if the tablet is in the **Sleep Mode**;
- *Press and hold the power button for 5s to turn off the tablet, then reboot it;
- *Press the **Reset** button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- *Make sure the USB cable is properly plugged into the charging port;
- *Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- *Uninstall the App with the error message, then download and install again;
- *Press the **Reset** button with a pin to reboot the tablet.

Q4. The tablet cannot be detected by the computer.

- *Make sure the tablet is powered on;
- *Try another USB cable;
- *Try another USB port on the computer;
- *Instead of **Charge this device**, choose **Transfer files** or **Transfer photos (PTP)** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wi-Fi.

- *Make sure the Wi-Fi in your tablet is **ON**;
- *Make sure you input the correct password when connecting the Wi-Fi;
- *Restart the router;
- *Make sure there is no filter setting or device connection limitation in the setting of the router;
- *Forget the current Wi-Fi, reset the router and connect the Wi-Fi again.

Q6. The storage space of the tablet is not enough.

- *Delete the Apps you don't use;
- *Clear the cache of the Apps regularly;
- *Install an Micro SD card to expand the storage.

Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC. Oreo is a trademark of Mondelez International, Inc. group.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.