 


ERAZER
Invested By Lenovo

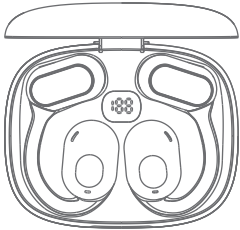 



ERAZER Wireless Earbud X10
Product Manual


Specification of Product

Model of Product: ERAZER X10
Version: V6.0
Effective Distance: Approx. 10m
Speaker Diameter: φ16mm
Impedance: 32Ω
Frequency Respinse: 20Hz-20KHz
Microphone Sensitivity: -42dB±3dB
Earphone Input: 5V≈50mA
Charging Case Input: 5V≈300mA
Charging Case Output: 5V≈100mA
Earphone Battery Capacity: 50mAh
Charging Case Battery Capacity: 300mAh
Duration: Approx. 5.5 H (Earphone)
Earphone Charging Time: Approx. 1.5 H
Charging Time of the Charging Case: Approx. 1.5 H


Item list

Charging case *1

 Headphones *1

Charging cable *1

 
Welcome to ERAZER
Wireless Earbud

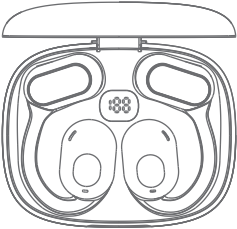


Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the red light and blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.

 How to wear headphones correctly

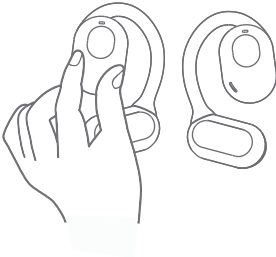


1




2

 Product Description

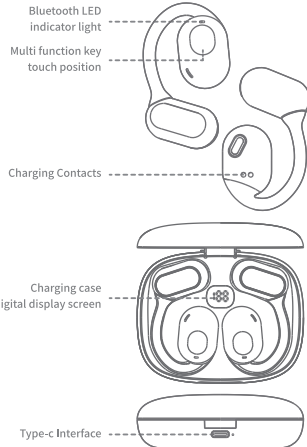


Touch Operation

 Connect with Bluetooth device

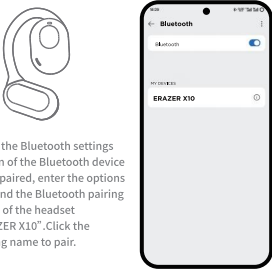


Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "ERAZER X10". Click the pairing name to pair.

 
Indicator Light Description



- When the headset is turned on the red light and the blue light flash alternately
- When the headset is turned off: the red light flashes 3 times quickly and then goes off
- Successful pairing of left and right ears: The red and blue lights on the main ear flash alternately, while the light on the secondary earphone goes off.
- Bluetooth device successfully connected: no light




- Headphone charging: The digital display screen of the charging case remains on, and the red light on the headphones remains on. After being fully charged, the red light on the earphones turns to blue and goes off, while the digital display screen in the Charging case goes off.
- Charging of the Charging case: The digital display screen of the charging case flashes, and after being fully charged, the digital display screen of the charging case always lights up at 100.

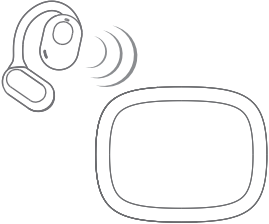

Power On
Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du".
Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".
Power Off
Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du".
Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press

 


X1

Music mode
Play/Pause

Phone mode
Call Answer/End

Double Press




X2

Music mode

Double press the right ear: Volume up

Double press the left ear: Volume decreases

 Long Press

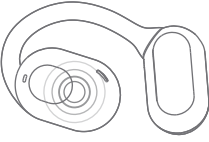


Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant.
When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press




X3

Music mode

Triple press on the left ear: Previous song

Triple press on the right ear: next song

Switch between game mode and music mode



Game mode

Press and hold the multi-function button on the right ear for 2 seconds


Music mode

Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.
Note 2: The factory setting defaults to music mode

Clear Bluetooth pairing history

 When two ears cannot be paired, it is necessary to clear all connected devices and click on the left and right earphones 5 times respectively.

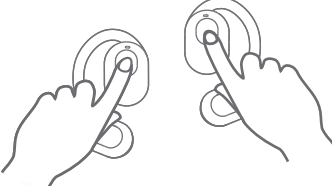

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

FCC ID: 2BHJR-ERAZER-X10

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 19 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

ERAZER

Customer Service Email: contact@yhemi.net