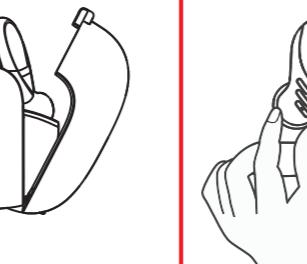
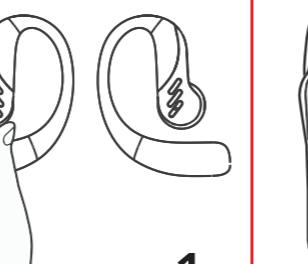
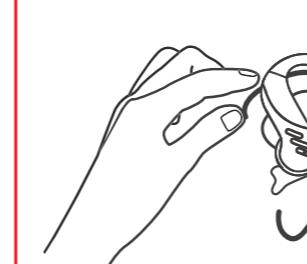
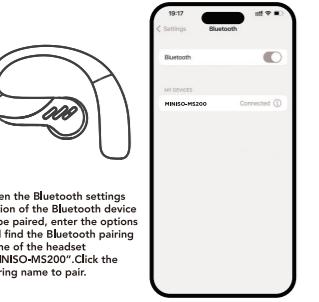
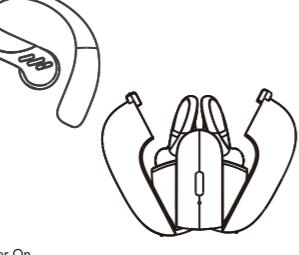
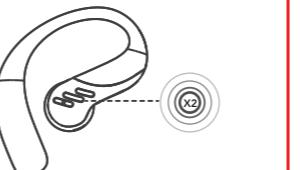
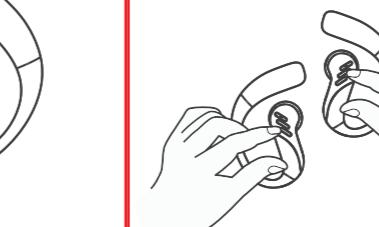


<p><b>MINISO</b> <b>PRODUCT MANUAL</b>  <b>Wireless Earbud MS200</b></p> <p>PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.</p>	<p><b>CATALOGUE</b></p> <p>01 How to wear headphones correctly —— 5 02 Product Introduction —— 9 03 Touch Operation —— 12 04 Item list —— 21 05 Warranty Statement —— 24</p>	<p><b>Welcome to MINISO Wireless Earphones</b></p> <p><b>How to wear headphones correctly</b></p> <p><b>Take out and pair it</b></p> <p>When using for the first time, please remove the left and right sides Wear headphones at the same time. When the white and ice blue indicator lights of the earphones alternate flashing, the earphones will enter automatic pairing mode.</p>	 <p>1</p>	 <p>2</p>	 <p>3</p>	 <p>4</p>	<p><b>Product Description</b></p> <p>Multi function key touch position Bluetooth LED Display light Charging Contacts Type-c Interface</p>	<p><b>Specification of Product</b></p> <p>Model of Product: MS200 Version: V6.0 Effective Distance: Approx. 10m Speaker Diameter: <math>\phi 12mm</math> Impedance: <math>16\Omega \pm 15\%</math> Frequency Response: 20Hz-20KHz Microphone Sensitivity: <math>-42dB \pm 3dB</math> Earphone Input: 5V-45mA Charging Case Input: 5V-400mA Charging Case Output: 5V-90mA Earphone Battery Capacity: 45mAh Charging Case Battery Capacity: 400mAh Duration: Approx. 5.5 H (Earphone) Earphone Charging Time: Approx. 1.5 H Charging Time of the Charging Case: Approx. 1.5 H</p>									
<p><b>Touch Operation</b></p> <p><b>Connect with Bluetooth device</b></p> <p></p> <p>Open the Bluetooth settings option of the Bluetooth device and select the earphone options and find the Bluetooth pairing name of the headset "MINISO-MS200". Click the pairing name to pair.</p>	<p><b>Indicator Light Description</b></p> <p>When the headset is turned on: White light and icy blue light flash alternately. When the headset is turned off: The white light flashes three times and then goes out. Successful pairing of left and right ears: The white light and icy blue light of the main earbud flash alternately, while the secondary earbud goes out. Bluetooth device successfully connected: no light.</p> <p>Headphone Charging: The white indicator light remains on all the time. After it is fully charged, the white indicator light goes out. At the same time, the light of the earphone casing goes out. Charging of the Charging case: The earphone case flashes with ice blue light, when fully charged, the ice blue light goes out.</p>	<p><b>Once Press</b></p> <p></p> <p>Power On Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du". Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du". Power Off Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du". Manual power off: Long press for 3 seconds, the Earphone will be powered off, with the prompt sound of "Du".</p> <p>Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.</p>	<p><b>Double Press</b></p> <p></p> <p>Music mode Phone mode Play/Pause Call Answer/End</p>	<p><b>Long Press</b></p> <p></p> <p>Music mode Double press the right ear: Volume up Double press the left ear: Volume decreases</p>	<p><b>Triple Press</b></p> <p></p> <p>Wake up voice assistant When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant Phone mode Double press the right ear: Volume up Double press the left ear: Volume decreases</p>	<p><b>Clear Bluetooth pairing history</b></p> <p>When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.</p>	<p><b>Switch between game mode and music mode</b></p> <p></p> <p>Game mode Press and hold the multi-function button on the right ear for 2 seconds Music mode Press and hold again for 2 seconds</p> <p>Note 1: When using one earphone, you cannot switch between game mode and music mode. Note 2: The factory setting defaults to music mode</p>	<p><b>Item list</b></p> <p><b>Headphones *1</b> <b>Charging case *1</b></p>									
<p><b>Instruction *1</b>  <b>Charging cable *1</b></p>	<p><b>FCC ID: 2BHJR-MS200</b></p> <p><b>FCC Warning:</b> Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>The device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference; (2) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.</p> <p>*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p><b>US REP</b> Company Name: MIRAMONT SOLUTIONS LLC Address: 12181 COAST ST, TEMECULA, CA 92592, United States Contact Name: Wenyi Wang Telephone No: (951) 401-3633 Email: wenyi.wang@miramontsolutions.com</p>	<p><b>Warranty statement</b></p> <p><b>MINISO product warranty card</b></p> <table border="1"> <thead> <tr> <th>Product number</th> <th>name</th> <th>SN number</th> <th>Purchase date</th> </tr> </thead> <tbody> <tr> <td>User info</td> <td>telephone</td> <td>address</td> <td>Invoice number</td> </tr> <tr> <td>Sales unit information</td> <td>name (stamp)</td> <td>address</td> <td>telephone</td> </tr> </tbody> </table>	Product number	name	SN number	Purchase date	User info	telephone	address	Invoice number	Sales unit information	name (stamp)	address	telephone	<p><b>The above guarantee does not apply to the following situations</b></p> <p>1. The validity period of the three guarantees has exceeded; 2. Altering of the warranty cards and product code do not match the product itself; 3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage; 4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident; 5. Zippers and tower buckles are damaged due to excessive force; 6. Oil stains or water stains or oil overloading; 7. Any damage caused by sharp objects; 8. Products with signs of burn damage or waterlogging; 9. Damage caused by unauthorized dismantling and modification; 10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product; 11. If the product's original logo or label is changed or damaged, the warranty will be invalid.</p> <p>The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.</p> <p><b>MINISO Product service policy</b> If you encounter a problem, please contact our customer service to solve it. After-sales email: 7@hifi-earphone.com</p> <p><b>FC</b> <b>RoHS</b> <b>CE</b></p>	<p><b>Warranty Policy</b></p> <p><b>Guidelines for safe and effective use</b></p> <p><b>Important safety tips</b></p> <p><b>Enjoy the company of MINISO</b></p> <p><b>Creating sound to live with</b></p>	<p><b>Copyright@2025 MINISO Group affiliated companies and its licensors. All rights reserved</b></p>
Product number	name	SN number	Purchase date														
User info	telephone	address	Invoice number														
Sales unit information	name (stamp)	address	telephone														