

Lock screen interface

Unlock: Slide to the right to unlock the screen

Volume adjustment interface

Reduce volume, minimum music is 0
Increase volume, maximum volume is 16

Music interface

Previous Song Play/Pause Next Song

Equalizer interface

Switch between different EQ sound effects: Popular, Jazz, Rock, Classical, Country

Alarm setting interface

Switching requires setting the alarm time: 5 minutes, 10 minutes, 15 minutes, 20 minutes, 25 minutes, 30 minutes, 1 hour

Brightness setting interface

Click the left button to decrease the screen brightness; Click the button on the right to increase screen brightness

Lock wallpaper interface

Click to switch between different lock screen wallpapers, the current screen is the selected lock screen wallpaper

Language switching interface

Click to switch languages from different countries

Mode select interface

Music mode Game Mode

Wallpaper interface

Click to switch between different lock wallpapers, the current screen is the selected lock wallpaper

Time setting interface

Automatic update: When the charging compartment, headphones, and phone are connected, the time on the phone will be automatically updated to the charging compartment.
Manual update: Click the button to enter manual settings

Lighting interface

Click the button to turn on the flashlight, The entire screen will turn white.

Find the headphone interface

Click the L/R button, and the number 1 screen will appear

Click to cancel and exit this function.
Click to start, the number 1 screen will appear, and the headphone speaker will start emitting sound

Click the stop button to stop speaking

Voice assistant interface

You can inquire about weather conditions, play music, etc.

Game interface

1.Birds: Click the screen to make the bird rise, and move forward without touching the pillars

Photography function

Open the phone camera, click the button, and the phone will start taking photos

Definition of multifunctional button functions

Multi function key

Click once: On/Off screen.
Long press for 3 seconds: Power on.
Long press for 5 seconds: Restart, power off, restore factory settings.
Long press for 10 seconds: Auto - restart.

Item list

Headphones *1

Charging case *1

FCC ID: 2BHJR-MS201

FCC Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Instruction *1

Charging cable *1

The above guarantee does not apply to the following situations

- The validity period of the three guarantees has exceeded;
- Altering of the warranty cards and product code do not match the product itself;
- Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
- Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
- Zipper and lower buckles are damaged due to excessive force;
- Off-line or tear caused by overloading;
- Damage caused by unauthorized dismantling and modification;
- Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
- If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should respect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7081@hi-earphone.com

US REP

Company Name: MINIMONT SOLUTIONS LLC
Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3433
Email: wenyiwang@minimontsolutions.com

RoHS CE

Warranty statement

MINISO product warranty card

Product number	name	SN number
User info	telephone	Purchase date
	address	
	Invoice number	
Sales unit information	name	(stamp)
	address	
	telephone	

Warranty Policy

Disclaimer: This manual does not come with any form of warranty, position explanation or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve (12) months from the date of your purchase the "Warranty Period", and it can be repaired, it will be repaired free of charge. If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen (13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset.

If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device.

1. Electromagnetic interference:

Electronic Devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendants' instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

2. Safety matters:

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as sun heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.
- If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. Can only be replaced by an after-sales service provider of the same or equivalent type.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional loss, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V1A. We must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved

Creating sound to live with