

MINISO

PRODUCT MANUAL

Wireless Earbud MS206

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly

02 Product Introduction

03 Touch Operation

04 Item list

05 Warranty Statement

5

9

12

21

24

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

How to wear headphones correctly

Take out and pair it

When using for the first time, please remove the left and right sides. Wear headphones at the same time. When the headphone indicator light flashes white, the headphones will enter automatic pairing mode.

Long Press

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant.

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection.

Triple Press

Music mode

Triple press on the left ear: Previous song

Triple press on the right ear: next song

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.

2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep".

Switch between game mode and music mode

Game mode

Press and hold the multi-function button on the right ear for 2 seconds

Music mode

Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode.

Item list

Headphones *1

Charging case *1

Product Description

Bluetooth LED Display light

Multi function key touch position

Charging Contacts

Digital Screen

Type-c Interface

Specification of Product

Model of Product: MS206

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: φ15*7*2.7mm

Impedance: 32Ω±15%

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: -42dB±1dB

Earphone Input: 5V≐35mA

Charging Case Input: 5V≐300mA

Charging Case Output: 5V≐70mA

Earphone Battery Capacity: 35mAh

Charging Case Battery Capacity: 300mAh

Duration: Approx. 4.5 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H

Instruction *1

Charging cable *1

FCC ID: 2BHJR-MS206

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

Warranty statement

MINISO product warranty card

Product number		SN number	
User info	name	Purchase date	
	telephone		
	address		
	Invoice number		
Sales unit information	name	(stamp)	
	address		
	telephone		

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-time or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.
The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customercare@yheim.net

RoHS CE

Touch Operation

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS206".Click the pairing name to pair.

Indicator Light Description

When the headset is turned on: White light flashing
When the headset is turned off: The white light flashes three times and then goes out
Successful pairing of left and right ears: The main ear light flashes white, and the auxiliary ear light goes out
Bluetooth device successfully connected: no light
Headphone Charging:The screen of the charging box Light up for 5 seconds.The white indicator light of the earphones is always on. After it is fully charged, the white indicator light goes off.
Charging of the Charging case: The digital display screen of the charging case flashes, and after being fully charged, the digital display screen of the charging case always shows 100.
Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press

Music mode

Phone mode

Play/Pause

Call Answer/End

Double Press

Music mode

Double press the right ear: Volume up

Double press the left ear: Volume decreases

Enjoy the company of MINISO

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved

Creating sound to live with

正面

背面