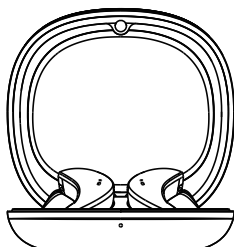 
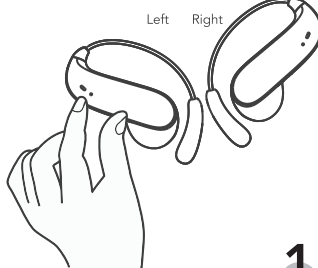 

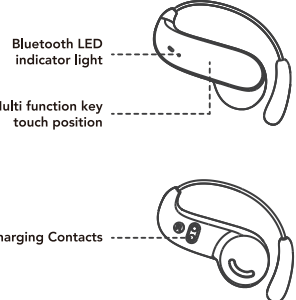 
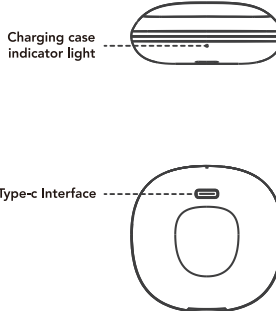 


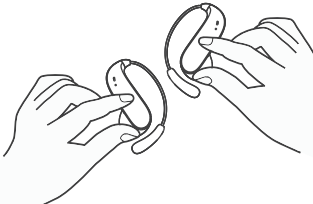 


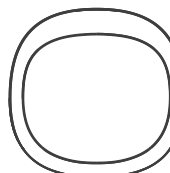 
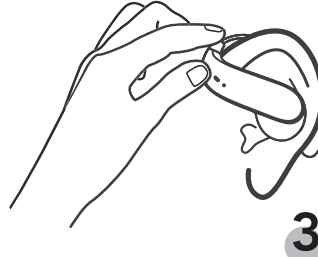 



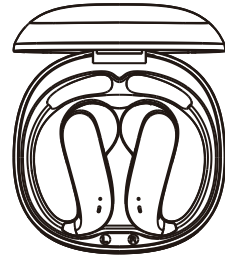 


<div>MINISO</div> <div>PRODUCT MANUAL</div> <div>Wireless Earbud MS210</div> <div>PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.</div>	<div>CATALOGUE</div> <div>01 How to wear headphones correctly — 5</div> <div>02 Product Introduction — 9</div> <div>03 Touch Operation — 12</div> <div>04 Item list — 21</div> <div>05 Warranty Statement — 24</div>	<div>Welcome to MINISO Wireless Earphones</div> <div></div> <div>Take out and pair it</div> <div>When using for the first time, take out the left and right earphones at the same time. When the blue light of the earphones flash, the earphones will enter the automatic pairing mode.</div> <div>4</div>	<div>How to wear headphones correctly</div> <div></div> <div>1</div> <div></div> <div>2</div> <div>5</div> <div>6</div>	<div>Specification of Product</div> <div>Model of Product: MS210</div> <div>Version: V6.0</div> <div>Effective Distance: Approx. 10m</div> <div>Speaker Diameter: φ12mm</div> <div>Impedance: 18Ω</div> <div>Frequency Respinse: 20Hz-20KHz</div> <div>Microphone Sensitivity: -38dB±2dB</div> <div>Earphone Input: 5V≈30mA</div> <div>Charging Case Input: 5V≈250mA</div> <div>Charging Case Output: 5V≈60mA</div> <div>Earphone Battery Capacity: 30mAh</div> <div>Charging Case Battery Capacity: 250mAh</div> <div>Duration: Approx. 4 H (Earphone)</div> <div>Earphone Charging Time: Approx. 1.5 H</div> <div>Charging Time of the Charging Case: Approx. 1 H</div> <div>9</div>	<div>Product Description</div> <div></div> <div>Bluetooth LED indicator light</div> <div>Multi function key touch position</div> <div>Charging Contacts</div> <div></div> <div>Charging case indicator light</div> <div>Type-C Interface</div> <div>10</div>	<div>Long Press</div> <div></div> <div>Wake up voice assistant</div> <div>When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant.</div> <div>When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant</div> <div>Phone mode</div> <div>Press and hold the left (or right) ear multi-function button for two seconds: call rejection</div> <div>17</div>	<div>Triple Press</div> <div></div> <div>Music mode</div> <div>Triple press on the left ear: Previous song</div> <div>Triple press on the right ear: next song</div> <div>18</div>	<div>Clear Bluetooth pairing history</div> <div>When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.</div> <div></div> <div>Wireless pairing mode</div> <div>1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.</div> <div>2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"</div> <div>19</div>	<div>Switch between game mode and music mode</div> <div></div> <div>Game mode</div> <div>Press and hold the multi-function button on the right ear for 2 seconds</div> <div>Music mode</div> <div>Press and hold again for 2 seconds</div> <div>Note 1: When using one earphone, you cannot switch between game mode and music mode.</div> <div>Note 2: The factory setting defaults to music mode</div> <div>20</div>	<div>Item list</div> <div></div> <div>Headphones *1</div> <div></div> <div>Charging case *1</div> <div>21</div>
<div></div> <div>3</div> <div>7</div>	<div></div> <div>4</div> <div>8</div>	<div>Once Press</div> <div></div> <div>Music mode</div> <div>Play/Pause</div> <div>Phone mode</div> <div>Call Answer/End</div> <div>Double Press</div> <div></div> <div>Music mode</div> <div>Double press the right ear: Volume up</div> <div>Double press the left ear: Volume decreases</div> <div>15</div> <div>16</div>	<div>Warranty Policy</div> <div>Disclaimer:</div> <div>This manual does not come with any form of warranty,position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the content will be updated on the website at any time without prior notice.</div> <div>Warranty statement:</div> <div>The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge. If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.</div> <div>If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.</div> <div>22</div>	<div>Guidelines for safe and effective use</div> <div>Note: Please read this information first before using your Bluetooth headset.</div> <div>If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device</div> <div>① Electromagnetic interference:</div> <div>Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.</div> <div>Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.</div> <div>② Safety matters:</div> <div>Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.</div> <div>Children:Do not let children play with Bluetooth headsets.Some of the small parts are detachable and may be swallowed and cause danger.</div> <div>23</div>	<div>Important safety tips</div> <div>● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.</div> <div>● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun,heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.</div> <div>● If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.</div> <div>battery usage</div> <div>● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product responsibly and correctly to avoid causing certain injuries and environmental damage.</div> <div>● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.</div> <div>● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.</div> <div>28</div>	<div>Enjoy the company of MINISO</div> <div></div> <div>Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved</div> <div>29</div>	<div>The above guarantee does not apply to the following situations</div> <div>1. The validity period of the three guarantees has exceeded;</div> <div>2. Altering of the warranty cards and product code do not match the product itself;</div> <div>3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;</div> <div>4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;</div> <div>5. Zippers and lower buckles are damaged due to excessive force;</div> <div>6. Off-line or tear caused by overloading;</div> <div>7. Any damage caused by sharp objects;</div> <div>8. Products with signs of burn damage or water logging;</div> <div>9. Damage caused by unauthorized dismantling and modification;</div> <div>10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.</div> <div>11. If the product's original logo or label is changed or damaged, this warranty will be invalid.</div> <div>The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.</div> <div>MINISO Product service policy</div> <div>If you encounter a problem, please contact our customer service to solve it.</div> <div>Customer Service Email: customercare@yheml.net</div> <div>25</div>			

正面

反面