

尺寸：70*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）

MINISO

PRODUCT MANUAL

Wireless Earbud MS212

 
PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Charging compartment operation	20
05 Item list	31
06 Warranty Statement	34

Welcome to MINISO


Clip on wireless earphones

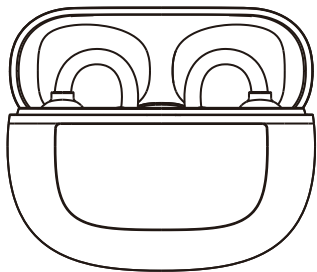


Take out and pair it

When using for the first time, remove the left and right earbuds.
Wear both earbuds simultaneously. When the earbuds' White and Red indicator lights alternate flash, the earbuds will enter auto - pairing mode

 How to wear headphones correctly

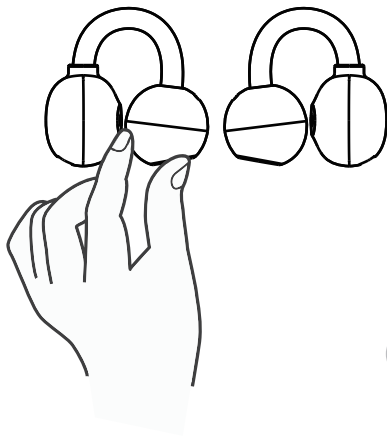

1

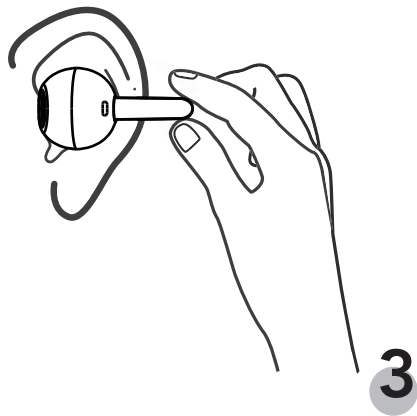 

Product Description

 
 
Bluetooth LED
Display light

Multi function key
touch position

Charging Contacts

Heart rate monitoring
sensor area

4

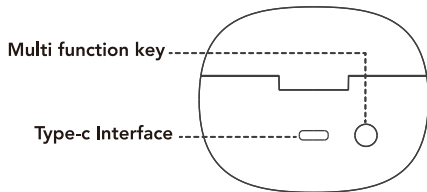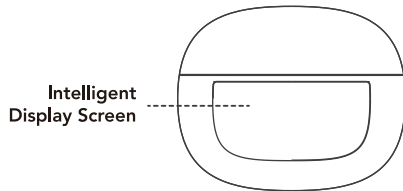

Specification of Product

Model of Product: MS212

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 11\text{mm}$

Impedance: 16Ω

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 3\text{dB}$

Earphone Input: $5\text{V}\approx 25\text{mA}$

Charging Case Input: $5\text{V}\approx 400\text{mA}$

Charging Case Output: $5\text{V}\approx 50\text{mA}$

Earphone Battery Capacity: 25mAh

 
Charging Case Battery Capacity: 400mAh

Duration: Approx. 3.5 H (Earphone)


Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H


Connect with Bluetooth device

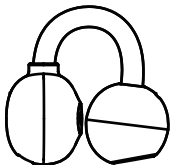

 
Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS212 ".Click the pairing name to pair.

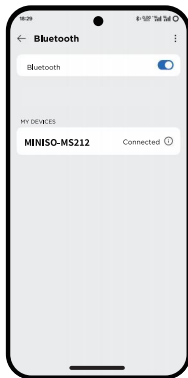


Indicator Light Description

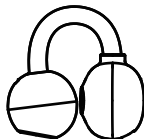 

 - When the headset is turned on: White and Red indicator lights alternate flash
- When the headset is turned off: Red indicator light flashes 3 times and then turns off
- Pairing status: Main earbud White and Red indicator lights alternate flash. Secondary earbud light turns off
- Connection successful: No light

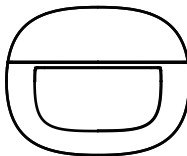

- Headphone Charging: White indicator light remains on. When fully charged, White indicator light turns off.
- Charging of the Charging case:
The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%
*Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 30 seconds of inactivity. Sliding can enter the display screen.

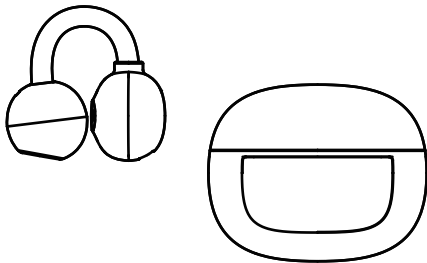 

Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du".

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

 
Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off.

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press

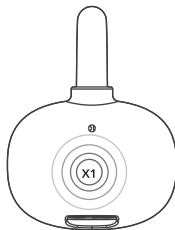

Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press

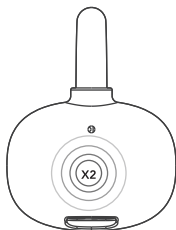

Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

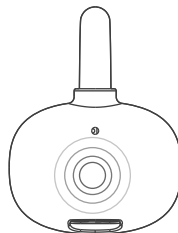

Wake up voice assistant



 
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

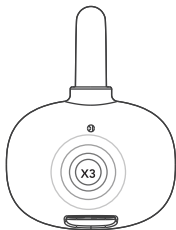

Music mode

 


Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Switch between game mode and music mode

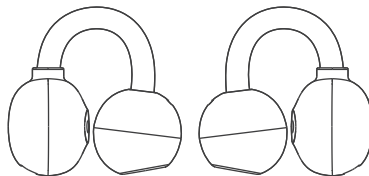

Game mode



Press and hold the multi-function
button on the right ear for 2 seconds

Music mode




Press and hold again for 2
seconds

Note 1: When using one earphone, you cannot switch between
game mode and music mode.

Note 2: The factory setting defaults to music mode

 Charging compartment operation

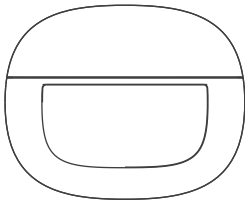

Lighting up the display screen

Method 1: Press the multifunctional button of the Charging Case once to light up the screen.

Method 2: Double click the screen to turn it on.

Turn off display screen.

Automatic shutdown: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off.

Manual closing: Press the Charging Case multifunctional button once to turn off the display screen.

Note 1: First time use, please activate power on

Method 1. Charge and activate the charging case through the TYPE-C interface.

Method 2. Long press the multifunctional button on the charging case for 3 seconds to turn on the device

Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.

Icon Introduction



Bluetooth status



Red: Earphones not connected to the case



Yellow: The earbuds and charging case mobile phone are both connected.

Battery status

Charging status indicator icon for headphone



Yellow: The earbuds are not in the case or fully charged



Green: The earbuds are charging in the case.

Charging case status indicator icon



Yellow: The charging case is not charging



 
Green: The charging case is charging

Lock screen interface




Unlock: Swipe right to unlock the screen

Music interface




◀ Previous Song ▶/⏸ Play/Pause ▶ Next Song

 Volume adjustment interface



◀- +▶
Reduce volume, minimum music is 0 Increase volume, maximum volume is 16

 Heart rate monitoring




Wear the left and right earphones properly, click "Single monitor" to enter Figure 2, stay on the screen for 15-30 seconds, and the test result will be displayed.
(First measurement: Wait for 30-50 seconds)




After the measurement is completed, the test results will be displayed; clicking "Single history" will also show the test results

 Equalizer interface




◀ ▶
Switch between different EQ sound effects:
Normal, Rock, Pop, Classic, Jazz, Village

 Find My Earbuds interface



 
Click the L/R button, and the number ① screen will appear



CANCEL


BEGIN

 Click to cancel and exit this function,
Click to start, the number ② screen will appear,
and the headphone speaker will start emitting sound




Click the L/R button to stop sounding

 Wallpaper interface




Click to switch between different lock wallpapers,
the current screen is the selected lock wallpaper

 Flashlight interface



Click the button to turn on the flashlight,
The entire screen will turn white.

 Language switch interface



Click to switch languages from different countries

 


Settings

1.Settings


(1) Configurable options:
Brightness, Volume, Power Off, Restart,
Restore Factory Settings, About

Brightness setting interface




Click the left button to decrease the screen brightness;
Click the button on the right to increase screen brightness

 Power Off interface




Power Off can be set

 Restart interface



Restart can be set

 Restore Factory Settings



Restore Factory Settings can be set

About interface

 


Can view relevant information

Tik Tok Page flipping and like function

After connecting the earphones to the mobile phone and entering TIKTOK, you can adjust the volume, switch to the previous video, switch to the next video, and give a like using the charging case. (For iOS devices, you need to enable AssistiveTouch in Settings > Accessibility > Touch > AssistiveTouch.)

1. This function is only available for use with TIKTOK software. Other apps may not support it.
2. This feature may have compatibility issues with certain phones, and some phones may not be able to use it.
3. If this feature is unavailable, please disregard it.

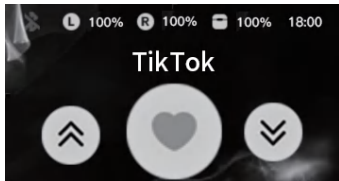

Click this icon, the current short video will be liked



Clicking on this icon will switch to the previous short video

 


Clicking on this icon will switch to the next short video

Camera function


Needs to be connected to a Bluetooth device such as a cell phone

1. This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.
2. This feature may have compatibility issues with some phones, and some phones may not be able to use it.
3. If there are situations where it cannot be used, please ignore this feature.

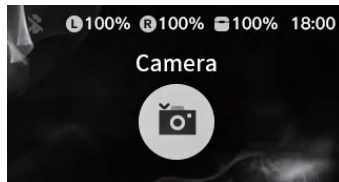

Open the phone camera, click the button, and the phone will start taking photos
Note: When not in shooting mode, clicking this photo button will increase the volume

 Definition of multifunctional button functions

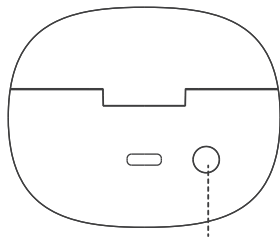

Multi function key

 
Click once: On/Off screen.

Triple click: Pair the charging case with the earphones.


Long press for 3 seconds: Restart, power off, restore factory settings.

Long press for 10 seconds: Auto - restart.


Item list

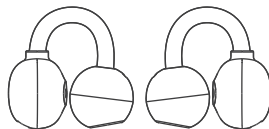


Headphones *1

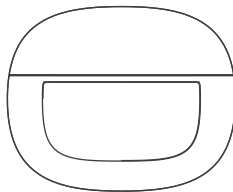 

Charging case *1

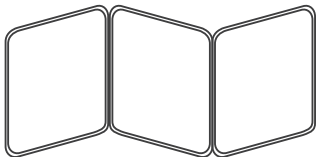 

Instruction *1

 

Charging cable *1

FCC ID: 2BHJR-MS212

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 19 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customer@yhemi.net



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve (12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen (13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

①Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

②Safety matters:

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

 
● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

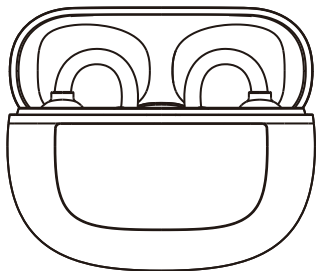

Copyright©2025 MINISO Group affiliated
companies and its licensors. All rights reserved

Creating sound
to live with