

MINISO

PRODUCT MANUAL


Wireless Earbud MS213

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Item list	21
05 Warranty Statement	24

Welcome to MINISO Wireless Earphones

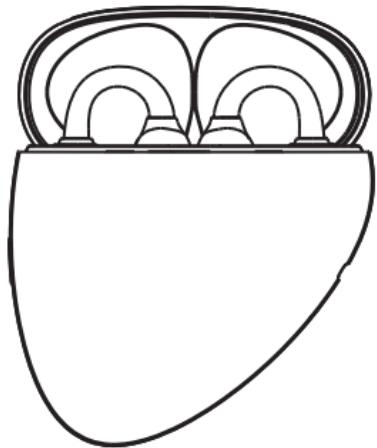


Take out and pair it


When using for the first time, please take out the left and right earphones and wear them simultaneously.

When the red and white indicator lights of the earphones flash alternately, the earphones will enter automatic pairing mode.


How to wear headphones correctly

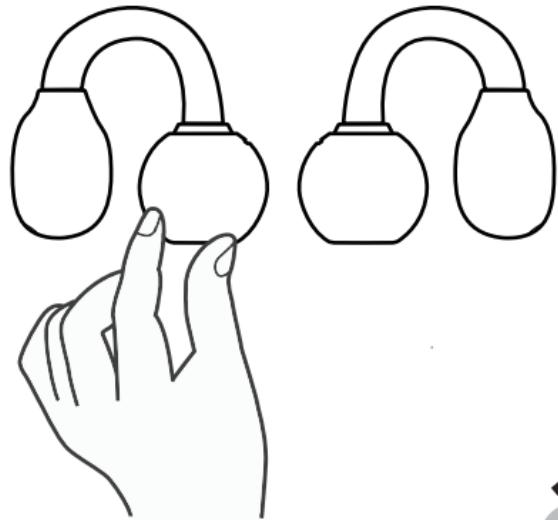


1

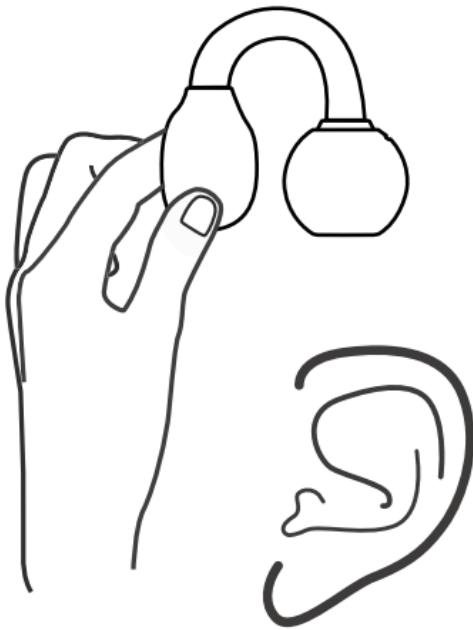


2

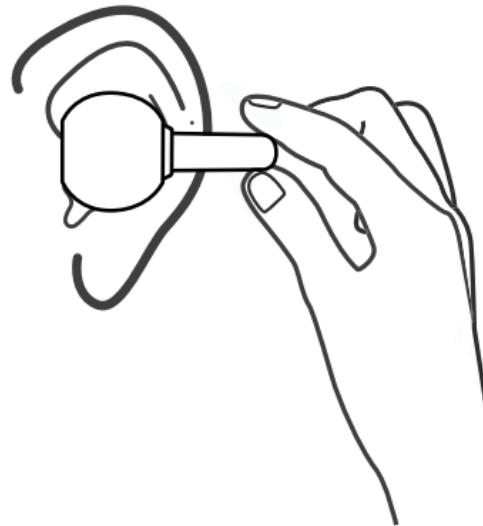


3

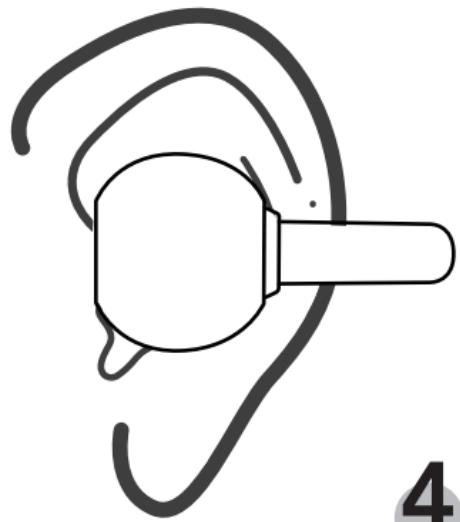

Product Description

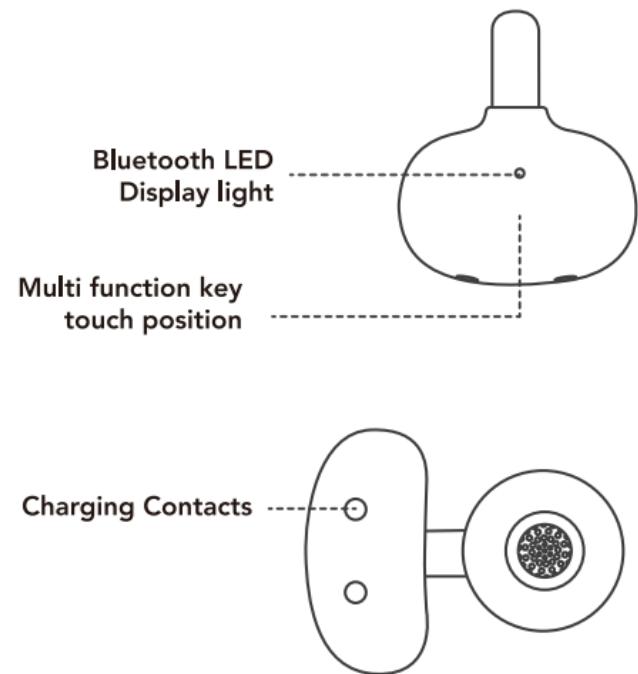

Specification of Product

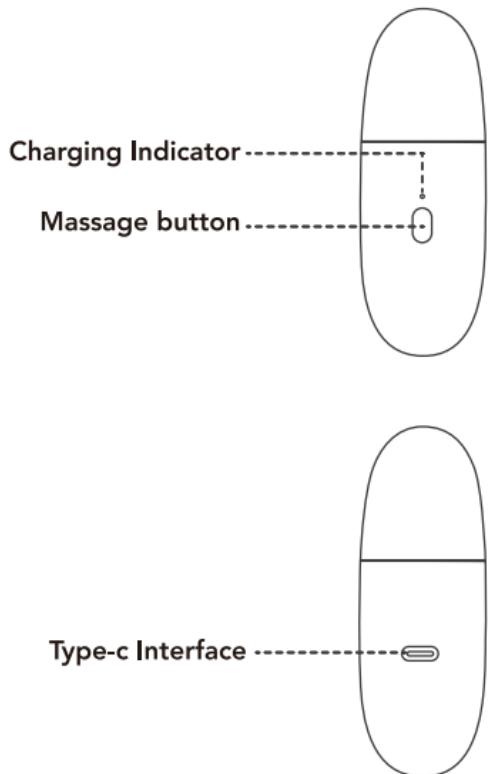

Model of Product: MS213

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 10\text{mm}$

Impedance: 32Ω

Frequency Response: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 1\text{dB}$

Earphone Input: 5V= 30mA

Charging Case Input: 5V= 320mA

Charging Case Output: 5V= 60mA

Earphone Battery Capacity: 30mAh

Charging Case Battery Capacity: 350mAh

Duration: Approx. 4 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 2.5 H

Connect with Bluetooth device




Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS213". Click the pairing name to pair.




Indicator Light Description



- When the headset is turned on: The red light and white light flash alternately.
- When the headset is turned off: Red indicator light flashes 3 times and then turns off
- Pairing status: Main earbud Red and White indicator lights alternate flash. Secondary earbud light turns off
- Connection successful: No light

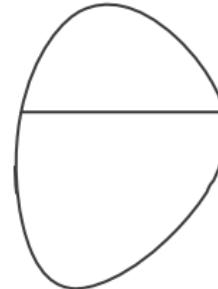

- Headphone Charging: The white light on the Charging case stays on, and the red light on the earphones stays on. When fully charged, the red light on the earphones goes off, and the Charging case light goes off at the same time.
- Charging of the Charging case: The red LED light on the charging case is flashing. After the charging case is fully charged, the red LED light will remain on

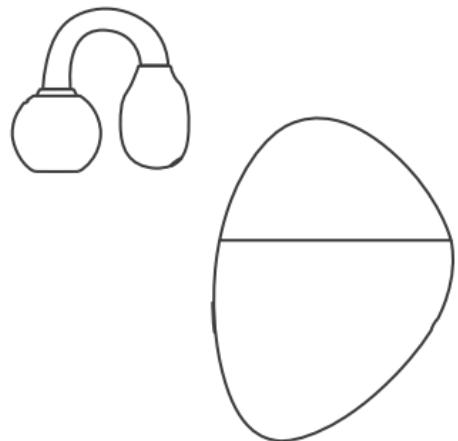

Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on.

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".


Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off.

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press

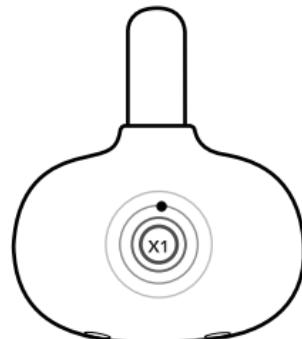

Music mode



Play/Pause

Phone mode



Call Answer/End

Double Press



Music mode



Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press



Wake up voice assistant



When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press



Music mode




Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

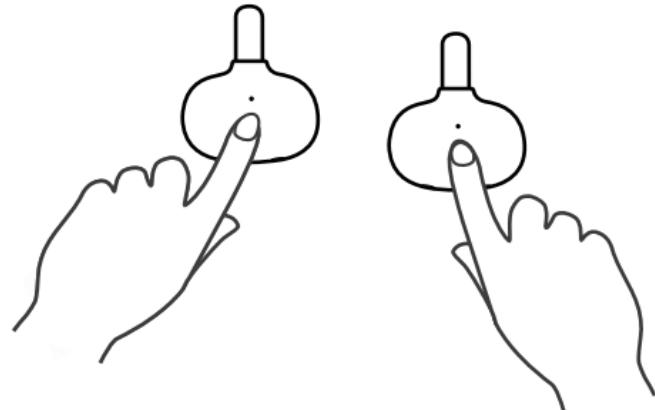

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

Switch between game mode and music mode (Binaural operation)

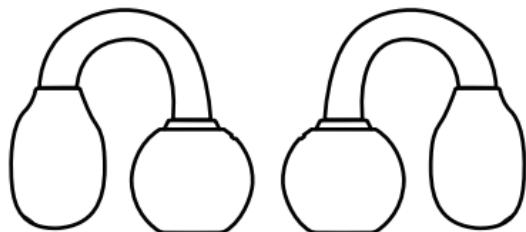

Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode




Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

 
Vibration massage



Massage button


Long press for 3 seconds to turn on/off
Short press to switch three vibration speeds

Note: : Long press for 3 seconds to start the machine. The default vibration speed is low speed. The human face can receive light force. Press once for medium speed, press again for high speed amplitude, and you can choose the three levels of force in a cycle. After the vibration massage process is completed, long press for 3 seconds to turn off and stop.

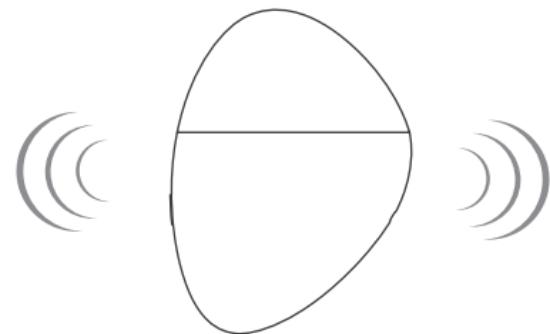


Balance the colloid and oiliness, clear up the weariness of face, remove redundant flesh and the wrinkles of face. Advance the circulation of facial blood and the metabolism of the cell, as is the egestion of dirt under the face. Remove redundant flesh. Build up the elasticity of facial flesh and skin, prevent the relaxation of muscle and skin.

Item list

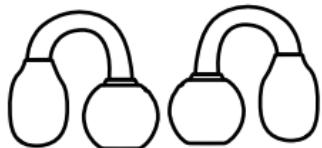


Headphones *1

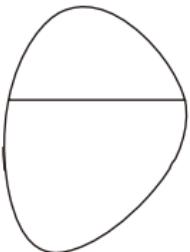

Charging case *1



Charging cable *1

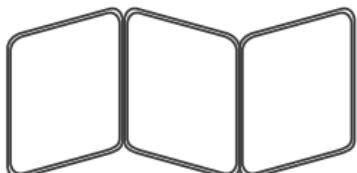

Instruction *1

FCC ID: 2BHJR-MS213

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 19 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

Warranty statement

MINISO

product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customercare@yhemini.net



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:


Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of
MINISO

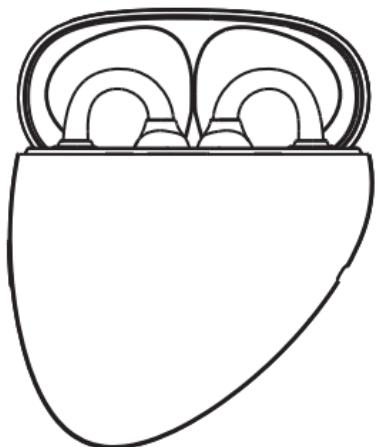

Creating sound
to live with

Copyright@2025 MINISO Group affiliated
companies and its licensors. All rights reserved