

HTC

无线蓝牙耳机Z2

快速入门指南
使用前请阅读使用说明书
HTC NE22

产品规格

型号: HTC NE22

蓝牙

范围: ≈ 10m
版本: 6.0

喇叭

直径: 13mm
阻抗: 32Ω

耳机功率

输入: 5V=35mA
电池容量: 35mAh
使用时间: ≈ 4.5小时
充电时间: ≈ 1.5小时

充电仓功率

输入: 5V=300mA
输出: 5V=70mA
电池容量: 300mAh
充电时间: ≈ 1.5小时
充电仓充满电时, 能给耳机充电约3次

物品清单

充电仓

2 耳机

快速入门指南

USB-C充电线

6 耳帽

部件

多功能触摸键

耳机指示灯

充电触点

耳机喇叭

充电仓指示灯

Type-c 充电口

磁吸自适应扬声器

在TWS和OWS之间自由切换, 支持快速拆卸磁吸塞组件:
TWS模式: 安装磁吸扬声器
OWS模式: 拆卸磁吸扬声器

舒适度调节
可依据用户耳廓轮廓自动调节至最佳佩戴角度, 实现稳固贴合与舒适体验

取出耳机并配对

如果您是第一次使用耳机, 请将两个耳机从充电仓中取出, 其中一个耳机的LED灯将会交替闪烁白灯和红灯, 表示它们处于配对模式。

注:
•如果耳机未与任何设备配对, 打开后会自动进入配对模式。配对成功后, 您会听到两声滴声。
•如果耳机之前已配对, 打开后会自动重新连接。连接时您会听到嘟嘟声。

如何佩戴耳机

1

2

3

开机和关机

开机
自动开机: 将耳机从充电仓中取出, 耳机开机。
手动开机: 长按3秒, 耳机开机。

关机
自动关机: 耳机放入充电仓中, 耳机关机。
手动关机: 长按5秒, 耳机关机。

注: 当耳机开机后, 3分钟内与蓝牙设备配对, 便会自动关机; 当配对的蓝牙设备超出信号有效连接距离, 且未重新连接时, 3分钟后, 耳机自动关机。

连接到蓝牙设备

在您的设备上, 打开蓝牙并选择连接到“HTC NE22”。

基本操作

开机关机
电源按钮
音量+
音量-
播放/暂停
上一首
下一首
通话模式
挂断电话
清除蓝牙配对历史记录

游戏模式
X1
X2
X3
X4
X5
X6

如何清除蓝牙配对历史记录

双耳从充电仓取出后会启动自动配对, 耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下, 分别对左耳机和右耳机连续五次多步功能键, 提示音“嘟”四声后, 耳机自动关机后将双耳机放回充电仓, 再双击两只耳机出, 双耳机会自动配对, 完成后即可连接蓝牙设备使用。
适用于以下情况:
A: 双耳无法配对时, 单边音时, 双配对名时。
B: 使用单耳机分别连接不同蓝牙设备时。
C: 清除连接的所有蓝牙设备时。

重要安全说明

在产品中有毒物质名称及含量

零件名称

有害物质

RoHS豁免(Pb)

REACH SVHC (Pb)

附录 B 类物质 (Pb/Bis)

印刷电路板组件

外壳等小结构件

本产品符合 RoHS 11364 的规定限制。
○ 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
× 表示该有害物质至少在该部件的某一均质材料中的含量超过 GB/T 26572 规定的限量要求。
表中标记 “X” 的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

个人安全说明

危险安全说明

小心使用本产品, 并将其存放在没有极端温度、高电压和潮湿的清洁环境中, 确保产品存放在不易弯曲或挤压的地方。
• 维修和更换只能由授权的售后服务人员进行。
请勿自行拆卸或更换产品的任何部件, 以防受伤或损坏设备。
对产品的任何未经授权修改将使保修无效。
• 仅在允许蓝牙传输的环境中使用本产品。

个人安全说明

如果产品有明显缺陷或出现膨胀或温度过高等异常, 请勿使用。
• 执行需要全神贯注的高风险任务时, 请勿使用本产品。
为了维护您的听力, 请勿长时间高音量聆听。
• 请随产品及包装放在儿童和宠物接触不到的地方, 以防止吞食和窒息等事故

售后客服电话: 400939381

4

<div> <div> </div> <div> <div>Wireless Earphones 22</div> </div> </div> <div> </div> <div> <div>Quick Start Guide</div> <div>HTC NE22</div> </div>	<div> <div>Product Specifications</div> <div>Model: HTC NE22</div> </div> <div> <div>Bluetooth</div> <div>Range: ≈10 m</div> <div>Version: 6.0</div> </div> <div> <div>Speaker</div> <div>Diameter: 13 mm</div> <div>Impedance: 32 Ω</div> </div> <div> <div>Earphone power</div> <div>Input: 5 V≈35 mA</div> <div>Battery capacity: 35 mAh</div> <div>Battery life: ≈ 4.5 hrs</div> <div>Charging time: ≈ 1.5 hrs</div> </div> <div> <div>Charging case power</div> <div>Input: 5 V≈300 mA</div> <div>Output: 5 V≈70 mA</div> <div>Battery capacity: 300 mAh</div> <div>Charging time: ≈ 1.5 hrs</div> <div>Earphone recharges: 3 charges (when case is fully charged)</div> </div> <div> <div>2</div> </div>	<div> <div>What's in the box</div> </div> <div> <div> <div>Charging case</div> </div> <div> <div>2 Earphones</div> </div> <div> <div>Quick Start Guide USB-C cable 6 ear tips</div> </div> <div> <div>3</div> </div> </div>	<div> <div>Components</div> </div> <div> <div> <div>Touchpad -----</div> <div>Earphone LED -----</div> </div> <div> <div>Charging contact -----</div> <div>Earphone speaker -----</div> </div> <div> <div>Charging case LED -----</div> <div>USB Type-C port -----</div> </div> <div> <div>4</div> </div> </div>	<div> <div>Magnetic self-adaptive speakers</div> </div> <div> </div> <div> <div>Switch between True Wireless Stereo (TWS) and Open Wireless System (OWS) modes</div> <div>TWS Mode: Attach the magnetic speakers.</div> <div>OWS Mode: Detach the magnetic speakers.</div> </div> <div> </div> <div> <div>Comfort adjustment</div> <div>Automatically adapts to the user's ear contour for optimal wearing angle, achieving a secure fit and comfortable experience.</div> <div> <div>5</div> </div> </div>	<div> <div>To ensure earphones are being charged when in charging case</div> <div>1. Rotate the earbud so that it's scale marker is aligned with the triangular marker on the earphone (see illustration.)</div> <div>2. Place each earphone into its corresponding charging slot.</div> <div>3. Check that the earphone LED lights up solid red.</div> </div> <div> </div> <div> <div>Note: If charging issues occur, redo the steps above to ensure proper contact between the earphones and charging case. Clean the charging case's magnetic area weekly with a dry, soft cloth to maintain optimal magnetic and charging performance.</div> <div> <div>6</div> </div> </div>	<div> <div>Take out and pair the earphones</div> </div> <div> </div> <div> <div>If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and red alternately, indicating that they are in pairing mode.</div> <div> <div>Note:</div> <ul style="list-style-type: none"> If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect. </div> <div> <div>7</div> </div> </div>	<div> <div>How to put on the earphones</div> </div> <div> </div> <div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div> <div>8</div> </div> </div>	<div> <div>Power on and off</div> </div> <div> </div> <div> <div>Power on</div> <div>Taking the earphones out of the charging case will automatically turn them on.</div> <div>To manually turn on each earphone, press and hold the touchpad for three seconds.</div> <div>Power off</div> <div>Placing the earphones in the charging case will automatically turn them off.</div> <div>To manually turn off each earphone, press and hold the touchpad for five seconds.</div> <div> <div>Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.</div> </div> <div> <div>10</div> </div> </div>																	
<div> <div>Connect to Bluetooth device</div> </div> <div> </div> <div> <div>On your device, turn on Bluetooth and choose to connect to "HTC NE22".</div> </div> <div> <div>11</div> </div>	<div> <div>Basic operations</div> </div> <div> </div> <div> <div>Power on/off</div> <div> <div>3s/5s</div> </div> <div> <div>Phone mode</div> <div> <div>x1</div> <div> <div>x2s</div> </div> </div> <div> <div>Music mode</div> <div> <div>x2</div> <div> <div>x2</div> </div> <div> <div>x3</div> <div> <div>x3</div> </div> </div> <div> <div>Reset earphones</div> <div> <div>x1</div> <div> <div>x2s</div> <div> <div>x2s</div> </div> </div> </div> <div> <div>12</div> </div> </div></div></div></div></div>	<div> <div>Key functions</div> <ul style="list-style-type: none"> Play/Pause: Tap either earphone once. Volume up: Tap the right earphone twice. Volume down: Tap the left earphone twice. Play previous track: Tap the left earphone three times. Play next track: Tap the right earphone three times. Answer/End call: Tap either earphone once. Reject call: Press and hold either earphone for two seconds. Activate voice assistant: Press and hold the left earphone for two seconds. <div> <div>Note: When using a single earphone only, press and hold the active earphone for two seconds.</div> </div> <ul style="list-style-type: none"> Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.) <div> <div>Note: Mode switching is disabled when you're using a single earphone only.</div> </div> <div> <div>Indicator LEDs</div> <table> <tr> <th>Earphone LED</th><th>Status</th></tr> <tr> <td>Blinking white and red</td><td>Both earphones: Powered on</td></tr> <tr> <td>Single earphone: Unpaired</td><td></td></tr> <tr> <td>Solid red</td><td>Charging</td></tr> <tr> <td>Off</td><td>Paired or fully charged</td></tr> <tr> <th>Charging case LED</th><th>Status</th></tr> <tr> <td>Solid white</td><td>Earphones charging</td></tr> <tr> <td>Blinking red</td><td>Case charging</td></tr> <tr> <td>Solid red</td><td>Case fully charged</td></tr> </table> </div> <div> <div>13</div> </div> </div>	Earphone LED	Status	Blinking white and red	Both earphones: Powered on	Single earphone: Unpaired		Solid red	Charging	Off	Paired or fully charged	Charging case LED	Status	Solid white	Earphones charging	Blinking red	Case charging	Solid red	Case fully charged	<div> <div>How to reset the earphones</div> <div>If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.</div> </div> <div> </div> <div> <div>14</div> </div>	<div> <div>Important Safety Instructions</div> </div> <div> <div>Carefully read all the safety instructions in this document before using the product.</div> </div> <div> <div>General safety instructions</div> <ul style="list-style-type: none"> Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. Only use the product in environments where Bluetooth transmission is permitted. <div> <div>Personal safety instructions</div> <ul style="list-style-type: none"> Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. Do not use the product when performing high-risk tasks that require your full attention. For your hearing protection, do not listen at high volume for long periods. Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. </div> <div> <div>15</div> </div> </div>	<div> <div>Battery safety instructions</div> </div> <div> <div>The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.</div> </div> <ul style="list-style-type: none"> Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. Keep the product dry and away from liquids or moisture. Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. Do not use the product while charging. Do not leave the product charging for longer than eight hours. Dispose of the product responsibly according to your local waste management guidelines. <div> <div>16</div> </div>	<div> <div>FCC ID: 2BHJR-NE22</div> </div> <div> <div>FCC Caution</div> </div> <div> <div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div> </div> <div> <div>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div> </div> <div> <div>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div> </div> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. <div> <div>17</div> </div>	<div> <div>Consult the dealer or an experienced radio/TV technician for help.</div> </div> <div> <div>*RF warning for Portable device:</div> </div> <div> <div>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div> </div> <div> <div>US REP</div> <div> <div>Company name: MIRAMONT SOLUTIONS LLC</div> <div>Company address: 34218 HOURGLASS ST. TEMECULA, CA 92592 United States</div> <div>FRN: 0036313569</div> <div>Agent name: Wenyi Wang</div> <div>Title: CEO</div> </div></div>
Earphone LED	Status																								
Blinking white and red	Both earphones: Powered on																								
Single earphone: Unpaired																									
Solid red	Charging																								
Off	Paired or fully charged																								
Charging case LED	Status																								
Solid white	Earphones charging																								
Blinking red	Case charging																								
Solid red	Case fully charged																								