











 
 
 
 
 <p>Quick Start Guide HTC NE27</p>	<p>Product Specifications Model: HTC NE27</p> <p>Bluetooth Range: 10 m Version: 6.0</p> <p>Speaker Diameter: 14 mm Impedance: 16 Ω</p> <p>Earphone power Input: 5 V/50 mA Battery capacity: 50 mAh Battery life: 6.5 hrs Charging time: 1.5 hrs</p> <p>Charging case power Input: 5 V/400 mA Output: 5 V/200 mA Battery capacity: 1000 mAh Charging time: 1.5 hrs Earphone recharge: 3 charges (when case is fully charged)</p>	<p>What's in the box</p> 	<p>Components</p> 	<p>Take out and pair the earphones</p> 	<p>How to put on the earphones</p>    	<p>Power on and off</p>   <p>Power on Opening the charging case will automatically turn on the earphones. To manually turn on each earphone, press and hold the touchpad for three seconds.</p> <p>Power off Placing the earphones in the charging case and closing the case will automatically turn them off. To manually turn off each earphone, press the touchpad for five times.</p> <p>Note: If the earphones are not paired with a Bluetooth device when the charging case is closed, the earphones will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.</p>													
<p>Connect to Bluetooth device</p>  <p>On your device, turn on Bluetooth and choose to connect to 'HTC NE27'.</p>	<p>Basic operations</p>  <p>Key functions</p> <ul style="list-style-type: none"> Play/Pause: Tap either earphone once. Volume up: Tap the right earphone twice. Volume down: Tap the left earphone twice. Play previous track: Tap the left earphone three times. Play next track: Tap the right earphone three times. Answer/End call: Tap either earphone once. Reject/End call: Tap either earphone twice. Activate voice assistant: Tap either earphone for two seconds. Earphone night running light: Press and hold either earphone for 2 seconds to activate night mode. Press and hold again for 2 seconds to switch to Constant Light Mode. Constant Light Mode: Press and hold again for 2 seconds to turn off. <p>Indicator LEDs</p> <table border="1"> <tr> <td>Earphone LED</td> <td>Status</td> </tr> <tr> <td>Blinking white and red</td> <td>Both earphones: Powered on</td> </tr> <tr> <td>Solid white</td> <td>Charging</td> </tr> <tr> <td>Off</td> <td>Paired or fully charged</td> </tr> <tr> <td>Charging case display screen</td> <td>Status</td> </tr> <tr> <td>Solid green icon</td> <td>Case charging</td> </tr> <tr> <td>Solid white icon</td> <td>Case fully charged</td> </tr> </table> <p>Note: The display screen turns off after 30 seconds of inactivity to protect privacy and save power.</p>	Earphone LED	Status	Blinking white and red	Both earphones: Powered on	Solid white	Charging	Off	Paired or fully charged	Charging case display screen	Status	Solid green icon	Case charging	Solid white icon	Case fully charged	<p>How to reset the earphones</p>  <p>If the earphones fail to pair or reconnect to each other, reset them by pressing and holding both earphones simultaneously for five seconds. Note: Resetting the earphones will clear the Bluetooth pairing history.</p>	<p>Case Display Screen: Basic Operations</p>  <p>Multi-Function Button Operations</p>  <p>Single-click: Turn display on/off Double-click: Switch themes (default: Kaleidoscope) in menu interface Long-press: 2 seconds: Access system menu - [About] (The screen will turn black) [Power off]</p>	<p>Case Display Screen: Feature Overview</p>  <p>Home Screen Swipe right: Access the Menu Interface Swipe left: Open Quick Access Menu Swipe left: Enter Music Interface</p> <p>Commonly Used Menu Click the icon to access the corresponding function interface.</p> <p>Sound Effect Switching Click icon: Switch Corresponding Sound Effect</p>	<p>Music Playback Functions</p>  <p>Volume Control Previous Track Play/Pause Next Track TF Card Switching</p>
Earphone LED	Status																		
Blinking white and red	Both earphones: Powered on																		
Solid white	Charging																		
Off	Paired or fully charged																		
Charging case display screen	Status																		
Solid green icon	Case charging																		
Solid white icon	Case fully charged																		
<p>TIKTOK Page Flipping and Like Function</p> <p>After connecting the earphones to the mobile phone and opening the TIKTOK app, you can flip through the previous video, switch to the next video, and give a like using the touchpad.</p> <p>AssistiveTouch in Settings > Accessibility > Touch > AssistiveTouch</p> <p>1. This function is only available for use with TIKTOK software. 2. This feature may have compatibility issues with certain phones, and some phones may not support this feature. 3. If this feature is unavailable, please disregard it.</p> 	<p>Find headphones</p>  <p>Click to find left or right earbud when connected to the charging case.</p> <p>Mode selection</p>  <p>Click the corresponding icon to select Music Mode or Low-Latency Game Mode when connected to the charging case.</p> <p>Activate Voice Assistant</p>  <p>Click the icon to activate the voice assistant.</p>	<p>Flashlight</p>  <p>Click to turn on. Click again to turn off.</p> <p>Earphone Night Running Light</p>  <p>Click to turn on. Click again to turn off.</p> <p>Counter</p>  <p>Click the plus sign to count. Click reset to restart.</p> <p>Mini Games</p>  <p>Flappy Bird: Click the screen to navigate through obstacles and maintain flight. Muyu: Click to accumulate points. Swipe right to exit.</p> <p>Telephone</p>  <p>Constant Light Mode: Off Breathing Mode: On</p>	<p>Counter</p>  <p>Requires Bluetooth connection to a compatible device.</p> <p>Mini Games</p>  <p>1.Native camera exclusively - Only works with the device's pre-installed camera. 2.Only for portrait photography apps are unsupported.</p> <p>Calendar</p>  <p>2.Compatibility Limitations - Functional restrictions 3.Only for portrait photography apps are unsupported.</p> <p>Stopwatch</p>  <p>3.Non-functional handling - Disable this feature if non-functional handling is not appropriate.</p>	<p>Camera Control</p>  <p>Requires Bluetooth connection to a compatible device.</p> <p>Brightness Control</p>  <p>Requires Bluetooth connection to a compatible device.</p> <p>Wallpaper settings</p>  <p>Long press the main interface for 3 seconds to switch wallpaper styles.</p>	<p>Theme Selection</p>  <p>Swipe up/down to adjust screen brightness.</p> <p>Menu Background</p>  <p>Cycle through available themes. Default: Kaleidoscope Theme.</p>	<p>Time settings</p>  <p>Set current time/date and format preferences.</p> <p>Language settings</p>  <p>16 language options available. Requires re-selection after factory reset.</p>													
<p>Touch Wake-up</p>  <p>Enable to wake screen by touch. Disable to prevent accidental activation. Default: Enabled.</p> <p>AI Translation</p>  <p>Displays translated content synchronized with the connected app.</p>	<p>Playback Source Switching</p>  <p>Local Playback: Transfer songs (including lyric files) to TF card. 2. Transfer the paired Bluetooth earbuds icon to connect. 3. Long-press the earbuds when both earbuds and TF card connect to charging case.</p> <p>AI Translation</p>  <p>Displays translated content synchronized with the connected app.</p>	<p>Important Safety Instructions</p> <p>General safety instructions</p> <ul style="list-style-type: none"> Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be exposed to direct sunlight. Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to dismantle or replace any part of the product yourself to prevent damage to the device. Any unauthorized modification to the product voids the warranty. Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions <ul style="list-style-type: none"> Do not use the product if it is obviously defective or exhibits unusual behavior, such as overheating or excessive heating. Do not use the product when performing high-risk tasks that require your full attention. For your hearing protection, do not listen at high volume for long periods. Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 	<p>Battery safety instructions</p> <p>FCC ID: 2BHJR-NE27</p> <p>FCC Caution</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Notes: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 	<p>US REP</p> <p>Company name: HIRAMONT SOLUTIONS LLC Company address: 9228 HOURGLASS ST, TEMECULA, CA 92590 United States FRN: 003633369 Agent name: Wenyi Wang Email: wenyi.wang@hiramontsolutions.com Phone: 951-401-3633</p>	<p>Legal notice</p> <p>Trademarks and permissions</p> <p>HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2025 by Shenzhen Brands World Technology Co., Ltd. All rights reserved.</p> <p>THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.</p>														

提示卡

颜色:白色
单粉卡, 双面印刷

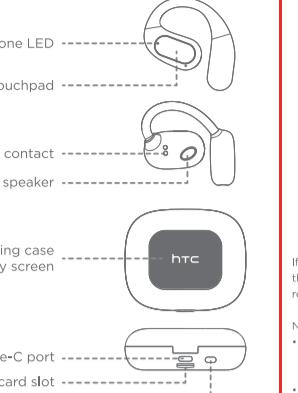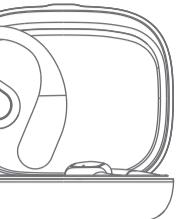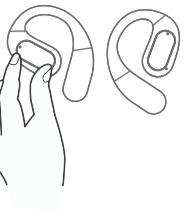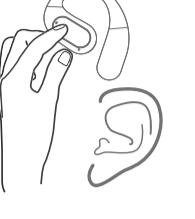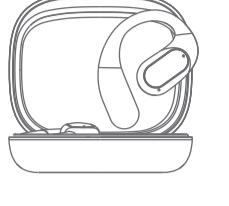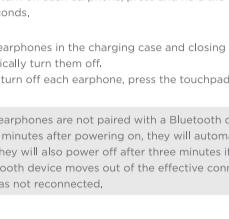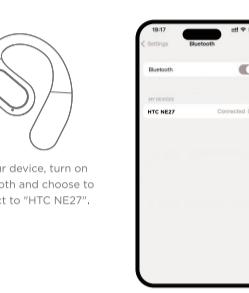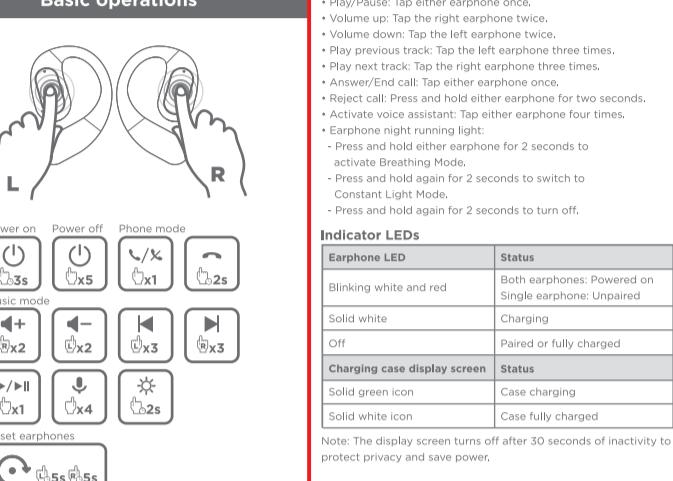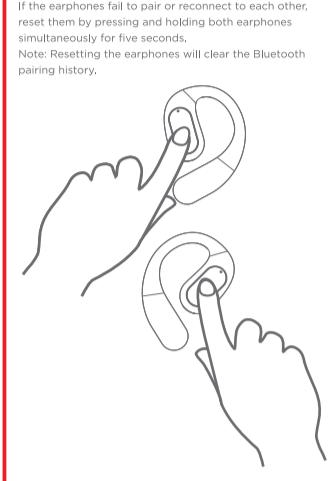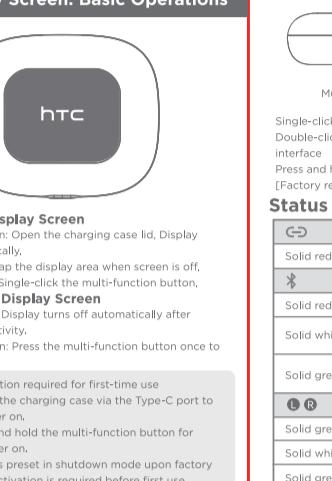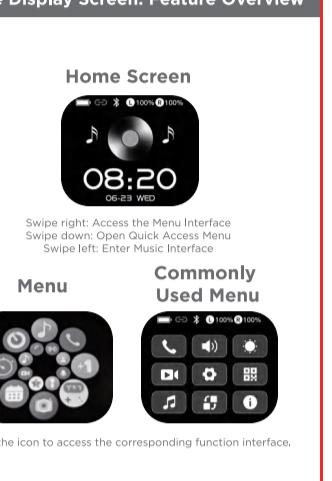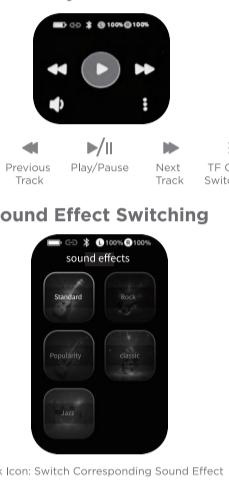