

**快速入门指南**

使用前请阅读使用说明  
HTC NE32

**产品规格**

型号: HTC NE32

**蓝牙**

范围: ≈ 10m  
版本: V6.0

**喇叭**

直径: 10mm  
阻抗: 16Ω

**耳机功率**

输入: 5V=40mA  
电池容量: 40mAh  
使用时间: ≈ 5小时  
充电时间: ≈ 1.5小时

**充电仓功率**

输入: 5V=500mA  
输出: 5V=80mA  
电池容量: 500mAh  
充电时间: ≈ 2小时  
充电仓充满电时, 能给耳机充电约3次

**物品清单**

充电仓

2 耳机

快速入门指南

USB-C 充电线

**部件**

耳机指示灯

多功能触摸键

充电触点

耳机喇叭

充电仓显示屏

多功能按键

Type-C 充电口

**取出耳机并配对**

如果您第一次使用耳机, 请将两个耳机从充电仓中取出。其中一个耳机的LED灯将会闪烁白灯, 表示它们处于配对模式。

注:

- 如果耳机未与任何设备配对, 打开后会自动进入配对模式。
- 配对成功后, 您会听到两声滴响。
- 如果耳机之前已配对, 打开后会重新连接。连接时您会听到嘟嘟声。

**如何佩戴耳机**

1

2

**开机和关机**

开机

自动开机: 将耳机从充电仓中取出, 耳机开机。  
手动开机: 长按3秒, 耳机开机。

关机

自动关机: 耳机放入充电仓中, 耳机关机。  
手动关机: 长按3秒, 耳机关机。

注: 当耳机开机后, 3分钟内与蓝牙耳机配对, 便会自动关机; 当配对的蓝牙耳机接收信号有效连接距离, 且未重新连接时, 3分钟后, 耳机自动关机。

**连接到蓝牙耳机**

在您的设备上, 打开蓝牙并选择连接到“HTC NE32”。

**基本操作**

开机关机

音量控制

播放/暂停

上一曲

下一曲

切换模式

清除蓝牙配对历史记录

**功能操作**

- 暂停/播放: 轻触任一耳机一次
- 音量加: 轻触右耳机二次
- 音量减: 轻触左耳机二次
- 上一曲: 轻触左耳机三次
- 下一曲: 轻触右耳机三次
- 接听/挂断电话: 轻触任一耳机一次
- 通话拒接: 按住任一耳机一秒
- 启动语音助手: 按压左耳机秒

游戏模式: 当耳机使用时, 按下已开机的耳机1秒, 即可激活语音助手

游戏模式与音乐模式切换: 按住任意耳机2秒均可切换

注: 单耳使用时, 无法切换游戏模式和音乐模式

注: 出厂设置默认为音乐模式

注: 通知音较大的提醒消息

**指示灯显示**

耳机指示灯	状态
白灯闪烁	两个耳机: 开机 单耳机: 未配对
无灯	配对成功或充满电

**如何清除蓝牙配对历史**

双耳从充电仓取出后会自动开始配对, 耳机未与蓝牙耳机连接或耳机从蓝牙耳机取消连接状态下, 分别对左耳机和右耳机连续五次多触控, 提示音“嘀”四声后, 耳机自动关机后将双耳机放回充电仓, 再双击耳机取出, 双耳机会自动配对, 完成后即可连接蓝牙耳机使用。

适用于以下情况:

- A: 双耳无法配对时, 单边配对, 双耳配对时。
- B: 使用单耳机时无法连接蓝牙耳机时。
- C: 清除连接的所有蓝牙耳机时。

特别提示:

当单边耳机出现无声, 或者无法配对时, 请按A以恢复重置操作。

**充电仓基本操作**

打开显示屏

触控表面: 非触摸区域时, 轻触屏幕区域二次  
按键反馈: 单击多功能按钮

**多功能按键功能**

单击: 打开关闭屏幕。  
三击: 充电仓与蓝牙耳机配对。  
长按4秒: 进入系统菜单: “关机”和“重启”, “拨出出厂”, “短按3秒”: 关闭状态下, 再次轻触3秒: 开机状态下, 恢复出厂设置。

**图标介绍**

图标	状态
红色	耳机在充电仓中, 未连接到耳机
白色	充电仓已连接到耳机, 但耳机未连接到手机
蓝色	状态
白色	充电仓已连接到耳机, 且耳机已连接到手机
灰色	状态
白色	耳机充电中
灰色	耳机使用中

**锁屏界面**

滑动解锁屏幕

解锁屏幕后, 向左或向右滑动即可浏览这些功能

**菜单**

点击进入对应功能界面

**语言设置**

可切换不同国家/地区的语言。

恢复出厂设置后会将语言重置为英语

**触摸屏唤醒**

打开时可以触屏点亮屏幕  
关闭时通过触碰点亮屏幕  
默认打开

**背景壁纸**

可切换所有背景

**时间设置**

可设置当前的时间和日期、时间格式

**表盘设置**

可在主界面长按3秒切换其他表盘壁纸

**游戏中**

小马: 点击屏幕, 让马穿过障碍物

**亮度调节**

调整亮度: 上下滑动调节亮度  
亮屏时: 将屏幕左上角快捷菜单调出, 可选择亮屏的时间

**翻译**

同声传译/中英翻译内容

**重要安全说明**

在使用本产品之前, 请仔细阅读本说明书中的所有安全说明。

**常规安全说明**

- 小心使用本产品, 并将其存放在没有极端温度、潮湿高压和潮湿的液体环境中, 除本产品存放处不是潮湿或高压的场所。
- 维修和更换只能由授权的售后服务人员进行。
- 请勿自行拆卸或更换产品的任何部件, 以防止造成损坏设备。
- 对本产品的任何未经授权的修改都可能使保修无效。
- 避免在本产品有易燃的环境中使本产品。

**个人安全说明**

- 如果产品有明显缺陷或出现异常温度过高等异常, 请勿使用。
- 执行需要重点关注安全风险任务时, 请勿使用本产品。
- 为了保护您的听力, 请勿长时间高音量收听。
- 请勿将本产品放入火中、高温、高压或潮湿的环境中, 以防发生灼伤或触电等事故。

**电池安全说明**

该产品内置可充电电池, 请阅读以下说明, 确保安全使用和处置。

- 请勿将产品长时间暴露在热源中, 如明火或阳光直射。
- 仅将产品存放在环境温度在 0°C 至 35°C (32°F 至 95°F) 的环境中。
- 请勿将产品放入火中、高温、高压或潮湿的环境中, 以防发生灼伤或触电等事故。
- 保持产品干燥, 远离液体或湿气。
- 只能使用符合 FCC 或 CCC 认证, 输出电压为 DC 5V/1A 的充电器。
- 充电时不要移除产品。
- 产品充电时间不得超过 2 小时。
- 按照当地的废物管理规定负责任地处理产品。

**法律声明**

商标和专利:

HTC 和 HTC 标志为 HTC 公司的商标。

授权经销商: 卜兰沃德科技有限公司。

2023 版权 © 深圳市卜兰沃德科技有限公司。

本文仅供参考, 不构成任何形式的保证, 本公司保留所有权利。

**HTC**  
Wireless Earphones 32

**Product Specifications**

Model HTC NE32

**Bluetooth**  
Range: ≈ 10 m  
Version: 6.0

**Speaker**  
Diameter: 10 mm  
Impedance: 16 Ω

**Earphone power**  
Input: 5 Vm40 mA  
Battery capacity: 40 mAh  
Battery life: ≈ 5 hrs  
Charging time: ≈ 1.5 hrs

**Charging case power**  
Input: 5 V=500 mA  
Output: 5 V=80 mA  
Battery capacity: 300 mAh  
Charging time: ≈ 2 hrs  
Earphone recharges 3 charges (when case is fully charged)

**Quick Start Guide**  
**HTC NE32**

**What's in the box**

Charging case

2 Earphones

Quick Start Guide

USB-C cable

**Components**

Earphone LED

Touchpad

Charging contact

Earphone speaker

Charging case display

Multifunction button

USB Type-C port

**Take out and pair the earphones**

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white, indicating that they are in pairing mode.

Note:

- If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on.
- You'll hear two beeps when pairing is successful.
- If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

**How to put on the earphones**

1

2

3

4

**Power on and off**

**Power on**  
Taking the earphones out of the charging case will automatically turn them on.  
To manually turn on each earphone, press and hold the touchpad for three seconds.

**Power off**  
Placing the earphones in the charging case will automatically turn them off.  
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

**Connect to Bluetooth device**

On your device, turn on Bluetooth and choose to connect to "HTC NE32".

**Basic operations**

Power on/off

Phone mode

Music mode

Reset earphones

**Key functions**

- Play/Pause: Tap either earphone once.
- Volume up: Tap the right earphone twice.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/End call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds.
- Activate voice assistant: Press and hold the left earphone for two seconds.

Note: When using a single earphone only, press and hold the active earphone for two seconds.

- Switch between Music and Music mode: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)

Note: Mode switching is disabled when you're using a single earphone only.

**Indicator LEDs**

Earphone LED	Status
Blinking white	Both earphones: Powered on Single earphone: Unpaired
Off	Paired or fully charged

**How to reset the earphones**

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.

**Case display: Basic operations**

**Turn on display**  
Tap the display twice or press the multifunction button once.

**Turn off display**  
Press the multifunction button once to turn off the display. The display automatically turns off after 30 seconds of inactivity.

Note: Initial activation required for first-time use.  
Do any of the following:  
- Charge the charging case via the USB Type-C port.  
- Press and hold the multifunction button for eight seconds.

**Multifunction button operations**

Press once: Turn the screen on/off.  
Press three times: Link earphones to charging case.  
Press and hold for four seconds to: Open the system menu ("Restore Factory Settings" and "Screen Off" or "Restart").  
Press and hold for five seconds to: Power on the screen.  
Press and hold for eight seconds to: Restore to factory settings.

**Status Icons Guide**

Icon	Status
Solid red	Earphones in case, not connected to phone
Solid white	Case connected to earphones, but earphones offline
✖	Status
Solid white	Case connected to earphones, earphones paired to phone
🔋	Status
Solid white	Earphones charging
Solid gray	Earphones in use

**Case display: Feature overview**

**Lock screen**  
Swipe to unlock the screen.

**Menu (Gear style)**  
Tap an item to access its options.

**Music**  
Make sure your earphones are connected to your phone and the TikTok app is open.  
For iOS devices, Assistive Touch must be turned on in Settings > Accessibility > Touch > Assistive Touch.

**TikTok**  
Switch to the current video. Like the next video.  
This feature only works with the TikTok app and may not be compatible with all phone models.

**Equalizer**  
Switch between the preset equalizer settings.

**Find My Earbuds**  
Tap 🔊 or 📶 depending on which earbuds you want to find.  
Tap again when you find the earbuds to stop the beeps.

**Camera**  
Make sure your earphones are connected to your phone.

Tap 📷 to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models.

**Activate Voice Assistant**  
Tap 🗣️ to activate your phone's voice assistant.

**Game**  
Birds: Tap the screen to navigate the bird through the obstacles.

**Brightness**  
Brightness Control: Swipe up or down.  
Screen timeout: Swipe left to select a time for the screen to turn off when left idle.

**Translation**  
Displays translated content synchronized with the connected app.

**Settings**  
Tap an item to access its options.

**Wallpaper**  
On the home screen, press and hold the screen for three seconds to change the wallpaper. You can also change it in Settings.

**Background Wallpaper**  
Toggle between background options.

**Time settings**  
Set current time/date and format preferences.

**Language**  
Switch between different country/language languages. Requires selection after factory reset.

**Tap to wake**  
Turn on or off to allow tapping the display to turn it on. Turn off to prevent display from accidentally turning on.

**Important Safety Instructions**  
Carefully read all the safety instructions in this document before using the product.

**General safety instructions**

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

**Personal safety instructions**

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents caused by swallowing and choking.

**Battery safety instructions**  
The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-proof, smoke-proof, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

**FCC ID: 2BHJR-NE32**  
FCC Caution  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

\*Warning for Portable device:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**US REP**

Company name: MIRAMONT SOLUTIONS LLC Company address: 3428 HOURSGLASS ST, TEMECULA, CA 92592 United States FRN: 0306333569 Agent name: Wenyi Wang Title: CEO Email: wenyiwang@miramontsolutions.com Phone: 951 401 3633
---

**Customer Service Email: service@yhemil.net**

**Legal notice**  
**Trademarks and permissions:**  
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.  
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd.  
All rights reserved.  
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

**htc**