 


[illegible]

 
hTC Wireless Earphones 33

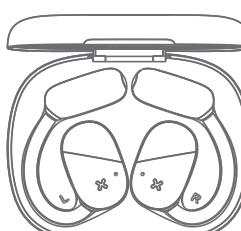

Product Specifications
Model: HTC NE33
Bluetooth
Range: <10 m
Version: 6.0
Speaker
Diameter: 16.2 mm
Impedance: 16 Ω
Earphone power
Input: 5 V=55 mA
Battery capacity: 55 mAh
Battery life: <6.5 hrs
Charging time: <1.5 hrs
Charging case power
Input: 5 V=400 mA
Battery capacity: 500 mAh
Battery charging: 400mAh
Charging time: <1.5 hrs
Earphone recharges: 3 charges (when case is fully charged)

Quick Start Guide HTC NE33

Power on and off

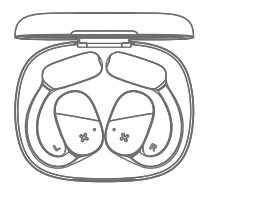


Power on
Opening the charging case will automatically turn on the earphones.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case and closing the case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

 
Case display: Feature overview

Lock screen




Swipe left or right to unlock the screen.

Menu

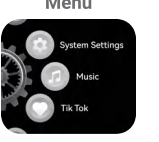


Tap on menu to access to options, swipe right to exit the interface.

 Music

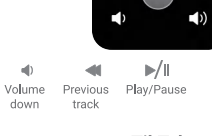


TikTok

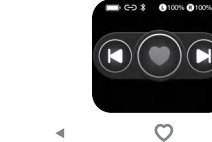 


For iOS devices, AssistantTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.

 Time Settings

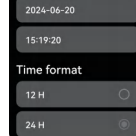


Tap the date or time to edit it. Choose also the time format you want to use.

Language



 
Tap the language to use for the charging case display.

Touch to wake up



Turn on or off the earpiece tapping the display to turn it on. Turn off to prevent display from accidentally turning on.


What's in the box

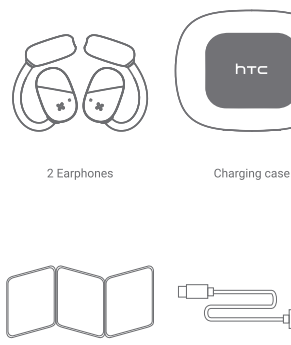

Quick Start Guide

USB Type-C cable

 Basic operations

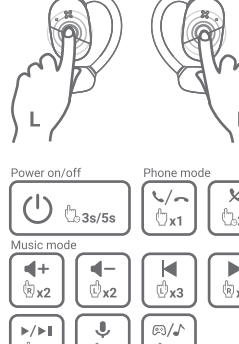

Power on/off


Music mode

Phone mode

Indicator LEDs


Earphone LED	Status
Blinking orange and white	Both earphones. Powered on Single earphone. Unpaired
Solid white	Charging
Off	Paired or fully charged

Equalizer



Tap a preset equalizer to use it.

 Find My Earbuds

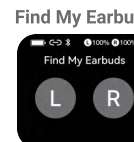


Tap (O) or (O) depending on which earphone you want to find. Tap again when you find the earphone to stop the beep.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust, perfume, smoke, perfume, high temperature, high pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

 Components

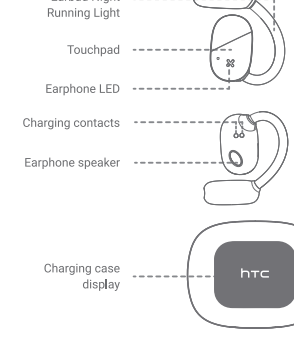


Key functions

- Play/Pause: Tap either earphone once.
- Volume up: Tap the right earphone twice.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/call call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds.
- Activate voice assistant: Tap the left earphone four times.
- Note: When using a single earphone only, tap the active earphone four times to activate the voice assistant.
- Switch between Game and Music mode: Tap the right earphone four times to switch between modes. (The buzzer notification sound indicates Game mode).
- Note: Mode switching is disabled when you're using a single earphone only. Music mode is the default mode from the factory.
- Earhook light - running light: Press and hold either earphone for two seconds to turn on/off, press and hold either earphone for two seconds again to turn on constantly, press and hold either earphone for two seconds once more to make it breathe.

How to reset the earphones

 If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.

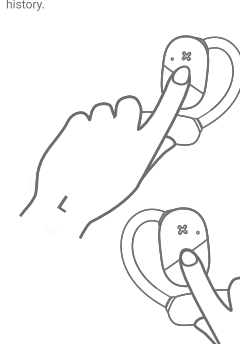

Camera

Make sure your earphones are connected to your phone.

Tap (C) to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models.

AI Voice

Tap (O) to activate your phone's voice assistant.

Game

Tap (G) to activate your phone's game mode.

Birds

Tap the screen to navigate the bird through the obstacles.

FCC ID: 2BHR-JR-NE33


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Take out and pair the earphones

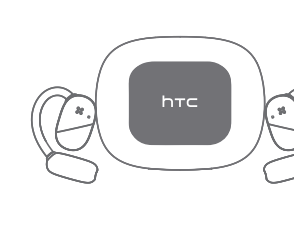


If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink orange and white alternately, indicating that it is in pairing mode.

Note:


- If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
- If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.

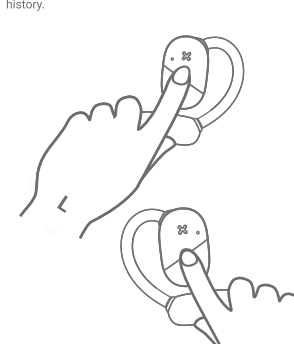

Headphone Light




Tap (H) to show or to hide the light.

Brightness

Screen timeout. Swipe left to select a time for the screen to turn off when left alone.

Translation

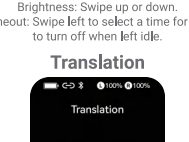


Displays standard content synchronized with the connected app.

 
US REP

Company name: MIRAMONT SOLUTIONS LLC
Company address: 19 GREGORYTOWN, INDIANA, IN 46121
United States
FIRN: 006313360
Agent name: Wendy Wang
Title: CEO
Email: wenywang@miramontsolutions.com
Phone: 951 401 3633

How to put on the earphones



Case display: Basic operations

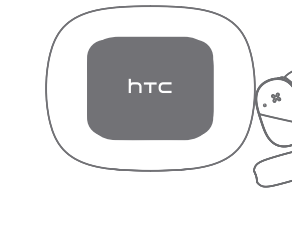

Turn on display

- Open the charging case lid.
- Tap the display (Touch to wake up must be on).
- Press the multifunction button once.

 
Turn off display

- Press the multifunction button once to turn off the display. The display automatically turns off after 30 seconds of inactivity.

Note: Initial activation required for first-time use. Do any of the following:


- Change the charging case via the USB Type-C port.
- Press and hold the multifunction button for eight seconds.

System Settings

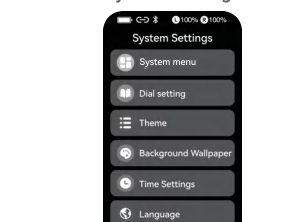

Tap on menu to access its options.

 System Menu

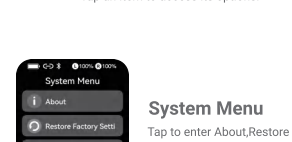

提示卡

颜色:白色
单粉卡

86mm

86mm

Getting started

Power on the charging case

Press and hold the multifunction button for eight seconds.

Multifunction button

Pair earphones to phone

1. Remove the earphones from the charging case.
2. Turn on Bluetooth on your phone. Locate "HTC-NE33" in the Bluetooth settings, and then tap Connect/Pair. This also synchronizes the time on the charging case.

Basic operations

Music mode

Phone mode

Power on/off

Reset earphones

Earbud Night Running Light

Thank you for choosing our product. If you encountered any issues or experienced something unsatisfactory during the shipping process, please don't leave a negative review. Instead, reach out to us at 7@hifi-earphone.com. We'd love to help and make it right for you.

Helpful reminders when charging

1. Incorrect use may deform the ear hooks, potentially causing charging issues. If this happens, gently adjust the ear hooks to ensure the earphones fit securely in the charging case.

Charging bin ejector

Charging contacts

2. Dust or oxidation on the charging contacts or bin ejectors may result in charging issues. Make sure to keep the charging contacts and bin ejectors clean by gently wiping them with rubbing alcohol to ensure normal charging.

Thank you for choosing our product. If you encountered any issues or experienced something unsatisfactory during the shipping process, please don't leave a negative review. Instead, reach out to us at 7@hifi-earphone.com. We'd love to help and make it right for you.

139mm