MINISO

PRODUCT MANUAL

Wireless Earbud X62

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

Specification of Product

Model of Product: X62 Version: V5.4 Effective Distance: Approx. 10m Speaker Diameter: #14.2mm

Impedance: 22Ω Frequency Respinse: 20Hz-20KHz Microphone Sensitivity: -42dB±3dB Earphone Input: 5V ... 50mA

Charging Case Input: 5V == 600mA Charging Case Output: 5V == 100mA Earphone Battery Capacity: 50mAh Charging Case Battery Capacity: 600mAh

Duration: Approx. 5.5 H (Farphone) Earphone Charging Time: Approx. 1.5 H Charging Time of the Charging Case: Approx. 2 H

Item list







Charging cable *

Welcome to MINISO Wireless Earbud



Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the blue light of the earphones flash, the earphones will enter the automatic pairing mode.

How to wear headphones correctly





Product Description

Display light

Multi function key

touch position

Charging case

digital display scree





Touch Operation





Open the Bluetooth settings option of the Bluetooth device to be paired, enter the option and find the Bluetooth pairing name of the headset "MINISO-X62".Click the pairing name to pair.



Indicator Light Description



· When the headset is turned or the blue light flashing

When the headset is turned off-After the blue light is on, it goes out

· Headphone Charging: The blue light on

the digital display screen of the charging

· Pairing status: Blue light flashing Connection successful: no light



case is always on, and the blue light on the arphones is always on. After being fully arged, the blue light on the earphones Auto power on: The Earphone are taken out of the charging case, oes out, and at the same time, the digital the Earphone will be powered on, with the prompt sound of "Du" lisplay screen in the charging case goes Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du". · Charging of the Charging case:

Auto power off: Put the Earphone in the charging case, the Earphone The digital display screen of the charging case flashes, and after being fully charged, will be powered off, with the prompt sound of "Du". Manual power off: Long press for 5 seconds, the Earphone will be the digital display screen of the charging case always lights up at 100. powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; If it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound



▶ / ▶∥ Play/Pause

Once Press

Call Answer/End



Double Press

Volume up

Double press the right ear: Double press the left ear Volume decreases

Long Press



Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

multi-function button for two seconds; call rejection



Triple press on the left ear: Triple press on the right ear: Previous song next song

Switch between game mode and music mode



Press and hold the left (or right) ear button on the right ear for 2 seconds seconds Note 1: When using one earphone, you cannot switch between

game mode and music mode. Note 2: The factory setting defaults to music mode

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.



Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps. 2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on and the prompt will sound "beep"

FCC ID: 2BHJR-X62

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

restriction.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. *RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without

US REP

Company name: REP America LLC Address: 1942 Broadway St. STE 314C. Boulder, CO 80302, United State Contact Person: Ben Xu

Email: d.zeng@rep-europe.de ContactPhone: (719) 201-3314

The above guarantee does not

apply to the following situations The validity period of the three guarantees has exceeded; 2. Altering of the warranty cards and product code do not match the

roduct itself; Failure of damages caused by misuse, abuse or improper

nsportation, use, maintenance or storage 4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident:

Zippers and tower buckles are damaged due to excessive force; Off-line or tear caused by overloading

7. Any damage caused by sharp objects; B. Products with signs of burn damage or water logging;

Damage caused by unauthorized dismantling and modification; 10. Aging, discoloration, wear, cracking and other losses that occur luring normal use of the product.

 If the product's original logo or label is changed or damaged. his warranty will be invalid.

he completeness and appearance of the product and accompa materials are not covered by the warranty. You should inspect the on site when receiving it and raise objections to any discrepancies.

MINISO Prodict service policy If you encounter a problem. please contact our customer service to solve it. After-sales email: 7@hifi-earphone.com

Warranty Policy

This manual does not come with any form of warranty position e or other implication. The products, specifications and information nentioned inthis manual are for reference only, and the content will be updated on the website at any time without prior notice. Warranty statement

he following guarantee is made for the products attached to this document:

If the product is damaged due to quality defects under normal use with twelve(12) months from the date of your purchase

(the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be overed by the warranty for the remaining warranty period(a minimum o not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty neriod shall be calculated as thirteen(13) months from the product

If you want to apply for warranty, please call the product service hot rst and follow our instructions. When applying for a warranty, you are equired to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluet headset without permission, the user will lose the right to continue to enjoy the services included in the device ①Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interferenor configuration incompatibility, please turn off your Bluetooth device accordance with regulations in places with clear instructions. Civil Aviation: After boarding the plane, please turn off your Bluetoo

with the aircraft communication system. 2 Safety matters:

Placement: It is recommended that when you are not using the Bluete headset, place it in a place where it will not be squeezed. Squeezing r cause damage to the product or personal injury Children:Do not let children play with Bluetooth headsets.Some of the small parts are detachable and may be swallowed and cause danger.

headset according to the flight attendant's instructions. It is strictly

prohibited to use Bluetooth headsets during flight to avoid interferen

Important safety tips

 Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the produ

This product contains a built-in rechargeable battery, It is prohibited hit, squeeze, Puncture, or short-circuit the battery. If there are abnorm henomena such as excessive temperature, deformation, bulging, or ealage, please stop using it. Do not expose the battery to open flames unlight. Do not use the battery after it has been immersed in water or igh-temperature or high-pressure environments such as the sun,heate

r stoves. After using the earphones, do not place the earphones in a numid, dusty, oily smoke, steam, direct sunlight or other high-tempera and high-pressure environment to avoid damage to the earphones and pattery. The battery can be charged and discharged for a limited number times and will eventually age. If the battery is used abnormally, it can e replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of xplosion. It can only be replaced by an after-sales service provider of e same or equivalent type. battery usage.

 After the product is used and scrapped, do not throw the product int. fire.The waste should be disposed of in strict accordance with the arbage classification. Please use this product reasonably and correctly avoid causing certain injuries and environmental damage.

During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals. Bluetoo signals, WIFI signals, etc., the headphones are used when listening to nusic, watching videos, playing games, etc., there will be occasional lagpice out-of-sync or disconnection. If this happens, please reconnect the eadphones or stay away from interference.

When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular nanufacturer that has obtained CCC safety certification. Do not use a ast-charging charger to avoid excessive battery load, which may cause he battery is damaged. Do not charge continuously for longer than the pecified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO



Copyright@2024 MINISO Group affiliated companies and its licensors. All rights reserved