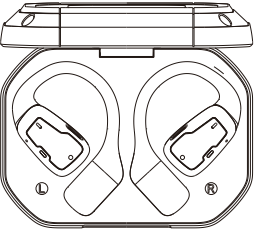 


 
 
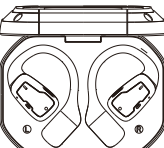 






<div>ERAZER Invested By Lenovo</div> <div></div> <div>ERAZER Wireless Earbud XP6 Product Manual</div>	<div>Specification of Product</div> <div>Model of Product: XP6 Version: V5.4 Effective Distance: Approx. 10m Speaker Diameter: φ13mm Impedance: 16Ω Frequency Respinse: 20Hz-20KHz Microphone Sensitivity: -42dB±3dB Earphone Input: 5V=40mA Charging Case Input: 5V=600mA Charging Case Output: 5V=80mA Earphone Battery Capacity: 40mAh Charging Case Battery Capacity: 600mAh Duration: Approx. 4.5 H (Earphone) Earphone Charging Time: Approx. 1.5 H Charging Time of the Charging Case: Approx. 2 H</div> <div>Item list</div> <div><div>Charging case *1</div><div>Headphones *1</div><div>Instruction *1</div><div>Charging cable *1</div></div>	<div>Welcome to ERAZER Open Wearable Stereo</div> <div></div> <div>Take out and pair it</div> <div>When you use it for the first time, remove both the left and right side headphones at the same time.The headset white light and ice blue light will flash alternately and the headset will be paired automatically.</div> <div>How to wear headphones correctly</div> <div><div><div>Left</div></div><div><div>Right</div></div><div></div><div></div></div>
--	--	---