



1

2

3

4

DESCRIPTION OF PARTS

1. OFF/ON
2. Charging port (DC 5V)
3. USB slot
4. Next track ►►I /VOL+ Previous track I◄◄ /VOL-
5. SPEAKER MODE
6. ► II /SCAN:Auto scan in FM mode

USB

Insert the U flash memory into the USB slot, SPEAKER will read the MP3 format music automatically. Press "► II" button to Play/Pause. Short press "I◄◄ /V-" or "►►I/V+" button to be previous track or next track, long press "I◄◄ /V-" or "►►I/V+" button to increase or decrease the Volume.

FM RADIO

Press ► II/SCAN to search FM channels automatically. This operation will scan all FM stations and Pre-record them to memory. The scan procedure will take several minutes and cannot be interrupted. Once completed, short press "I◄◄ /V-" or "►►I/V+" button to be previous track or next track, long press "►►I/V+" or "I◄◄ /V-" button to increase or decrease the Volume.

LED light mode:

Press the LED button to select between the Multiple lighting modes. Long press and hold the LED button to off the LED light.

CHARGING

Plug the USB cable into the speaker's charging port and connect to the power source.

The red LED indicator on panel will be lit when the unit is charging..

MAINTENANCE AND REPAIR

1. After using this product, pull up the plug in time. Be careful of the dust, dirt.
2. If excessive sound cause distortion, firstly try to turn down the volume, then adjust the main volume button, the problem will be solved.
3. Before turning on the speaker, please Rotate the volume button, turn down it to be minimum volume; in case the too large output Power damage horn

PRECAUTIONS FOR BATTERIES

1. You'd better turn off the device before battery charging
2. Charging time: 3-4 hours, then pull off the plug. Don't keep charging it too long.

3. When the device start getting stuck, or the voice getting weaker, then it's time to charge.
4. You should charge the device before the battery capacity being used up.

ACCESSORIES

Speaker: 1PC
User manual: 1PC
USB cable: 1PC