


39ER(B)


User Manual

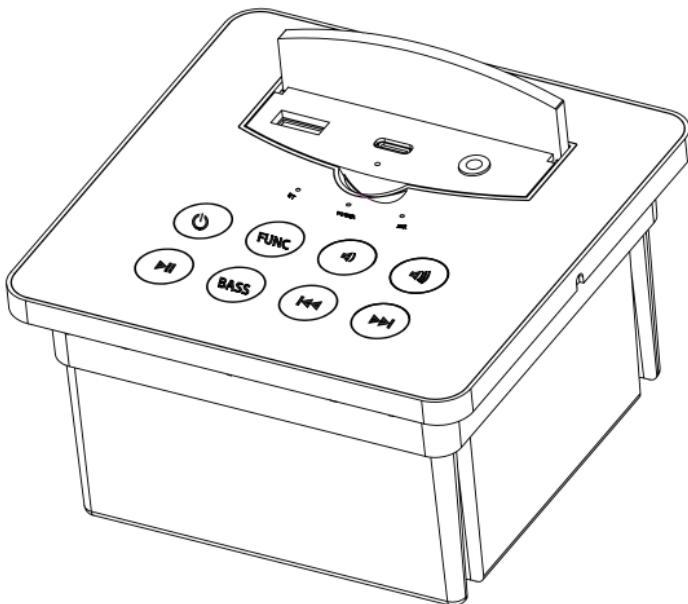

Notice

- Thank you for purchasing your new iTable3 smart tabletop component.
- Please take time to read and understand this instruction user manual carefully.
- Please keep your user manual in good condition for future reference.
- Avoid leaving the unit unattended when the power is on. When the product is in standby mode, remove any device from the iTable3 and disconnect the power supply.
- Do not operate this unit if the power supply or plug is damaged.
- If your iTable3 is damaged or immersed in water, safely disconnect the power supply immediately and contact customer service.
- Do not operate the cup holder with excessive weight load.
- Do not insert/put anything into exposed openings of this product.
- This product is designed for indoor use only. Avoid sun exposure, moisture and extreme temperature.
- Do not attempt to replace parts on this electronic product. Opening or removing any part may result in potential electric shock or injury.
- If you have any medical conditions, pacemaker, or you are vulnerable to electronic interference, consider a consultation with your doctor before using the iTable3.
- If you lack relevant experience or understanding of this product, use this product under supervision and guidance.
- Children should use this product under adult supervision.
- If the power cables are damaged, they must be replaced by the manufacturer or experienced Service technician. Tampering with the product could cause harm and void any warranty claims.
- Please refer to the Troubleshooting section this user manual for solutions to common issues. Contact customer service immediately for repair. Do not disassemble or attempt to repair anything not listed within the troubleshooting section of this user manual.

Panel Overview

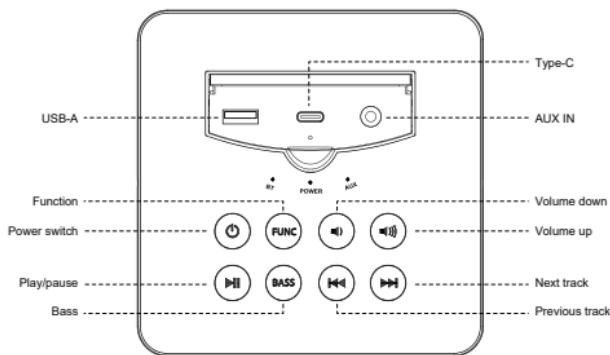

Buttons and Functions

Button Icon	Button name	Function Description
○	Power Switch	Long press to power on/off
FUNC	Input Mode Switch Key	Short press to switch from BT mode to AUX IN mode
▼	Volume Down	Long press to continually decrease volume; short press to decrease volume step-by-step
▲	Volume Up	Long press to continually increase volume; short press to increase volume step-by-step
▶	Play/Pause/Disconnect Bluetooth	Short press to play/pause, long press to disconnect Bluetooth
BASS	Bass	Short press to boost bass effect, short press again to diminish bass effect(bass has two modes)
◀	Previous Track	Short press to switch to previous track
▶	Next Track	Short press to switch to next track
USB-A	USB-A	Waterproof USB-A
USB-C	USB-C	Waterproof USB-C
○	AUX In	AUX IN
BT	BT Indicator Light	The Bluetooth indicator light remains blue when Bluetooth is successfully paired.
POWER	Power Indicator Light	When switched on, the power indicator light remains blue.
AUX	AUX IN Indicator Light	The AUX IN light remains on when the AUX IN input mode is selected.

Basic Operations

1. Connect the product according to the assembly diagram and power on.
2. Long press the  , then the Bluetooth indicator should flash blue, and the voice prompt will say: "Power On". When Bluetooth indicator light, flashes blue light  , and the voice prompt say : "Bluetooth mode" , the product enters the state of being ready to pair with Bluetooth devices. Long press the  again to shut down, and the voice prompt will say: " power off ".
3. Turn on Bluetooth on your phone and search for the Bluetooth name: eMoMo 39ER, then pair. After successful pairing, the Bluetooth indicator light  will stay lit blue, and the voice prompt will say "Device paired".
4. Open the music/audio on your connected device and play.
5. Short press  , to increase volume step-by-step; Long press  , to continually increase volume , when the volume is increased to the maximum, the voice prompts:beep.
6. Short press  , to decrease volume step-by-step; Long press  , to continually decrease volume.
7. Short press  , to switch to previous track.
8. Short press  , to switch to next track.
9. Short press  , to pause the track. Short press  , to pause the track. Long press  , to disconnect Bluetooth, the BT indicator light  , will flash slowly, and the voice prompt will say: "device disconnected". The phone needs to be paired and connected again to play music.
10. When the Bluetooth successfully paired and play music, the  will enter the weak effect mode by default, short press the  , switch to the strong effect mode. Short press the  again, switch to the strong mode.
11. Short press  , AUX IN indicator light  , will remain blue, and the voice prompt will say: "AUX IN Mode". Short press  again, the BT indicator light  , will flash blue, and the voice prompt will say: "Bluetooth mode" , the product enters the state of being ready to pair with Bluetooth devices.

Product parameters:

39ER Main Panel Dimensions	120mm*120mm*65mm
Input	DC 15V3.2A
Audio power	8W*2
Bluetooth version	5.0
USB A + C Output	18W MAX

Common troubleshooting

Problem/Issue	Possible causes and solutions
No Power	1. The power supply is not connected 2. The cable is disconnected or the plug is not properly inserted. 3. The connected socket is faulty
No sound	1. Enter the pause mode, and short press  to continue. 2. The extension cable of the horn is disconnected. please check all connections or reconnect them.
Touch not responding	1. Device interference. Remove the source of interference. Power off for 15 seconds and restart. 2. Improper operations result in device crash. Power off for 15 seconds and restart. 3. 3.The connector is loose. Please check all connection headers and reconnect. 4. If the device is faulty, contact the customer service for replacement.
Bluetooth will not connect	1. If another Bluetooth connection has been made, touch and hold the Bluetooth icon and try again. 2. Out of range. Please do not connect more than 25ft away from the product. Do not attempt to connect through obstacles.
Music is played by another Bluetooth device	1. Since the Bluetooth has the function of reconnecting, please check if your phone had paired with two Bluetooth devices at the same time, cancel the another Bluetooth device's pairing, and click the play button on your phone.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.