


iSWEET

Robot Vacuum Cleaner

X5

User Manual

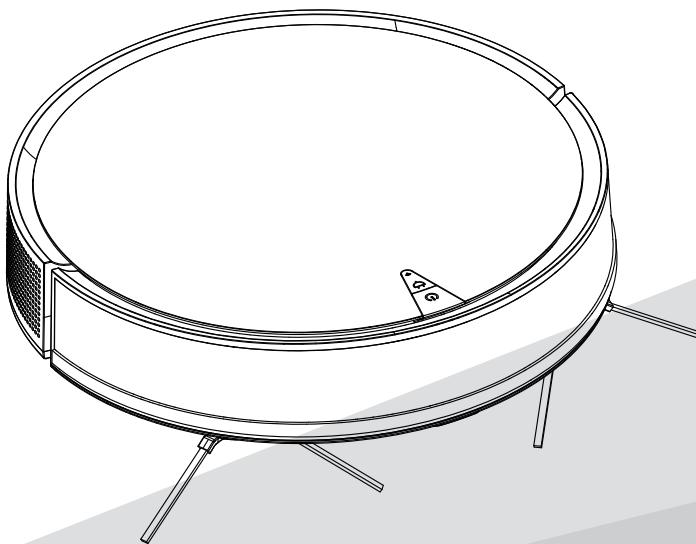

Thank you for purchasing this product.

Please read the user guide carefully before use.

Thank you for purchasing the X5 Intelligent Vacuum Cleaner. I hope you will enjoy it!

If you have any questions about the product during use, please call our service hotline.

Hotline: 400-8760-990

Table of Contents

1. Safety Instructions	2-4	5. Product Maintenance	11-13
1.1 Instructions for use		5.1 Daily storage	
1.2 Safety precautions		5.2 Clean the charging pole pieces	
1.3 About child safety		5.3 Clean the dust box	
1.4 About the batteries		5.4 Clean the side brush	
1.5 Scope of use of the product		5.5 Clean the wheels	
1.6 Disclaimers		5.6 Clean the sensor	
2. Product Composition	5-6		
2.1 Host machine and accessories of the product			
2.2 Names of parts			
3. Product Installation	7	6. Troubleshooting	14-15
4. Product Use	8-10	7. Technical Parameters	16
4.1 Use of the host machine			
4.2 Charging method			

1. Safety Instructions

1.1 Instructions for use

Please pay attention to the following basic safety precautions before using the product:

- * Read the user manual carefully and follow the instructions in the user manual when using the product.
- * Keep the user manual well for future reference.
- * If you need to transfer the product to a third party, please attach the user manual along with the product.
- * Any operation not in conformity to the instructions in the user manual may result in serious personal injury or damage to the product itself.

1.2 Safety precautions

⚠ Warning



⚠ This product can only use the adapter, batteries and charging dock that are provided with this product. Failure to do so may result in damage to the product, electrical shock, or fire caused by high voltage.


⚠ Do not use this product if the host machine and accessories of this product are found to be damaged. Contact our after-sales service department. Except for the service technicians designated or authorized by our company, no one may disassemble, repair or modify this product.



⚠ Unplug the product before maintenance.


⚠ Do not touch the power plug or the product when your hands are wet, as this may result in electrical shock.

⚠ If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similar professional to avoid danger.

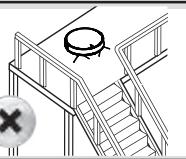

⚠ To prevent the product from falling accidentally, do not use this product in a suspended place without a protective fence, which may result in personal injury.

⚠ The user shall not replace the batteries privately.

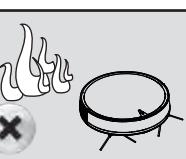


⚠ Prevent clothing or any part of your body (hair, fingers, etc.) from getting caught in the brush or wheel of the vacuum cleaner. Failure to do so may result in personal injury.


⚠ Do not place the product near fire or flammable/explosive/corrosive materials.

⚠ If the user manual is missing, please contact your local dealer or call the after-sales service department to obtain an electronic user manual.


⚠ Caution

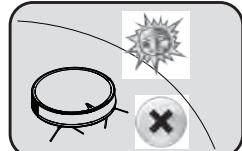


This product can only be used indoors.

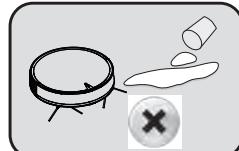


Prevent the suction of water, oil or other liquids, which may damage the vacuum cleaner.

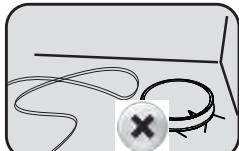


Arrange scattered wires on the floor before use for fear of affecting the normal operation of the vacuum cleaner.

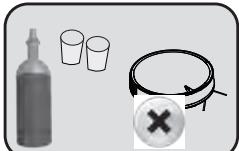

Remove fragile objects before use.

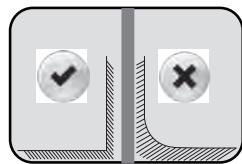


The charging dock shall be placed against the wall and on a flat floor for fear of affecting product functionality.

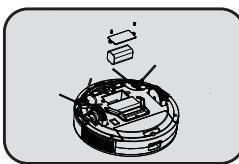


When not using the vacuum cleaner for a long time, please fully charge the battery, then remove it and store in a cool dry place, and keep the bottom of the vacuum cleaner dry.




Unplug the charging dock if it remains unused for a long time.

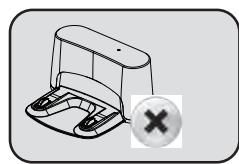

When the product is working, removal of the charging dock will affect the normal recharging of the machine.

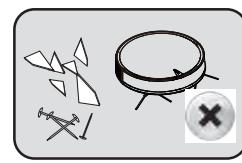

Do not use this product to suck in sharp objects (e.g. shattered glass and nails) for fear of damage to the product.

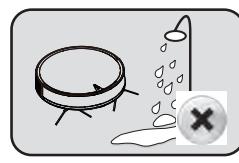

Do not use this product in a wet, flammable, explosive or corrosive environment.

* Children under the age of 8 are not allowed to use this product. Persons with physical, sensory or intellectual disabilities or lack of relevant experience/knowledge cannot use the machine unless under supervision, operating instructions or awareness of the danger. Children are not allowed to play with the machine or clean/repair the machine unless under supervision.

* Children are not allowed to play with the product's packaging bag for fear of suffocation.



1.4 About the batteries




- 1. Only the batteries provided by the manufacturer are applicable to the product.
- 2. The batteries shall be removed when the product is discarded.
- 3. If you need to replace the battery of the host machine, please contact our after-sales service department. Use of wrong batteries may cause a safety accident.
- 4. If the batteries leak, prevent the contact of the liquid with the skin or clothing. Immediately wipe it with a dry cloth and send it to the recycling station or designated maintenance point. Do not discard it.
- 5. Please properly dispose of the old batteries of the product.

The batteries contain hazardous substances harmful to the environment. Please follow the local environmental regulations and send them to the designated recycling site.

1.5 Scope of use of the product

Scope of application

The product is suitable for the following floors:

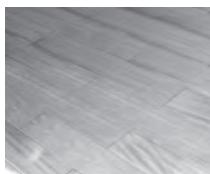

Wooden floor



Ceramic tile



Short-staple carpet

1.6 Disclaimers


Under any of the following circumstances, the product will be excluded from the scope of free warranty, but paid repair can be provided:

- A. Damage due to the user's failure to operate the product in strict accordance with our user manual or due to improper storage;
- B. The machine or parts have exceeded the free warranty period;
- C. Damage due to disassembly by those other than the maintenance personnel of our company or authorized by our company;
- D. A valid purchase voucher number cannot be provided;
- E. The product model on the warranty card does not match that of the product to be repaired or is altered;
- F. Damage caused by irresistible factors such as natural disasters;
- G. Product failure or damage caused by unexpected factors or man-made causes (including operational errors, liquid ingress, improper plugging/unplugging, scratching, handling, bumping, input of inappropriate voltage, etc.)


Note: Our company provides a warranty for the product in accordance with the "National New Regulations on Warranty". For details, please check the warranty card provided with the product.

2. Product Composition


2.1 Host machine and accessories of the product

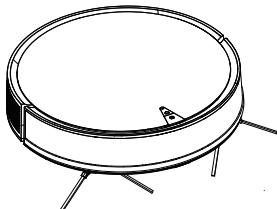

Host machine

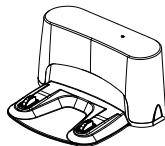

Charging dock

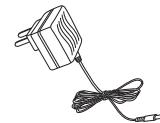

Power adapter



 
User manual



Side brush



Cleaning brush



Filter combination

Packing list	Name	Host machine	Charging dock	Power adapter	Side brush	Cleaning brush	Filter combination
Quantity	1	1	1	1	2	1	1




Tip:


* A pair of side brushes, a filter combination and batteries have been installed in the host machine.

2.2 Names of parts

Front view of the machine

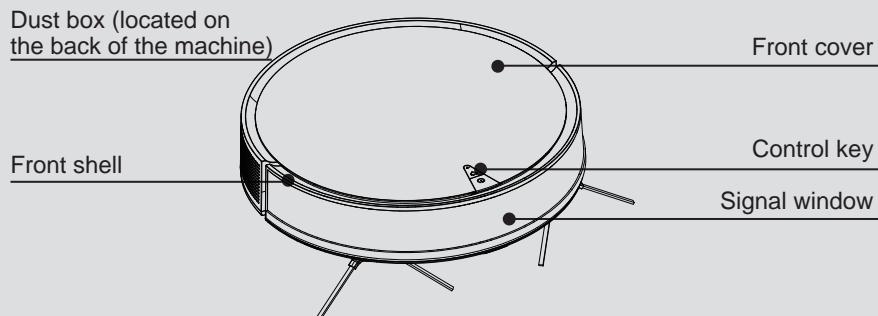


Bottom view of the machine

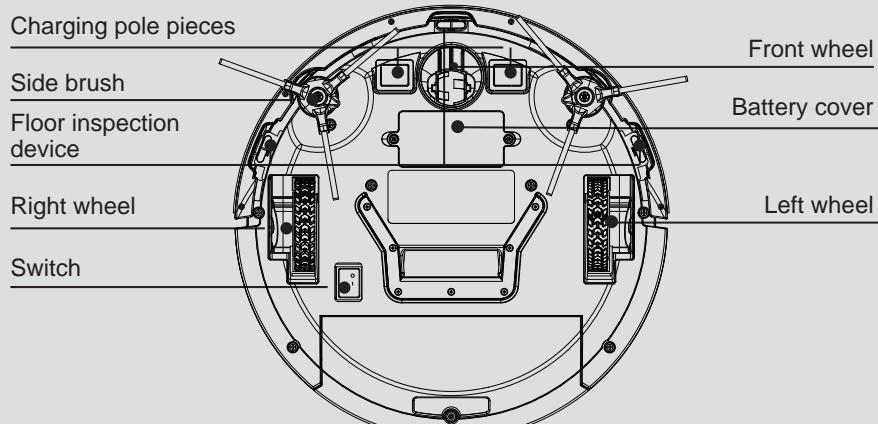


3. Product Installation

3.1 Battery installation and removal of the host machine

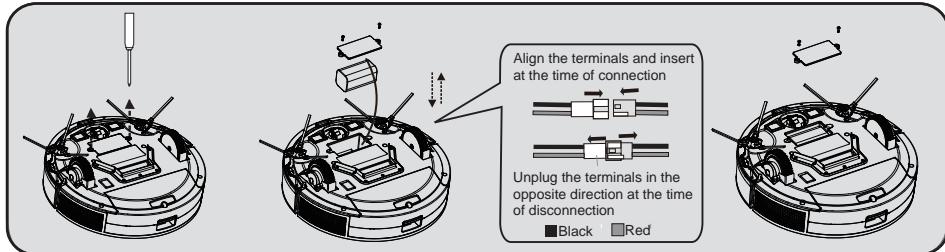

1. Use a screwdriver to loosen the screws on the battery cover and open the battery cover.
2. Connection method: Pull out the connectors of the battery and the vacuum cleaner, pay attention to the corresponding colors and direction, and connect the two terminals.
Disconnection method: Unplug the battery cable terminal in the opposite direction.
3. First put the terminal into the terminal slot in the direction shown in the figure, then put the battery into the battery compartment, and finally replace the battery cover and lock the screws.

3.2 Charging dock installation

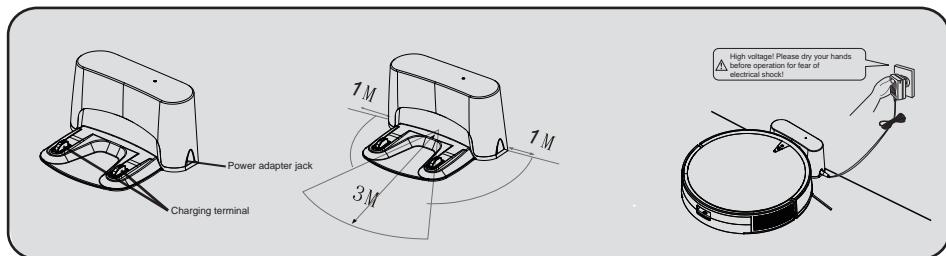

1. Place the charging dock on a flat surface that is perpendicular to the wall. There shall be no obstacles within 3 meters in front and 1 meter on the left and right. Press firmly on the charging dock to attach it to the floor more firmly. After plugging the adapter into the power supply, insert the DC plug into the DC port of the charging dock.
2. Connect the power adapter to the charging dock and power supply. Remember to put the adapter cable orderly, so that it will not be entangled during the operation of the vacuum cleaner.

Tip:

Try not to place the charging dock on the carpet. It is advisable to put the charging dock in a fixed position. Try not to move the charging dock in the working process of the machine, which will make it hard to find the charging dock.

4. Product Use

4.1 Use of the host machine

4.1.1 Diagrams of control keys




Control Keys	
	Power key
	Recharge key

4.1.2 Working mode:


4.1.2.1 Manual mode

Standby mode

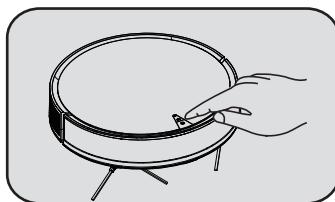


1. Turn on the bottom switch to enter the standby mode.

Automatic recharge

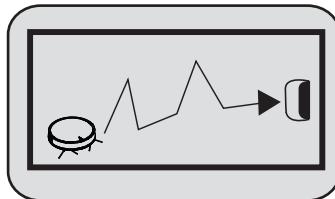

3. When the vacuum cleaner is in the standby state, press the recharge button, then the machine starts operation to enter the recharge mode, and the recharge button flashes.

Automatic cleaning

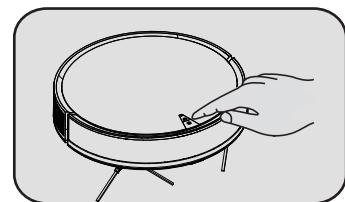

2. When the vacuum cleaner is in the standby state, press the power key, and the vacuum cleaner will start to clean automatically.

Tips:

*To ensure work efficiency during the operation of the machine, please do not control the machine randomly.
*The machine may have a short pause during work, so please wait patiently. The number and time of pauses depend on the complexity of the home environment.

4.1.3 Operation guide of button indicating light

SN	State	Display	Operation
1	On/Off	Light on/off	There is a physical switch at the bottom of the machine, toggle the switch to I, and the machine enters the standby state, and vice versa.
2	Clean	 the power light is normally on	Press the  button on the remote control, or press the  button on the front cover.
3	Search for recharge	 the recharge light is normally on	Press the  button on the remote control to recharge, or press the  button on the front cover.
4	Charging	 the recharge light flashes	The machine is being charged on the charging dock.
5	Full charge	  the two lights are in blue.	The machine is fully charged.
6	Error report	  the red lights flash, and there is voice broadcast	Listen to the broadcast for details
7	Sleep	The light is off	It enters the sleep mode after being in standby mode for five minutes.