

Product manual

Product name: Birdie - Clitoral vibrator with pulsation, vibration and music playback

Product size: Bird 144mm * 54mm * 69mm

Speaker base: 90mm * 40mm

Noise: ≤50dB


Product material: Silicone + ABS

Function modes: vibration + pulsation + tail swing + music playback

Duration of use: 1.2 hours

Product color: yellow + pink + red

Charging time: 2.5 hours

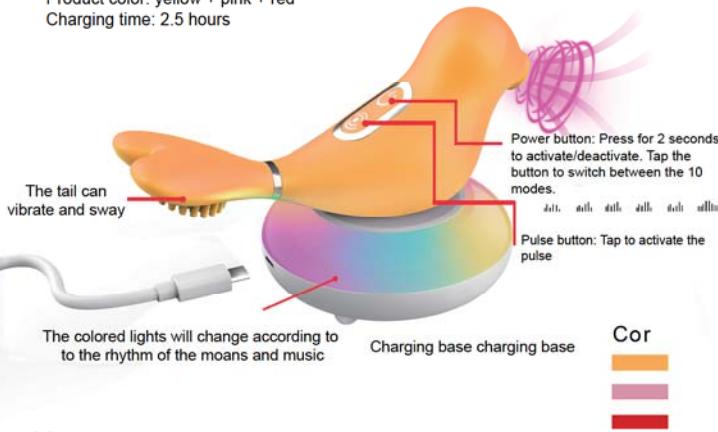

Uso

1. Audio on/off switch: press for 2 seconds;
Bluetooth connection: once connected, Bluetooth is activated automatically.
2. Lights: color change
(There are 7 different colors. Touch and switch between the 7 available colors.
The colors change according to the music or moans)
3. Off: Press for 2 seconds
4. Charging: charging is done via induction.
5. Birdie: S1 key: press the key for 2 seconds to initialize, press quickly to switch between the 10 vibration modes.
6. S2 key: press for 2 seconds, press quickly to switch between the 10 pulse modes.

Cleaning, storage and safe use

It is recommended that the product is cleaned before and after use, using water and dry with a paper towel. Store the product in its box. Keep the product in a dry, dust-free place.

Legal notices

Before and after use, wash with cold water and neutral or bactericidal soap. towel or leave to dry naturally. Do not get the battery compartment wet. Store in a dry place, separate from other products. Do not share the same accessory with other people to avoid sexually transmitted diseases. Always use water-based lubricants. People who are allergic to the composition of the product should not use it. use it. Do not use on inflamed areas or lacerations. In the event of seek medical advice. Accessory for adult use.

Product manual

Product name: Birdie - Clitoral vibrator with pulsation, vibration and music playback

Product size: Bird 144mm * 54mm * 69mm

Speaker base: 90mm * 40mm

Noise: ≤50dB


Product material: Silicone + ABS

Function modes: vibration + pulsation + tail swing + music playback

Duration of use: 1.2 hours

Product color: yellow + pink + red

Charging time: 2.5 hours

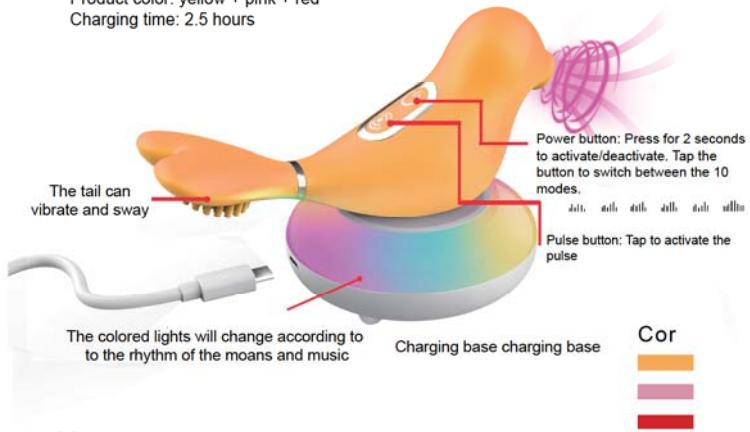

Uso

1. Audio on/off switch: press for 2 seconds;
Bluetooth connection: once connected, Bluetooth is activated automatically.
2. Lights: color change
(There are 7 different colors. Touch and switch between the 7 available colors.
The colors change according to the music or moans)
3. Off: Press for 2 seconds
4. Charging: charging is done via induction.
5. Birdie: S1 key: press the key for 2 seconds to initialize, press quickly to switch between the 10 vibration modes.
6. S2 key: press for 2 seconds, press quickly to switch between the 10 pulse modes.

Cleaning, storage and safe use

It is recommended that the product is cleaned before and after use, using water and dry with a paper towel. Store the product in its box. Keep the product in a dry, dust-free place.

Legal notices

Before and after use, wash with cold water and neutral or bactericidal soap. towel or leave to dry naturally. Do not get the battery compartment wet. Store in a dry place, separate from other products. Do not share the same accessory with other people to avoid sexually transmitted diseases. Always use water-based lubricants. People who are allergic to the composition of the product should not use it. use it. Do not use on inflamed areas or lacerations. In the event of seek medical advice. Accessory for adult use.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.