



Access the online instructions

Scan the QR code to access product manuals, videos and more information.

(EN) Scan the QR code to access product manuals, videos and more information.

(FR) Scannez le code QR pour accéder aux manuels produits, vidéos et plus d'informations.

(DE) Scannen Sie den QR-Code, um Produkthandbücher, Videos und weitere Informationen zu erhalten.

(IT) Scansione il codice QR per ottenere manuali del prodotto, video e ulteriori informazioni.

(ES) Escanee el código QR para obtener manuales de productos, videos y más información.

Warm Tips

Thank you for purchasing our products. Please read and comply with the following warm tips:

- For outdoor use only. Placing the timer in the sheltered outdoors will prolong its lifetime.
- Do not use tools on the timer. Hand tighten only. Use of tools may damage the timer.
- Do not allow the timer to freeze. Freezing temperatures can permanently damage your timer.
- Keep the filter washer clean and in place when using the timer. Replace the filter if damaged. Debris entering the timer may prevent it from closing.
- For cold water outdoor irrigation use only.
- When low power, please replace the batteries to avoid the interruption of normal operation; when replacing the batteries, please make sure that the battery tray is dry.
- Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Never immerse the product in water.

Standard Accessories

Water Timer x1, 1/2" Adapter x1, Quick Connector x1, User Manual x1.

Technical Specifications

Wi-Fi	802.11b/g/n(2.4GHz)
Working Water Pressure	0.03 MPa - 0.9 MPa (4.35 psi - 130.53 psi)
Max Flow Rate	35L / min
Working Temperature	1- 60 °C
Waterproof Level	IP65
Dimension	92.4x175x50 mm
Water Inlet	For 3/4" taps
Water Outlet	For 3/4" standard garden hose
Power By	4 AA (1.5V) alkaline batteries (Not Included)

Product Overview

SET button: Short press to switch between program setting item (start time / end time / water / pause); Press and hold for 3 seconds to enter / exit programming setting.

OK button: Short press to confirm setting and navigate to the next setting; Press and hold for 3 seconds to enter / exit OFF mode.

MANUAL button: Press and hold for 3 seconds to enter / exit manual mode; In OFF mode, press and hold for 3 seconds to initiate the network configuration.

Install The Timer

1. Turn off the garden faucet.

2. Remove the battery compartment cover on the backside of the timer.

3. Insert 4 new AA (1.5V) alkaline batteries (not included).

4. Firmly reinstall the battery compartment cover back into the timer to ensure water resistance.

Dimensions (mm)

Vertical to ground: 175 mm, Width: 50 mm, Depth: 92.4 mm.

Button Rules

MINUS (-) button: Numbers decrease / Move backward.

PLUS (+) button: Numbers increase / Move forward.

NOTE: Simultaneously press and hold the MINUS and PLUS buttons for 3 seconds to activate / deactivate child lock.

Installation

Install The Batteries

1. Remove the battery compartment cover on the backside of the timer.

2. Insert 4 new AA (1.5V) alkaline batteries (not included).

3. Firmly reinstall the battery compartment cover back into the timer to ensure water resistance.

Activate The Timer before Use

Please activate the device before using it the first time after a period of inactivity:

- Keep the faucet turned off.
- Press and hold the Manual button for 3 seconds, and set the manual time. With a "click" sound, the valve inside the timer opens for manual watering. After a few seconds, press and hold the Manual button for 3 seconds again; the "click" will sound again, and the valve will close.
- Turn on the faucet a little, and hold the Manual button for 3 seconds to check if the water flows out or not as expected. If yes, the valve is normal; please use it with confidence! If not, please repeat the above steps several times.
- If the test is over, everything is normal, please keep the faucet fully turned on!

NOTE:

- This device supports setting the time and week only right after installing the battery. Please set the time and week before installing the device. For specific instructions, please refer to the Key Function Guide section.
- Only new 1.5V AA alkaline batteries can be used. Please do not mix alkaline, standard(carbon-zinc), or rechargeable batteries.
- Batteries should be removed from the timer at the end of the watering season and replaced with new ones at the beginning of the next watering season.

Activation

Smart Life App

Scan the QR code on the right to search for "Smart Life" on the App Store or Google Play to download the Smart Life app.

GET IT ON

APP Remote Control And Voice Control

Smart Life app interface showing cloud connectivity and voice assistant integration.

Software Installation

1. Download Smart Life App

Scan the QR code on the right to search for "Smart Life" on the App Store or Google Play to download the Smart Life app.

2. Registration or Log in

Enter the Register / Login interface. Select "Register" to create an account by entering your phone number for verification code and setting password. Choose "Log in" if you already have a Smart Life account.

3. Add device

Press and hold the OK button for 3 seconds to enter OFF mode. While in the OFF mode, press and hold the Manual button for 3 seconds to initiate the network configuration, "Wi-Fi" is flashing.

4. Key Function Guide

1. Time Setting

*** NOTE:** After successful connection to the network, the timer will automatically synchronize with the time and day of the week on your phone. Upon completion of battery installation, the timer will automatically enter the setting for time and day of the week. Whenever you need to set the time, please remove and reinstall the battery compartment.

2. Programs Setting

The device supports two timer schedule: Normal schedule and Cycle schedule. Once programs are set, the default display will show the next watering schedule. You can short press "+" or "-" button to toggle and view different programs.

Choose Normal or Cycle schedule

Press and hold "SET" button for 3 seconds, the timer will enter programming setting state. The NORMAL icon flashes first. Press "+" or "-" button to switch between the NORMAL and CYCLE modes. Press the "OK" button to confirm and enter the specific setting. The device supports up to 6 programs. Press "+" or "-" button to switch between programs, and press the "OK" button to confirm. Before entering the specific setting, press "+" or "-" button to toggle the ON and OFF for this program, then press the "OK" button to confirm. When a program is set to OFF, it will automatically return to the main display interface.

*** NOTE:** Each time you set up a program, you can modify all existing programs or set up a new one. For example, if you have already set up P1 and P2, you can modify both P1 and P2 or set up a new P3.

Normal Schedule

You can set start time, end time and water day in normal schedule. Once programs are set, the default display will show the next watering schedule. You can short press "+" or "-" button to toggle and view different programs.

5. OFF Mode

OFF mode allows you to stop the watering plan for an extended period. Press and hold "OK" button for 3 seconds, the timer will enter OFF mode, the screen will display the word OFF. The timer will not water automatically while in OFF mode, and your settings are saved.

6. Child Lock

Press and hold "+" and "-" button for 3 seconds to activate / deactivate child lock.

7. Low Battery Reminder

When the battery power is less than 20%, battery power icon "low battery" is displayed. It is recommended to replace the new battery as soon as possible before use.

APP Interface

Smart Life app interface showing various controls and status indicators.

Error Codes

Error Code	Problem	Solution
ER1	The end time of the program is earlier than the start time.	Adjust the start time and end time.
ER2	The start time is equal to the end time.	Adjust the start time and end time.
ER3	The end time is later than the start time.	Adjust the start time and end time.
ER4	OFF mode is on.	Turn off the OFF mode.
ER5	The batteries are low.	Replace the batteries.
ER6	The faucet is turned OFF.	Turn on the faucet.

3. Water does not come out at preset time

Check if:

- Clock is set to the correct time.
- Start time is set to the desired time.
- Rain delay is off.
- OFF mode is off.
- The batteries are low.
- The faucet is turned OFF.

4. Water does not come out at preset time

Check if:

- Water inlet connection is correct.
- Water outlet connection is correct.
- Water pipe is leaking.
- The faucet and water pipe has a different lead. If necessary, please use an appropriate adapter PTFE tape.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.