

TRYONE

EN

Packing List

Screen Sensor Clip*1, Remote Control *1, 2in1 Charger Cable *1, User Manual *1, Storage Bag *1, Hand Strap *1, Service card*1

User Manual
Remote Control Page Turner
PT01

Screen Sensor Clip

USB-C Charging Port, Power Switch, Indicator Light, Silicone material sensor

Remote Control

USB-C Charging Port, Indicator Light, Operation Key

Instructions for Use

1. Make sure both the Screen Sensor Clip and the Remote Control are powered on and properly connected. During connection, the Remote Control should have a press-to-light function, and the Screen Sensor Clip should remain connected. 2. Ensure the metal sensor head of the Screen Sensor Clip is in proper contact with the Kindle screen. 3. Hold the Power Switch of the Screen Sensor Clip for 2 seconds, the Indicator Light will flash, indicating that it is in an unconnected state. 4. Hold the Operation Key of the Remote Control for 2 seconds, the Indicator Light on the Screen Sensor Clip will stay on, indicating a successful connection.

How to turn off the device?

1. Attach the Screen Sensor Clip to the Kindle, ensuring the metal sensor is in contact with the screen. 2. Press and hold the power switch on the Screen Sensor Clip for 4 seconds until the indicator light turns off, powered off successfully. 3. If the problem persists, please contact us.

FAQ

Q: What to do if the page turner is not working?
1. Make sure both the Screen Sensor Clip and the Remote Control are powered on and properly connected. During connection, the Remote Control should have a press-to-light function, and the Screen Sensor Clip should remain connected. 2. Ensure the metal sensor head of the Screen Sensor Clip is in proper contact with the Kindle screen. 3. If the problem persists, please contact us.

Q: What to do if the Screen Sensor Clip obstructs the text?
1. Adjust the position of the Screen Sensor Clip. 2. Adjust the page margins on the Kindle screen.

Q: How long does it take for the page turner to turn off automatically?
If the page turner has not been used for 60 minutes, it will turn off automatically and will need to be re-paired to work.

How to use Hand Strap?

1. Attach the Screen Sensor Clip to the Kindle, ensuring the metal sensor is in contact with the screen. 2. Press and hold the power switch on the Screen Sensor Clip for 4 seconds until the indicator light turns off, powered off successfully. 3. Attach the Hand Strap to the Kindle and the Screen Sensor Clip. 4. Press the Operation Key on the Remote Control for 4 seconds until the indicator light on the Page Turner turns off, powered off successfully.

How to charge?

This device contains license-exempt transmitters (s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Requirement
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures: Relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FAQ

Q: What to do if the page turner is not working?
1. Make sure both the Screen Sensor Clip and the Remote Control are powered on and properly connected. During connection, the Remote Control should have a press-to-light function, and the Screen Sensor Clip should remain connected. 2. Ensure the metal sensor head of the Screen Sensor Clip is in proper contact with the Kindle screen. 3. If the problem persists, please contact us.

Q: What to do if the Screen Sensor Clip obstructs the text?
1. Adjust the position of the Screen Sensor Clip. 2. Adjust the page margins on the Kindle screen.

Q: How long does it take for the page turner to turn off automatically?
If the Screen Sensor Clip obstructs the text, manually adjust the page margin on your Kindle to improve your reading experience.