 


INSTRUCTION MANUAL

Product List

ITEM:RP1001

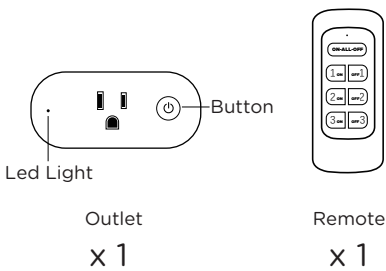

 
Specifications

Power input: 125v/60Hz  
Power output:1875w/15A(max)  
Transmittler frequency:433.92MHz  
Free space up to 200 feet  
Remote transmitter battery: 23A battery 12V x 1  
Manufacturer: Shenzhen Golden Times Technology Co., Ltd.


Indoor Wireless Remote Control Outlets

Quick Start

1. Pull out the insulating sticker at the back of remote controller before you start to use. Make battery supply power to remote controller.

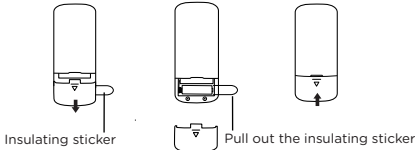

 
2. Plug the receiver plug into outlet to power it;  
3. Everything is ready! Enjoy it! (Receiver plugs shall be pre-paired to remote controllers during production)

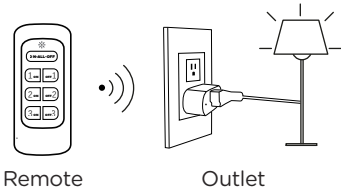

01 ▶

Indoor Wireless Remote Control Outlets

 Troubleshooting: Pair Plugs to Controller

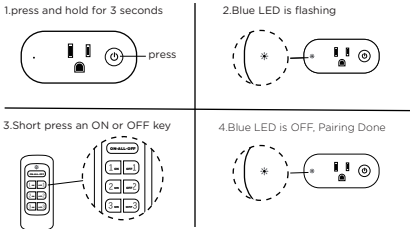

If remote controller can not operate plugs app-ropriately, you should consider redo pairing receiver plugs to remote controller.

1. Press and hold the key on plug's left side for 3 seconds, when you see BLUE Led light is flashing, the plug start waiting for pairing, the process will last 30 seconds;  
2. Short press one ON or OFF key of the target number on remote controller within 30 seconds, the pairing plug will stop flashing Led light, the plug and the controller shall be paired successfully.  
3. Short press ON or OFF key again to verify the pairing is succeed;

02 ▶

Indoor Wireless Remote Control Outlets

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.

- ▲ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in **death or serious injury**.
- ▲ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in **death or serious injury**.
- ▲ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in **minor or moderate injury**. (Used without word) Indicates a safety related message.
- ▲ **NOTICE:** Indicates a practice not related to personal injury which, if not avoided, may result in **property damage**.
- ▲ **WARNING:** PLEASE READ THIS INSTRUCTION MANUAL THOROUGHLY AND COMPLETELY BEFORE INSTALLATION & USE. FAILURE TO DO SO COULD CAUSE DAMAGE TO PROPERTY, SERIOUS INJURY OR DEATH, AND VOID YOUR WARRANTY.

03 ▶

Indoor Wireless Remote Control Outlets

SAFETY INFORMATION

**NOTE:** This is a grounded device. It has a ground-ded plug and three grounded outlets. Store indoors when not in use.

▲ **WARNING: RISK OF ELECTRIC SHOCK:**

- Do not use with an extension cord.
- Plug directly into a GFCI electrical outlet.
- Fully insert the plug.
- Unplug timer before cleaning, use dry brush or duster to clean.
- Keep away from children.

▲ **WARNING: RISK OF FIRE:**

Do not use to control appliances that contain heating elements such as cooking appliances, heaters, irons, etc.  
Do not exceed electrical ratings.

04 ▶

Indoor Wireless Remote Control Outlets

GROUNDING INSTRUCTIONS

In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. The timer must be connected to a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

FOR GROUNDED, CORD-CONNECTED TIMER RATED LESS THAN 15A AND INTENDED FOR USE ON A NOMINAL 125V SUPPLY CIRCUIT

The timer is for use on a nominal 125V circuit, and should be connected to a grounding outlet that looks like that illustrated in sketch a. A temporary adaptor, which looks like the adaptor illustrated in sketch b, may be used to connect this plug to a 2-pole receptacle as shown in sketch b if a properly grounded outlet is not available. The temporary adaptor should be used only until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, and the like, extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by the metal screw.

05 ▶

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.