

LED Strip Lights User Manual

Welcome

Thank you for choosing our LED strip lights, we are devoted to creating professional, high-quality products and bringing more convenience to your life, and offering you a great user experience.

Please read the instructions carefully before using this product. It's strongly recommended that you keep this user manual for future reference.

Package Contents

- LED Strip light
- 1 x User Manual
- 1 x Remote Control
- 1 x IR Receiver
- 1 x Adapter

How Does It Work?

Step 1: Please download App, the name of APP is Mohuan LED

Step 2: Scan the QR code in the user manual or the white controller box, or download it from APP Store.

Step 3: Connecting the light to the power source, enter the app, follow the instructions to turn on the Bluetooth.

Step 4: The strip lights connect to the APP.

Step 5: Finished, you can use your light strip.

Remote Control

Bluetooth Controller

Step 1: Please open your mobile phone and scan the code to download the app, named "Mohuan LED", you can find the code on the IR receiver or use the code below.

Step 2: Install the APP first, open Bluetooth Menu on your mobile phone, then find "BJ_LED_M" and connect it, then open the APP and go to the operating interface and select the device, one-click connection.

Home Interface

Music Interface

Dynamic Interface

Clock Interface

Specifications

Controller Parameter	
Item	Parameters
Input Voltage	24V/50-60Hz
Input Power	12W
Power Factor	>90%
Bluetooth	4.0
IR	38KHz
Line Sort	1000
Color Recognition	99%
Color	16.7M
Lighting Control	0-100%
Operating Temperature	-20°C-50°C
Storage Temperature	-40°C-60°C

LED Parameter	
LED Power	0.2W/3.6W/0.4W/5W/15W
Operating Voltage	DC24V
Service Life	10000H
Luminous wavelength	Red: 625nm; Green: 520nm; Blue: 450nm
Operating Temperature	-40°C-50°C
Storage Temperature	-50°C-60°C

Bluetooth Parameter	
Bluetooth Version	Bluetooth 4.0
Response Frequency	40KHz, Non-formal: 33KHz
Bluetooth Connection Distance	10m

Infrared Parameter	
Operating Voltage	DC24V
Response Distance	10m

Modem Interface

Clock Interface

Dynamic Interface

Music Interface

Home Interface

Notes

- Please clean the surface of the strip and make sure the strip is successfully connected to the power source.
- Don't stick the strip to the metal surface that conducts heat.
- Don't let the strip come into contact with water.
- The ventilation must be used, otherwise the strip will overheat.

Customer Service

Please contact us if there are any questions about our products, we will get back to you within 24 hours.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.