



Warning

Special note:
Before using the earphones for the first time, place them in the charging case once, then remove them. The touch function only works after you complete this step.

Please read the warnings below carefully. Store this manual with the product packaging. Following the safety precaution manual will reduce the risk of fire and injury.

To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of battery pack in fire.
- Do not allow metal objects to touch the battery on the device.
- Do not expose battery pack to excessive heat.
- Do not use a high-current charger or the charging cable will burn out.

Product Specifications

Product model:	G36
Bluetooth solutions:	AC7006
Bluetooth version:	V6.0+BR+EDR+BLE
Bluetooth decoding:	SBC, AAC
Bluetooth working frequency:	2.402 GHz-2.480 GHz
Frequency response:	20 Hz-20 kHz
Speaker size:	10 mm
Sensitivity (speaker unit):	10.80 ± 3 dB at 1 kHz
Speaker impedance (speaker unit):	32 Ω ± 15% at 1mW / 1000 Hz
Effective distance:	15 m (in an ideal environment without any large obstacles)
Earphone battery capacity:	40 mAh
Charging case battery capacity:	300 mAh
Playing time:	5-5.5 hours (high-quality music and high volume may accelerate battery consumption)
Talking time:	4 hours
Earphone charging time:	about 2 hours
Number of times case can charge earphones:	about 2.5 times
Product size :	62 x 51 x 32mm

Pairing

When listening to music:
Quickly tap left earphone 3 times to go to the previous song.
Quickly tap right earphone 3 times to go to the next song.

Operation

1. Power on / off
Take the earphones out of the charging case, the earphones will automatically turn on, sync together and enter pairing mode.

2. Charging the charging case
The digital indicator blinks while the charging case is charging. When the case is fully charged, the indicator light is always on and 100% display.

3. Answer/Hang up call
When there is an incoming call:
Tap left or right earphone once to answer the call.
Tap left or right earphone again to end the call.

4. Play/Pause music
When listening to music:
Long press left or right earphone once to play or pause music.

5. Decline call
When there is an incoming call:
Tap left or right earphone for 2 seconds to decline the call.

6. ANC mode
When taking the earphones out of the charging case, it is in regular Bluetooth mode.
Long press right earphone for 2 seconds to enter Transparent mode.
Long press right earphone for 2 seconds again to enter Noise reduction mode.
Long press right earphone for 2 seconds again to enter regular Bluetooth mode.

7. Voice assistant
Long press left earphone for 2 seconds to activate the voice assistant.

8. Adjust volume
When listening to music:
Quick double-tap left earphone to decrease volume.
Quick double-tap right earphone to increase volume.

Charging Function

Only charge the case and earphones before using for the first time.

A T&T One Year Limited Warranty

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following: - Reorient or relocate the receiving antenna. - Increase the separation between the device and receiver. - Connect the device into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet appareil est conforme aux normes / réglementations édictées par la Commission (RSS) et l'Innovation, Sciences et Développement économique Canada, pour fonctionner dans deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toute interférence, y compris les interférences de sources autres.