

Limited Warranty

iBooMas®

INTELLIGENT MASSAGE LOUNGER

CONSUMER LIMITED WARRANTY: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year.

If you need help regarding product issues, after-sales service, or other relevant problems, please contact us via email.

Email: support@iboomas.com

Warranty Claim Procedures:

1. Any product the customer believes is defective and seeks for warranty, the customer must provide to Customer Support:
 - a) Order numbers.
 - b) Pictures, video, and/or description are required to claim defective merchandise.
 - c) Series Number label attached to each product (on the back of remote or electric cabinet).
 - e) Any claim for defective merchandise returns must be packed in original packaging.


Warranty Limitations

This warranty only covers failures due to defects in materials and workmanship and does not cover normal wear or cosmetic damages. This warranty does not cover damages that occur in shipment, or failures which result from accident, misuse (including, without limitation, failure to comply with instructions and use restrictions contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power linesurge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, service by anyone other than from iBooMas, or damage that is attributable to "acts of God." Continued use of this product after discovering a defect voids this warranty.

For product(s) obtained from other Channels, please contact the customer service of the Channel directly for appropriate solution.

Intelligent

MASSAGE LOUNGER

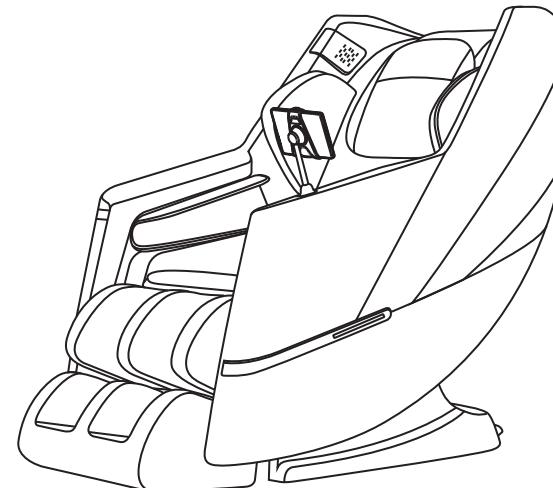

OPERATING INSTRUCTIONS

R6M10

HARMONY MASSAGE LOUNGER

Thank you for purchasing the **iBooMas Massage Chair**

Before using this chair for the first time, please read through all sections of this user manual carefully, paying special attention to the Safety Instructions.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

CONTENTS

IMPORTANT SAFETY PRECAUTIONS.....	1
PARTS	3
Exterior Structure	3
MASSAGE CHAIR OPERATION	4
Armrest Controller	4
Armrest Controller Operation	5
Main Controller	6
Main Controller Operation	7
Control Display.....	9
Automatic Programs	10
SETUP	11
Installation	11
Before Using the Chair the First Time.....	12
Massage Chair Placement	13
Move Method	13
Grounding Instruction	15
PRODUCT STORAGE AND MAINTENANCE	16
TROUBLESHOOTING.....	17
TECHNICAL SPECIFICATIONS.....	17
LIMITED WARRANTY.....	18

IMPORTANT SAFETY PRECAUTIONS

Please pay close attention to the following safety information while using your massage chair. Please carefully read all instructions before using this product.

⚠ WARNING

In order to reduce risk of fire, burns, electric shock or injury to others, please abide by the following instructions:

1. Be sure to unplug the unit when it is unattended. Ensure that it is left unplugged when not in use or before installing or removing any parts.
2. Children and any person requiring special care should use this unit under adult supervision.
3. Be sure to use this unit for the purposes described in this manual. Please do not install parts and accessories not provided by the manufacturer.
4. This unit must not be used under these conditions:
 - a) the power cord or plug is damaged;
 - b) the unit is malfunctioning or operating incorrectly;
 - c) the unit is damaged or exposed to water.Contact our service center for inspection and repair.
5. Do not move this massage chair by pulling the power cord or using the cord as a handle.
6. Be sure to keep the power cord away from any source of heat.
7. Do not use this unit when the air outlet is blocked. Please keep the air outlet unblocked and free from hair and dust.
8. Do not drop or insert any objects into any opening.
9. Do not use this product outdoors.
10. Do not use this product in areas where aerosol products are used or oxygen is being released.
11. To power off, please switch off all controls before unplugging.
12. Please do not stand on or in the unit. It can only be used in a seated position.
13. Be sure to supervise children and ensure that they do not use the unit as a toy or for playing.
14. Connect this unit to a properly grounded outlet only. See Grounding Instructions (Page 17).
15. This unit is not intended for use by persons (including children) with reduced sensory or mental capabilities, or those with a lack of experience or knowledge of its operation, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the unit.
16. If the covering is torn or worn away, do not use the unit and return to service center for replacement of outer cover.

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only. Please consult a doctor before using the massage chair if it is to be used by a child or persons with any medical condition.

► IMPORTANT SAFETY PRECAUTIONS

⚠ CAUTION

Anyone with the following conditions should consult a medical professional before using this device:



- Persons using embedded medical electronic devices such as a pacemaker.
- Women who are pregnant or who have just given birth.
- Persons with sensory loss or numbness.
- Persons with sensitivity to heat.
- Persons with bodily injuries including open wounds on the skin.
- Persons with bone injuries or with weak bones, loss of bone density, or who are otherwise prone to damaging or bruising bones.
- Persons using blood thinners or who bruise easily.
- Persons with skin disorders or who are prone to allergic reactions of the skin (sensitive skin).
- Any illness or injury that may cause you to be adversely affected by heat or massage pressure.

General Safety Precautions:

- Do not use unit if it shows signs of malfunctioning or damage. Do not use if there are any rips or tears in the fabric that may expose the moving parts underneath, as serious injury can result.
- Setup unit properly by following all instructions in the section "Setup." Failure to follow proper setup and use instructions can cause injury or damage.
- Do not use the unit for longer than 30 minutes at one time. Continual use to one specific part of the body should not exceed five minutes. Excessive massage or heat applied to one area can cause injury or discomfort.
- Do not use the heat function for long periods of time, as low-temperature burns may occur.
- If rashes, skin reddening, itching, or other skin discomfort or skin reactions occur, discontinue use and consult a medical professional.
- Do not leave unit unattended while plugged in. Keep chair powered off and unplugged when not in use or when not supervised.
- Do not sleep in the unit while it is in use.
- For use by only one person at a time.
- Do not use accessories while using the unit, including added heat blankets or pads or other heating units, and including any other massage units or electronic devices.
- Wear loose, comfortable clothing when using the chair.
- Remove items that can cause injury during a massage, including: jewelry, hair accessories and hats, belts, glasses, and any other hard items that could be pressed against your skin. Empty all items from pockets, including wallets.
- Do not unplug or flip the power switch when the unit is in use.
- Do not move the unit while it is in use or while anyone is in it.
- Not intended for use by pets, elderly persons, children, disabled persons, drowsy/inebriated persons, or persons with sensory loss.


► PARTS

EXTERIOR STRUCTURE

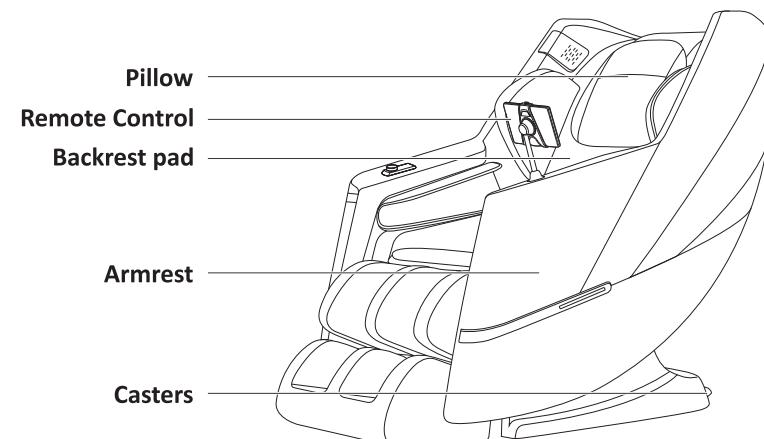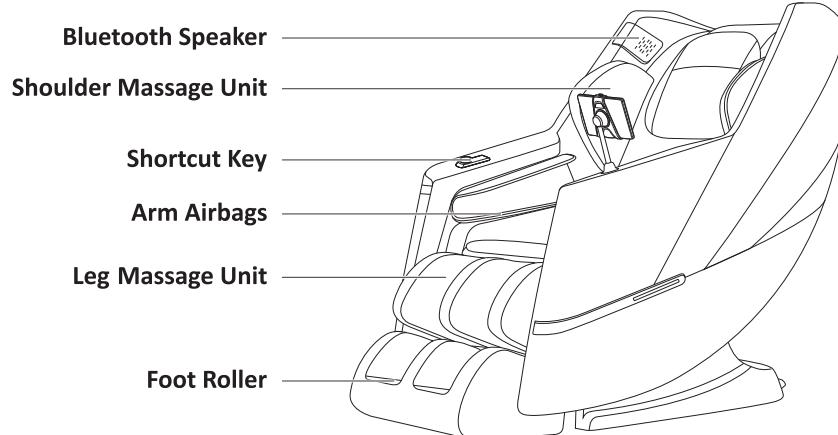

► MASSAGE CHAIR OPERATION

ARMREST CONTROLLER

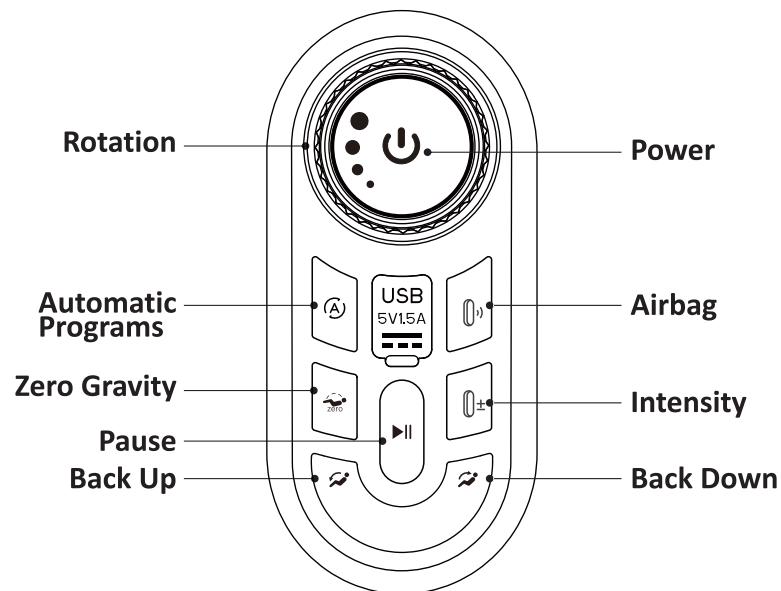

► MASSAGE CHAIR OPERATION

ARMREST CONTROLLER OPERATION

The Armrest Controller gives you the convenient access to key functions of your chair. Please use the Main Controller for full access to all of the chair's functions (see page 7).



Power Button

- ▶ Press to turn ON the massage chair.
- ▶ Press again to turn OFF the chair.



Rotary Switch

- ▶ Rotate clockwise to increase massage intensity.
- ▶ Rotate counterclockwise to decrease massage intensity.
- ▶ The stage are divided into 1-6 stage.



Pause Button

- ▶ Press to pause the massage function.
- ▶ Press again to resume the massage function.



Auto Button

- ▶ Press to switch between the automatic programs.



Airbag Button

- ▶ Press to turn ON/OFF and select the position of airbag.



Intensity Button

- ▶ Press to adjust the airbag pressure from level 1-3.



Zero Gravity Button

- ▶ Press repeatedly this button to activate one of the three zero gravity modes.



Backrest Up Button

- ▶ Press and hold to bring backrest up.
- ▶ Release when it reaches your desired position.




Backrest Down Button

- ▶ Press and hold to bring backrest down.
- ▶ Release when it reaches your desired position.

► MASSAGE CHAIR OPERATION

MAIN CONTROLLER

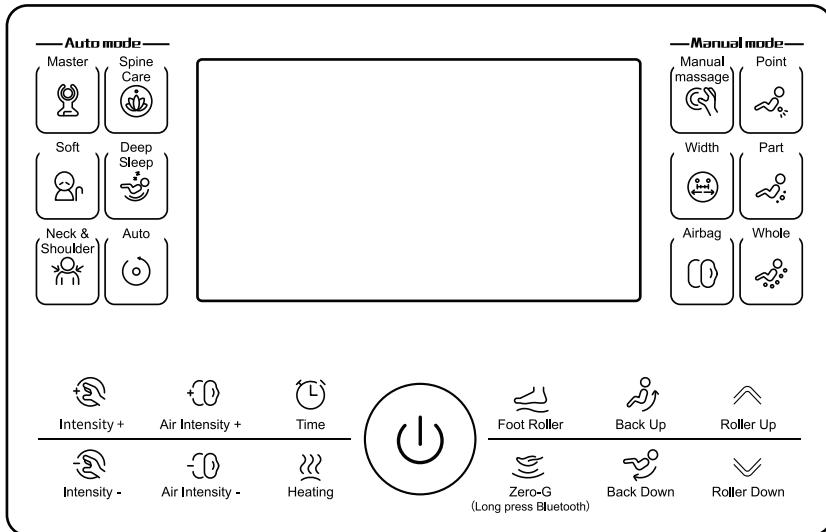

CAUTION

- Do not sit, step or place heavy objects on the controller.
- Do not drop the controller. It is recommended that the controller be placed in the controller side pocket when not in use.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.

Bluetooth pairing

On your phone Bluetooth list, choose the model M109 to do the pairing.



► MASSAGE CHAIR OPERATION

MAIN CONTROLLER OPERATION



Power Button

- Press to turn ON the massage chair.
- Press again to turn OFF the chair.



Master Button

- Press the button to running the Master Program.



Spine Care Button

- Press the button to running the Spine Care Program.



Soft Button

- Press the button to running the Soft Program.



Deep Sleep Button

- Press the button to running the Deep Sleep Program.



Neck &Shoulder Button

- Press the button to running the Neck & Shoulder Program.



Auto Button

- Press to switch between the automatic programs.



Manual Button

- Press to select manual massage option: Kneading, Clapping, Knocking, Tapping, Shiatsu or Rolling.



Point Button

- For fixed-point massage.
- Press "↗" or "↖" to adjust the massage position.



Part Button

- For the selected part of the back and forth massage.
- Press "↗" or "↖" to adjust the massage position.



Whole Button

- Massage back and forth in the Whole process.



Width Button

- Press to select the width of back roller: width, medium or narrow.

NOTE: Width cannot to be adjusted while having Auto programs, Kneading / Knocking / Rolling Massage.

► MASSAGE CHAIR OPERATION

Intensity + Button

- ▶ Press this button to increase the massage intensity.

Intensity - Button

- ▶ Press this button to decrease the massage intensity.

Airbag Button

- ▶ Press to turn ON/OFF and select the position of airbag.

Air Intensity + Button

- ▶ Press this button to increase the air intensity.

Air Intensity - Button

- ▶ Press this button to decrease the air intensity.

Time Button

- ▶ Press to set the massage time from 10-30mins.

Heating Button

- ▶ Press this button to turn on/off the Heating function.

Foot Roller Button

- ▶ Press to turn ON/OFF foot roller function.
- ▶ Press to select the strength of foot roller from level 1-3.

Zero-G / Bluetooth Button

- ▶ Short press to select Zero Gravity position from 1-3.
- ▶ Long press this button to turn on/off the bluetooth function.

Back Up Button

- ▶ Long press this button to raise the backrest and lower the leg rest.
- ▶ Release it to lock the current angle.

Back Down Button

- ▶ Long press this button to lower the backrest and raise the leg rest.
- ▶ Release it to lock the current angle.


Roller Up / Down Button

- ▶ Press and hold to adjust the back roller up / down in shoulder detection.
- ▶ Press and hold to adjust the back roller to the target position while having manual massage.

Note: When running Auto programs and the whole bodymassage, the roller up/down button is not available for adjustment.

► MASSAGE CHAIR OPERATION

Control Display

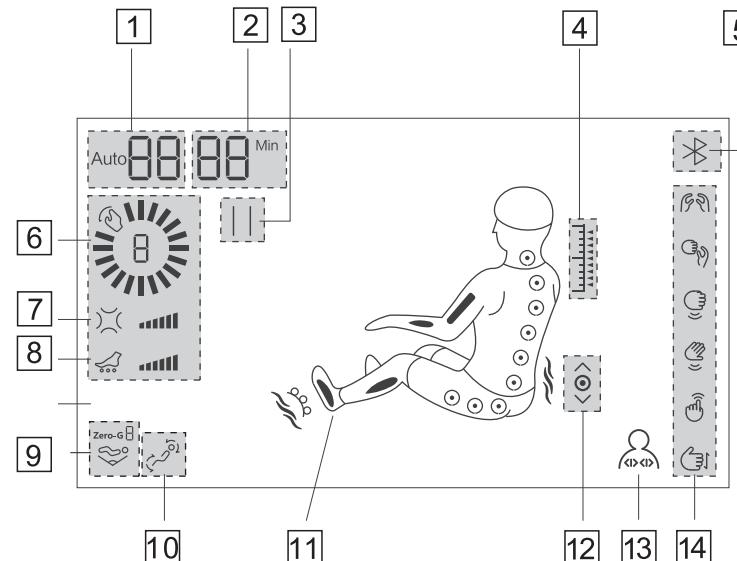

1 Auto/Manual Program Display Area

2 Time

3 Pause

4 Auto Body Scanning: The corresponding area flashes.

5 Bluetooth Speaker

6 Back Roller Strength

7 Airbag Intensity

8 Foot Roller Speed

9 Zero gravity display area:

10 Backrest Up/Down:

11 Heating: Light up when in use

Airbag massage: The corresponding area flashes

Foot Roller: Light up when in use

Back Roller: The corresponding area flashes

12 Back Roller Display Area: Full Body

Spot

Local

13 Massage Width: Wide

Medium

Narrow

14 Massage Techniques: From top to bottom: Kneading-Clapping-Knocking-Tapping-

Shiatsu-Rolling. The selected technique flashes when used.

► MASSAGE CHAIR OPERATION

Automatic Programs

Function	Description
Master	Master mode, full body massage, and the intensity of roller and airbag massage are strong.
Spine Care	Widely use acupressure and scraping techniques, focusing on both sides of the spine massage to improve body microcirculation.
Soft	Suitable for the elderly and children, full body massage, rollor and airbag massage in the lightest way to improve back pain and leg cramp for the elderly.
Deep Sleep	Full body massage, push rod up/down, slow swing function, light intensity for rollers.
Neck & Shoulder	The partial massage focuses on improving neck pain and shoulder muscle strain, and the roller is focusing more on neck and shoulder massage.
Slim	Focused on waist and hip massage, soft intensity.
Refreshing	Medium intensity rollers on the back combines with full body airbag squeeze to relax and wake up your body in the morning or after noon break.
Relaxing	Relaxing mode, full body massage, medium intensity for roller and airbag massage.
Spa	Full airbag massage and foot roller massage.
Sport Care	Full body massage, a program designed specifically for athletes and fitness person.
Deep Stretch	Full body massage to better relieve muscle soreness after sport or hard work.
Waist & Back	Partial massage, focus on waist and back, help to relieve muscle soreness of back and waist.

NOTE:

Back roller width and speed cannot be adjusted while having Automatic Programs.
Backrest and legrest angles cannot be adjusted while having Stretch and Sleep Programs.
The chair will not return to its initial position after finishing the Sleep Program. Please press the power button to return to the initial position.

► SETUP


INSTALLATION METHOD

STEP 1: Unpack All Parts

- Carefully lift the chair and all of its parts from packaging.
- Remove any protective wrapping and check to make sure that all parts are present.
- Before beginning installation, please verify all components are included.

STEP 2: Install the connection

- Connect the cable of remote controller with the cable under seat.

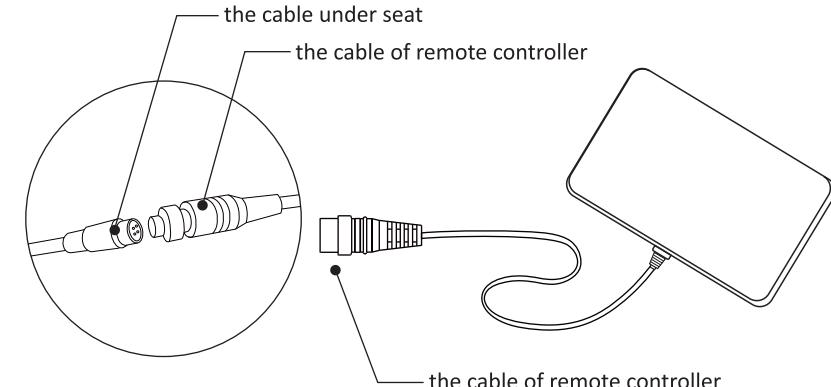

NOTE:

There is only one correct direction to insert the cable, please observe the interior of the plug and you will see the hint.

STEP 3: Installation of manual bracket


- Align stand and pole.
- Screw nut to secure it.




► SETUP

STEP 4: Install the Backrest Pad and Pillow

- ▶ Attach the upper backrest pad to the backrest with the zipper.
- ▶ Attach the pillow pad to the backrest by connecting the zipper.

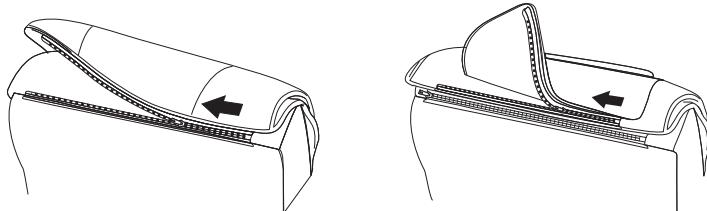


- ▶ Attach each side of the backrest pad with the zipper closer.

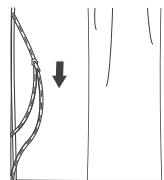

BEFORE USING THE MASSAGE CHAIR FOR THE FIRST TIME


- ▶ Make sure there are no objects, people, or pets in the vicinity of the unit.
- ▶ Check that the chair has room to recline. Allow at least 16 in. of open space in front of the legrest and 10 in. behind the backrest.
- ▶ Use the controller to lower the backrest to its furthest outstretched position.
- ▶ Raise the legrest to its highest position. Make sure that the legrest is properly connected to the chair.
- ▶ Press the power button to return the chair to its original, upright position.

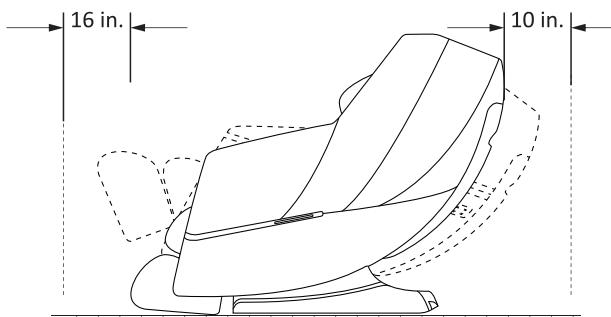

► SETUP


MASSAGE CHAIR PLACEMENT

- ▶ Ensure adequate space to recline.
- ▶ Do not expose the massage lounger to direct sunlight or high temperatures, such as in front of heating sources because this can cause discoloration or hardening of the synthetic leather.
- ▶ Place the unit on a mat to prevent floor damage.
- ▶ Install the unit near a power socket.
- ▶ Be sure to place the chair within 4 ft of a power plug.

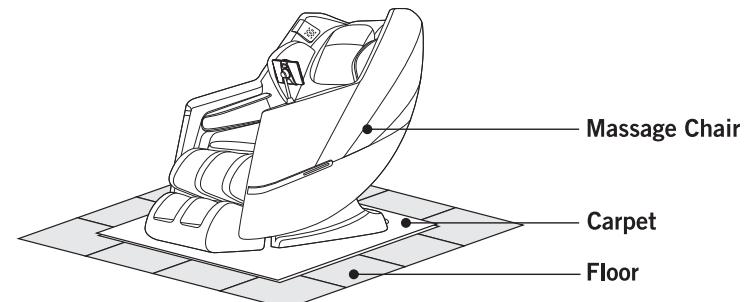

MOVE METHOD 1


- ▶ Turn off the main power and unplug the power from the electrical outlet.
- ▶ Tilt the chair backwards as shown below and wheel to desired location.
- ▶ Be sure to cover the floor with a mat when moving the massage chair to not damage the floor.

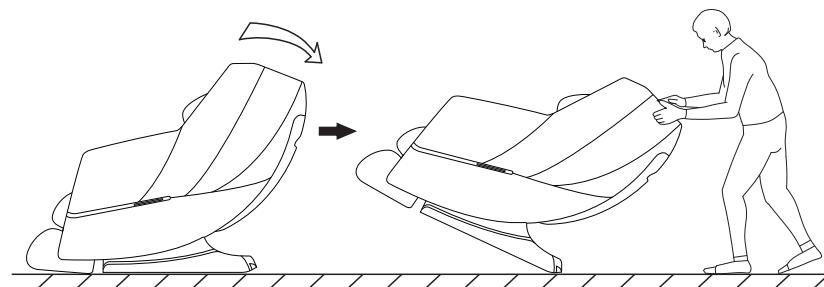

► SETUP

MOVE METHOD 2

- ▶ Two people reach under the chair on each side of the arms and hold the steel frame to avoid damage to the rest of the chair.
- ▶ Move to desired location and carefully place the chair on the ground.

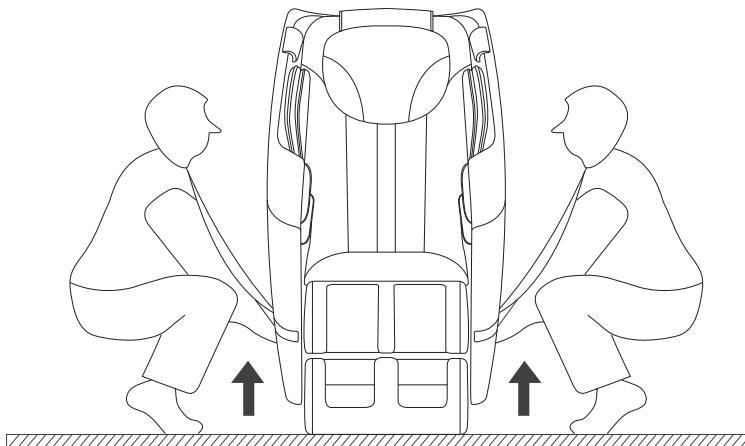

⚠ CAUTION

- ▶ Do not attempt to move the chair while someone is still sitting on it.
- ▶ Do not move the chair by pulling its armrests, as the armrests can dislodge.
- ▶ Before plugging it in, inspect the entire power cord and plug for any possible damage. Make sure that no electrical wires are exposed.
- ▶ Make sure that the power supply switch is turned OFF before inserting the power plug into a wall outlet.


► SETUP

GROUNDING INSTRUCTIONS

This unit must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

TURNING ON THE POWER

- ▶ Plug the power cord into the port at the base of the chair.
- ▶ Plug the three-pronged power plug into a properly grounded three-pronged power outlet.
- ▶ Flip on the power supply switch, located on the back of the massage chair at the base of the backrest.

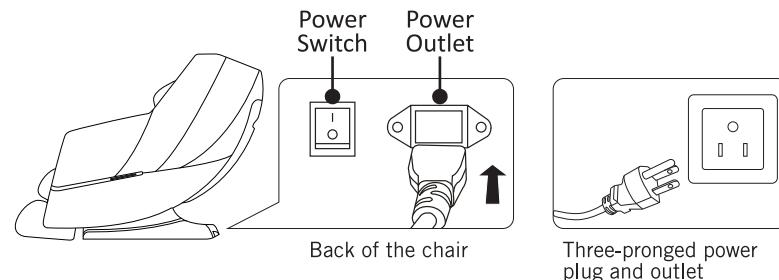

⚠ DANGER

- ▶ This product is for use on a nominal 120V~ circuit and has a grounding plug that looks like the plug illustrated. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.
- ▶ Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

▶ PRODUCT STORAGE AND MAINTENANCE

CLEANING

- ▶ Before cleaning, switch OFF power and remove the power plug from the wall outlet.
- ▶ Dip a soft, cotton cloth in neutral detergent and wring dry. Use it to wipe the pillow cushion, back cushion, armrests, legrests, and any plastic parts of the chair.
- ▶ Use a piece of wet cloth (without detergent) to re-wipe the pillow cushion and back cushion.
- ▶ Use a soft, dry cloth to re-wipe the armrests, legrests, and any plastic parts of the chair.
- ▶ Use a soft, dry cloth to wipe the controller, and the power supply box.
- ▶ To clean the foot/calf unit covers, remove them from the chair, hand wash with mild detergent and hang dry.

CAUTION

- ▶ Before any maintenance, always disconnect the power plug from the wall outlet.
- ▶ To avoid electric shock, never touch the power plug with wet hands.
- ▶ When cleaning the back cover of the massage chair, do not allow any detergent to seep into the power supply box.
- ▶ Do not use abrasive chemicals, such as benzene or alcohol, to clean this chair. Damage to the chair may result.
- ▶ Do not apply an iron or any other heated device to the chair.

STORAGE

When not in use, be sure to switch off power and detach the power plug from the wall outlet. Before putting into storage, wipe off all accumulated dirt and dust from the surface of the chair. Cover the entire surface of the chair with a dust cover (not included).

CAUTION

- ▶ Do not store the product under direct sunlight, nor in a location with high temperatures. Doing so may cause the upholstery to fade.
- ▶ Do not allow massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

MAINTENANCE

Upon detecting any of the following conditions during daily use, immediately turn off power, disconnect the power plug from the wall outlet, and contact an authorized repairman:

- ▶ A burning smell
- ▶ The cord is plugged in and the power switch flipped on, but no functions operate
- ▶ The power cord feels hot
- ▶ Any other abnormal functioning

▶ TROUBLESHOOTING AND PRODUCT SPECIFICATIONS

No.	Problem	Check the Following:	Explanations / Remedies
1	Noise is heard during operation.	N/A	These noises are normal and arise from slight friction between the massage rollers and the leather cover.
2	Operation fails to start.	The power cord is not secured to the socket.	Insert the power plug properly into the power socket.
		Power Switch is off.	Turn on the switch.
		PCB board or Power board is damaged.	Replace a new PCB board or Power board.
3	Airbags within the seat and the Legrest fail to work properly.	Are the air tubes blocked or loose?	Straighten the air tube and Connet the airt tube firmly. clear it of any blockages.
4	No music comes from the speakers.	Bluetooth didn't connect with the music device.	Reconnect to the Bluetooth.
5	Backrest or footrest cannot ride or recline.	Excessive load has been pressed on the backrest or legrest.	Reduce the load and try again later.
6	Massage rollers stop working.	Too much stress on the massage rollers.	Reduce the load and try again later.

If problems persist after applying the suggestions above, turn off power and remove the power plug from the wall outlet. Then contact the manufacturer for maintenance and repair.

PRODUCT SPECIFICATIONS

Product Model: R6M10

Rated Voltage: 120V~

Rated Frequency: 50~60Hz

Rated Power: 120W

Safety Design:Class I

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This

Equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.