


MINI SPEAKER USER MANUAL

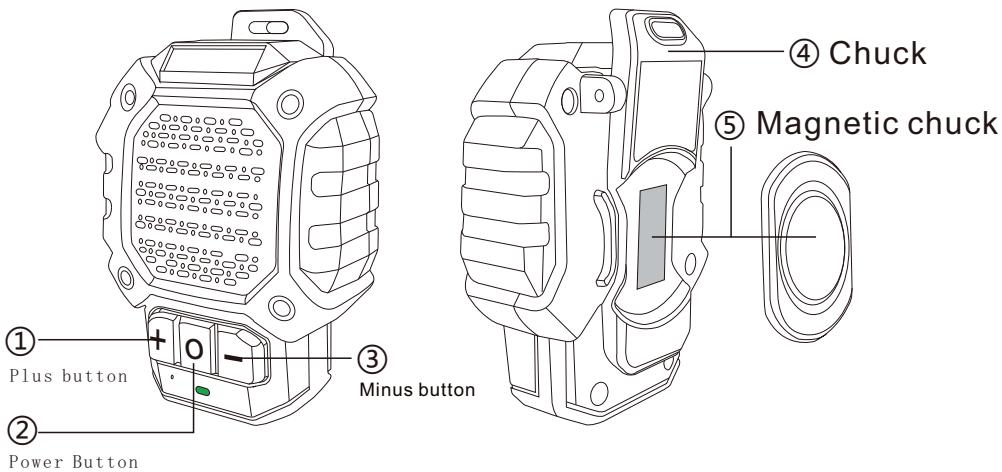

Instructions for Function Key Operations

Plus button:

Press plus button once: Increase volume;

Long press the plus button: Skip to the next song

Minus button:

Press the minus button once: Decrease volume;

Long press the minus button: Skip to the previous song

Power button:

Press and hold the power button for 3 seconds to turn on or off the device. Please ensure that the device is fully charged when using it for the first time .

Double press the power button: Activate the phone's voice assistant.

Non-call mode:

Press the power button once: Pause/Play music;

Call mode:

Press the power button once: Answer/Hang up the call

User Guidance

1. Speaker Mode: When the device is powered on, it automatically enters Bluetooth speaker mode. To connect, enable Bluetooth on your device, search for the speaker model, and select it. Once connected, you can start playing music.
2. Call Mode: When a call is received, the device will automatically switch to call mode to ensure clear communication. After the call ends, the device will automatically revert to speaker playback mode.
3. Use of Clasps and Magnetic Plates: The device can be securely attached to belts or clothing using the clasps, or fixed onto clothing, metal cabinets, or metal poles using the magnetic plates. Ensure that the device is securely fastened before use.
4. Charging Method: Charge the device using the included Type-C charging cable. When the battery is low, the indicator light will flash as a reminder to charge the device promptly.

Precautions:

1. Automatic Mode Switching: After a call ends, the device will automatically switch from headset mode back to speaker mode. Please be cautious of sudden volume increases after the call ends.
2. Avoid Intense Movement: When securing the device to clothing using the clip or magnetic plate, avoid intense movements to prevent the device from falling off.
3. Headset Call Volume: When using the headset in noisy environments, adjust the volume to ensure clear communication.
4. Charging Safety: Use a standard Type-C charger to charge the device. Avoid using low-quality or incompatible chargers to prevent damage to the device or potential safety issues.
5. Water and Dust Resistance: The device has limited water resistance. Avoid using it in wet environments or heavy rain.
6. Keep Away from Heat and Fire: Avoid placing the device near high temperatures or open flames to prevent battery damage or other hazards.
7. Maintain Device Cleanliness: Regularly wipe the device with a soft, dry cloth. Avoid using chemical cleaners.
8. Proper Use of Magnetic Plates: The magnetic plate has moderate strength and is suitable for attaching to metal surfaces or thin clothing. When attached to clothing, it is recommended to avoid intense movements to prevent the speaker from falling.
9. Storage Precautions: When not in use for an extended period, turn off the device and store it in a dry, cool place, avoiding direct sunlight.
10. Proper Storage of Magnetic Plates: When not using the magnetic plates, store them properly to prevent loss or accidental ingestion by children.
11. Avoid Strong Impacts: Do not drop the speaker from heights or subject it to strong impacts to avoid damage to internal electronic components and the casing.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.