
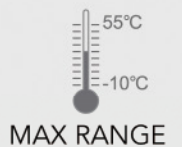


One Touch Motor Range

Operating Instructions

LOUVOLITE

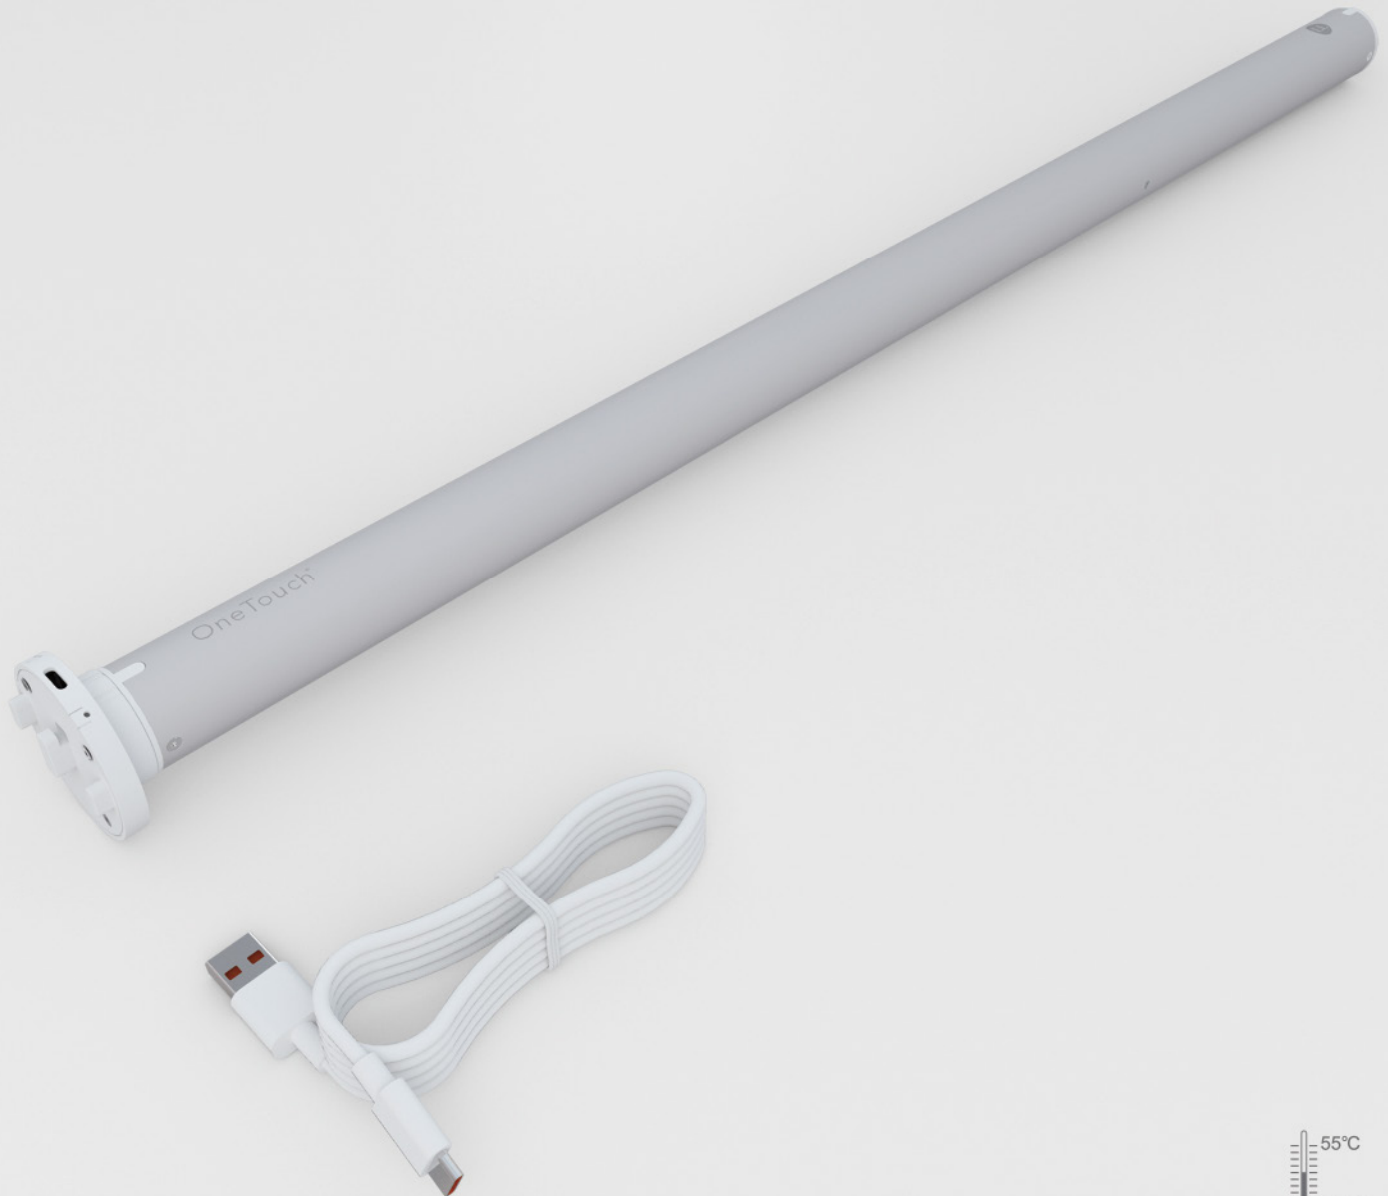

R2135-DCM Motor Information

Please fully charge motor before first use.

When a motor has no limits set it will operate in jog mode. Once the blinds top and bottom limits are set this will change to a continuous operation between limit positions.

This motor range is for indoor use only, do not use outdoors or in humid environments.

Each motor in this motor range has a built-in rechargeable Li-ion battery pack with integrated charging management. Max input voltage : 5V/2A.

An LED on the motor head will flash 8 times at the start of operation when the battery is running low.

Each motor can be paired with a maximum of 10 controllers.

Do not operate a motor when it is being charged.

A motors upper and lower limits cannot be set at the same position.

Limits are saved even if the motor runs out of battery or is powered off. Removing any or all remotes does not remove set limits.


The motor can run for a maximum of 6 minutes continuously.

During the setup/programming stage the motor will jog in operation, please do not proceed to the next step until it has completed this function.

When programming the motor, the operator has a 10 second window to complete each stage. If a stage is not carried out within the 10 second window, the motor will automatically exit the current mode and the motor will not be set.

Remote Layout

NOTE : The LCD remote screen displays the battery level of the blind on the LEFT side and the battery level of the remote on the RIGHT side.

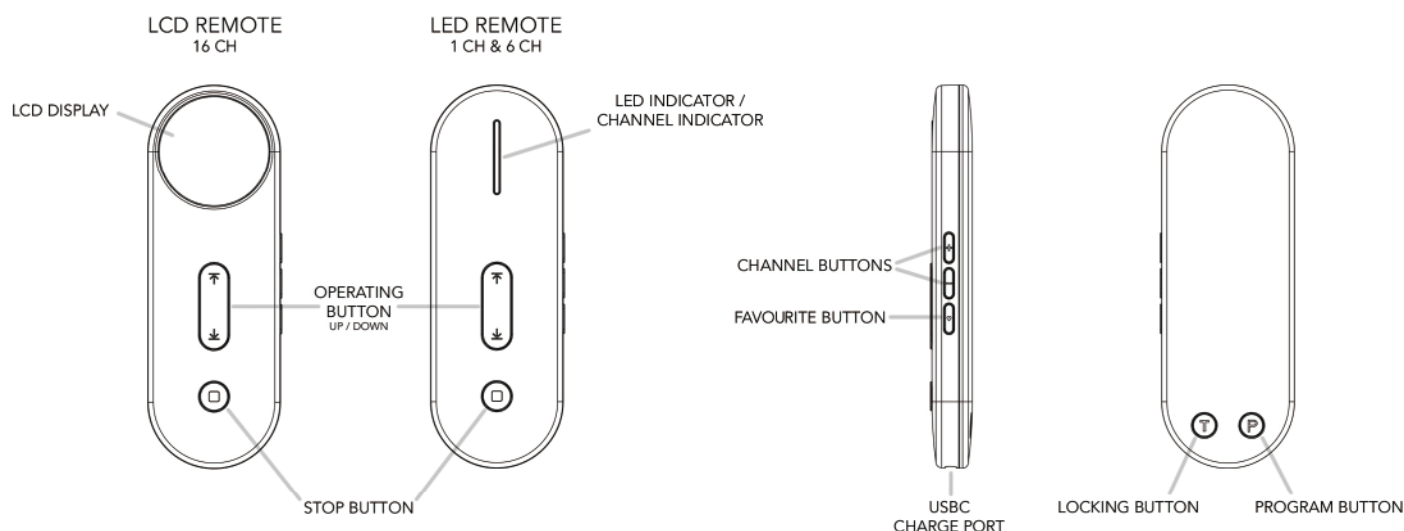

Motor Head Button Operation

Control Blind - UP, STOP & DOWN

- Short press the MHB. Each press will raise, stop or lower the blind.

Add/Remove Controller

- Press and hold the MHB for 2 seconds. The blind will jog and flash orange. Press the PROG button on the remote and the blind will jog. Remoted is added/removed.

Direction Reverse


- Hold the MHB for 10 seconds. The motor will jog and flash orange three times. The direction has been reversed.

Reset

- Hold the MHB for 16 seconds. The motor will jog and flash orange four times. All settings are deleted.

Smart Hub Connecting

- Hold the MHB for 2 seconds, the blind will jog and flash orange. Then press 3 times within 10 seconds. The motor will flash blue, motor is in pairing mode.

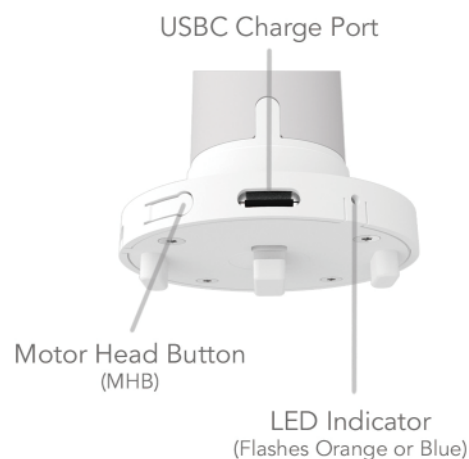


Power Source & Charging Options

Attaching the Solar Panel

- Make sure the motor has enough charge to operate the blind.
- Attach the solar panel to the charge port on the motor.
- Place / fix the solar panel so that it is facing direct sunlight.

Built in Lithium Battery Supply


- Recharge using USBC cable provided.
- Charge time is between 6 - 8 Hours.
- A full charge will last between 3 - 6 months. For the health of the battery we recommend charging at least once every 6 months.

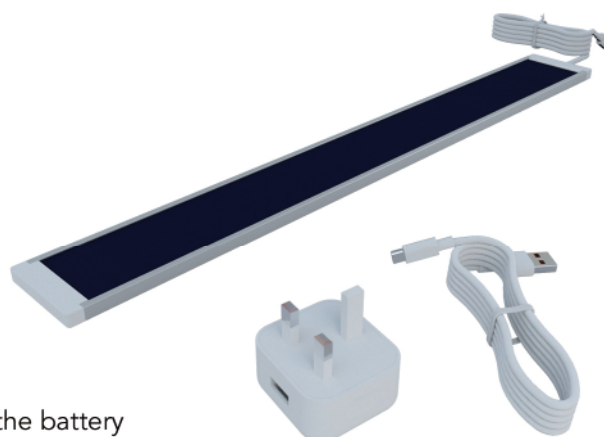

Pairing Remote

NOTE : Pairing can not be done under group channel or 0 channel.

Option 1 : Power on the motor and then add the remote

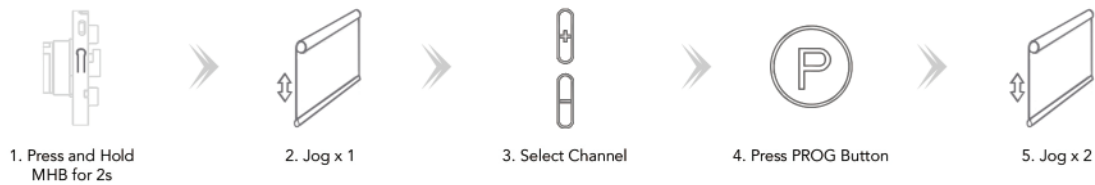

Option 2 : Add controller B via pre-existing controller A




Direction Reverse

Checking current direction



Option 1 : Changing direction if the limits are not set

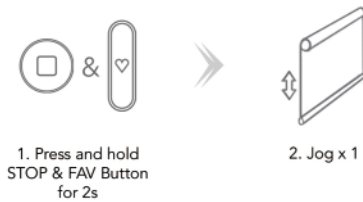

Option 2 : Changing direction if the limits are set



Upper and Lower Limit Setting

NOTE : Before limits are set, the motor will run in jog mode. For continuous operation hold down the UP or DOWN Button for 2 seconds. Once limits are set, motor will run continuously between limits. Upper and Lower Limits cannot be set at the same point.

Setting Upper Limit



Setting Lower Limit



Jog Mode / Continuous Mode

NOTE : Before limits are set the motor is in jog mode. When in jog mode hold UP or DOWN for continuous operation. Motor cannot be set to continuous mode before limits are set.

Same operation is used to move between both modes



Setting and Cancelling Favourite Position

NOTE : One Favourite Position can be set at a time.


Setting Favourite position



Cancelling Favourite Position



Hot Key for Favourite Position

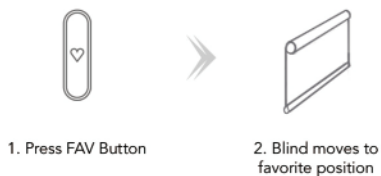

Adjusting Upper and Lower Limits

NOTE : Process has a 4 minute time limit.

Adjusting Upper Limit



Adjusting Lower Limit



Remove All Limits

NOTE : The motor limits should be set immediately after installing the blind to protect the blind from damage or misuse.

Removing all set limits



Remove Controllers

NOTE : Removing controllers does not remove set limits. To use a remote to remove a second remote, both must be paired to motor.

Remove a Single Controller



Remove Controller B via Controller A



Remove All Controllers



Adjust Motor Speed

NOTE : The motors have 3 speeds. The speeds of this motor are 20 / 24 / 28 RPM. If the motor does not jog at the final stage, the max/min speed has been reached. If the motor is reset it will return to its default speed.

Increase Motor Speed



Decrease Motor Speed



Soft Start/Stop

NOTE : Soft Start/Stop is on as factory default.

Turn Soft Stop/Start On



Turn Soft Stop/Start Off



Charging Light On/Off

NOTE : When motor is plugged in for charging a blue LED light will flash 6 times. During charging the blue LED light flashes 3 times every 8 seconds. When the motor is fully charged the blue LED light will stay on. This function turns the flashing charging light on or off.

Turn Charging Light On or Off



Function Lock

NOTE : When Function Lock is on all setting options are locked for that individual remote. Function lock must be turned off to make any changes to the settings. The LCD remote screen flashes 5 times to show it has changed in or out of locking mode. When operating the LCD remote in locked mode the screen flashes. The LED indicator of the LED remote will flash blue 5 times when moving in or out of locking mode.

Turn Function Lock on/Off




Smart Hub

NOTE : Enables the user to operate the motor when out of range using the Hub or a Smart Speaker. User must have LLOneTouch app installed. These steps will put the motor in the correct mode to connect to the app. See separate detailed App Instructions for full connection and installation process.

Option 1 : Entering Mode with Motor Head



Option 2 : Entering Mode with Remote

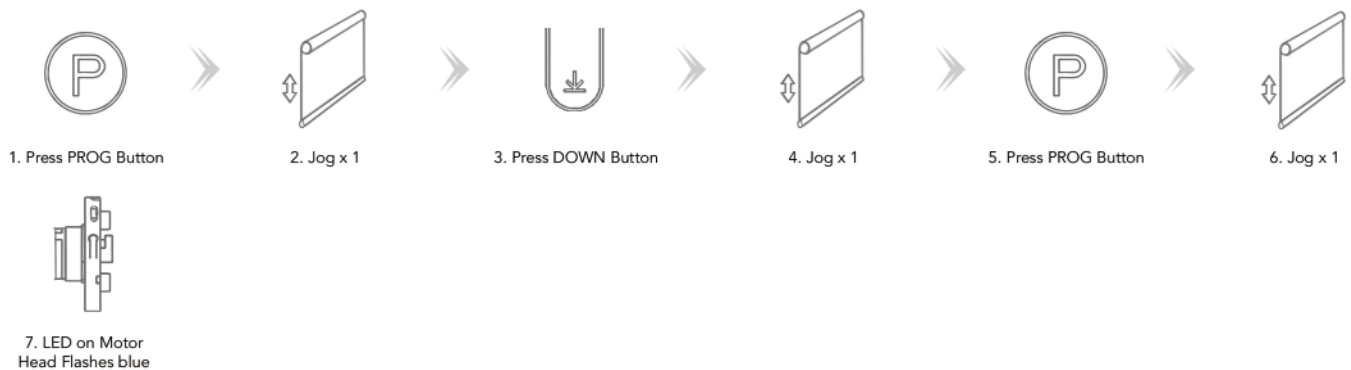

Matter Connecting

NOTE : Enables the user to operate the motor using a matter device. Example shown is for Apple Homekit using Apple HomePod. The app used is Home App. The HomePod must be added to the Home App before connecting the motor, please refer to manufactures instructions. The HomePod device allows the app to control the motors when user is off site. Make sure the phone used is connected to a Wi-Fi 2.4GHz network. Other matter devices are available. These steps will put the motor in the correct mode for connection.

Option 1 : Entering Mode with Motor Head


1. Press and Hold MHB for 6s
2. Jog x 2
3. LED on Motor Head Flashes Orange x 2
4. LED on Motor Head Flashes blue

Option 2 : Entering Mode with Remote


1. Press PROG Button
2. Jog x 1
3. Press DOWN Button
4. Jog x 1
5. Press UP Button
6. Jog x 1
7. LED on Motor Head Flashes blue

Setting App : Example Apple Home App


1. Open Home App. Have HomePod added to App.

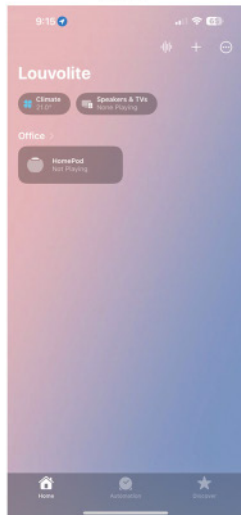


2. Click '+' to Add or Scan Accessory.

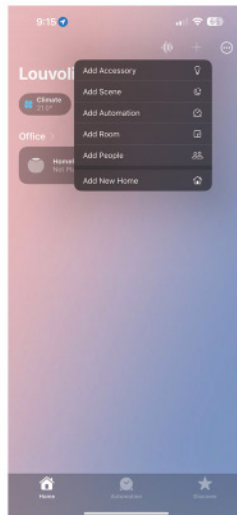


3. Scan the unique Setup Code on the motor to add to app.

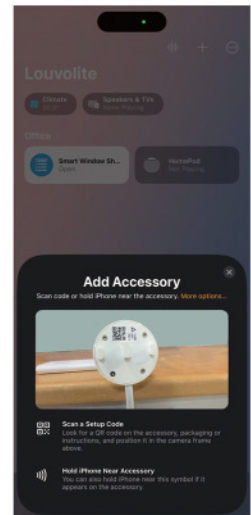


4. The app will search for the motor. Blue LED on Motor head will flash for successful pairing.

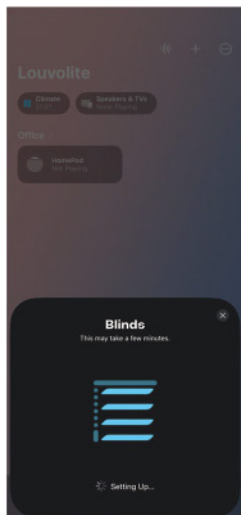


5. Set the Location of the Blind.

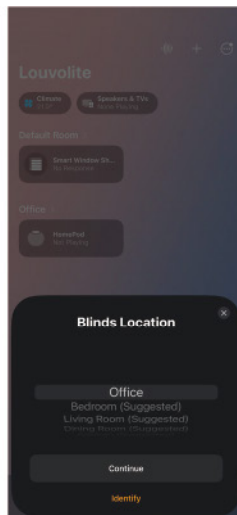


6. Set the Name of the Blind.

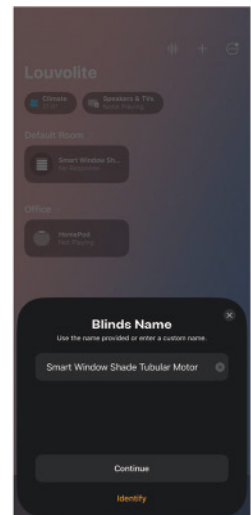


7. Set up Automations.

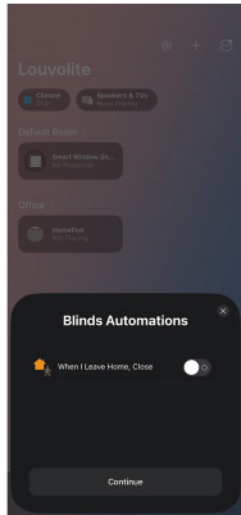

8. Blind can now be operated by the app from anywhere.

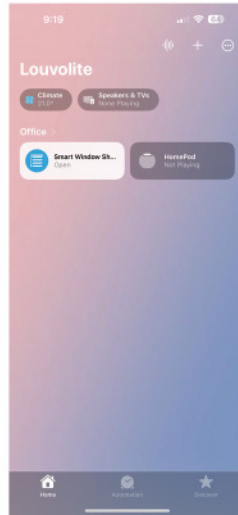

9. App can visually display the position of your blind when away from the home.

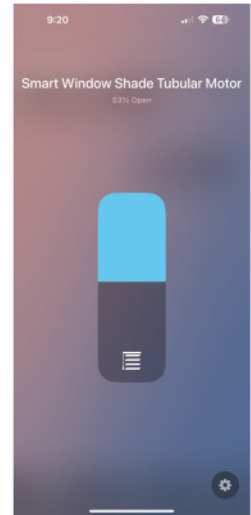

Troubleshooting

FAULT	CAUSE	SOLUTION
Motor is not responding	· Controller not paired · Motor is powered off · Low Battery	· Add Controller · Hold MHB for 2 seconds to turn on motor · Charge Motor
Motor stops suddenly	· Upper and Lower Limits not set correctly · Blind exceeds maximum lifting weight · Low Battery	· Re-set Upper and Lower Limits · Check blind weight · Charge Motor
LED light flashes 8 times on motor head when motor starts	· Low Battery	· Charge Motor

Label statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.