 


尺寸： 70*100mm
材质： 105g铜版纸
工艺： 风琴五折页

 
W17

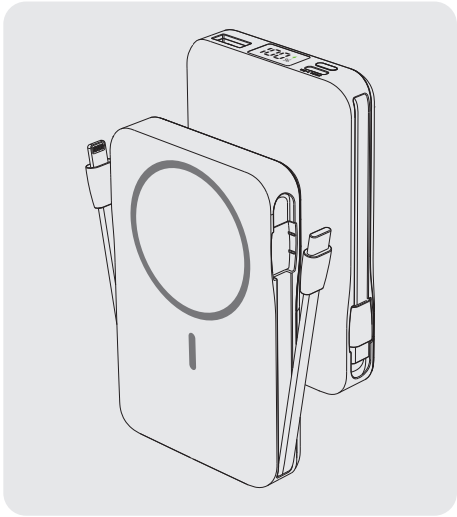


USER MANUAL

Portable Charger with Built-in Cable


Product Content




Portable Charger

 

Type-C Charging Cable



User Manual



Metal Ring

A. Portable Charger x 1

B. Type-C Charging Cable x 1

C. User Manual x 1


D. Metal Ring X 1

Product Specifications

Model Number	W17		
Product Name	Portable Charger		
Battery Capacity	10000mAh; 38.5Wh; 3.85V		
Product Material	ABS-PC		
Product Size	108*73*19.5mm		
Product Weight	205g		
Working Temperature	Working Temperature:10°C-55°C		
Port	Type C Port	Input	5V=3A 9V=2A 12V=1.5A
		Output	5V=3A 9V=2.22A 12V=1.67A
Built in Cable	USB A Output		5V=2A
	Output Cable (Type C)		5V=3A 9V=2.22A 12V=1.67A
	Output Cable(Lightning)		5V=2.4A
Main Charging Protocol	USB-C PD 2.0/3.0, APPLE 5V=2.4A, SAMSUNG DCP/AFC, QC2.0/3.0, FCP, SCP, PPS, etc.		

 
Switch ON/OFF

1.Press the ON/OFF button once, and the power bank will turn on and the LED will light up to show the remaining power level.



2.Press the ON/OFF button twice, the LED Display Screen will go out and stop charging.

Charging Method

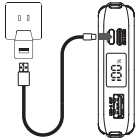


● Recharge the Power Bank (AC Adapter not included)

Type C Input

● 5 Ways to Charge Your Devices

 
Magsafe Charge



Charge Your Device Through Output Ports

USB Output Port

USB C Output Port

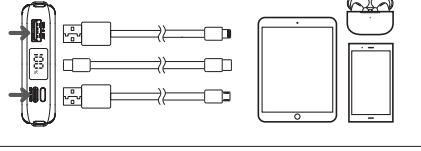

LED Display Activation Operation

Question:

 
What should I do when I receive the power bank?
Why can't the power bank be fully recharged?
What should I do when the power bank has not been used for a long time?

Solution:

Please activate the LED screen display of power bank.
Drain the power bank first, and then fully recharge it to 100%.

*Note:

During charging to 100% when the display is activated, you cannot disconnect the power or unplug the charging cable which may lead to inaccurate LED display.

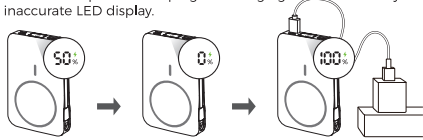

封面

THANK YOU

Warm Tips

When using this product, basic precautions should always be followed including the following:

1. Make sure your devices support charging before using them.

2. It is recommended to use the original fast charging cable and adapter.

3. Do not immerse the product in water or near ignition sources.

4. Do not disassemble the product without authorization for modification.

5. Store the product in a cool and dry place.

6. Do not store the product in hot or humid environments.

7. Do not clean the product with harmful chemicals or detergents.

8. Please store it out of the reach of little children.

9. Misuse, dropping, or excessive force may cause product damage.

10. Using a power supply or charger that is not recommended or sold by the product manufacturer may result in a risk of fire or personal injury.

11. Do not use connectors once the terminals are bent.

12. When connecting the connector, check the insertion direction and insert the connector directly.

13. Operating temperature should be between 32°F to 113°F/ 0°C to 45°C.

14. The power USB interface of this product is specially used for charging and powering USB devices. Please do not use this product for other purposes.

15. If the battery is hot or abnormal, please discontinue use immediately.

16. Do not disassemble the product. Take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of fire or personal injury.

17. If the product is not been used for a long time, it should be charged and discharged every three months.

18. The product may feel warm when charging the device, which is a normal operating situation and should not be a cause for concern.

Troubleshooting

Q: Fails to recharge the power bank.

1. First Time Using: When using it for the first time, please recharge the power bank after the remaining power is depleted.

2. The LED digital is still stuck at a certain value after a long recharging period:
Please deplete the power bank then recharge it again to see if it works.

3. Check if the connection between the charging cable, adaptor, and socket is loose.

4. Replace a charging cable, adaptor, or socket to recharge the power bank.

Q: Fails to charge your phone.

1. Check whether the power bank has enough power.

2. Ensure that the device is properly connected to the power bank.

3. Use the power bank to charge other devices to confirm whether the power bank can work normally.

4. The voltage of the charging device is not compatible with our product.

5. The charging cable or connector is damaged, please change them.

Q: Can I bring this power bank on board?

Declare the portable charger capacity to the airline in advance, subject to the airline's approval, passengers may carry up to two larger spare lithium-ion batteries (101-160 Wh)

Q: Is the AC adapter included in the package?

Sorry, there's no adaptor included in the package, please use your own adaptor to recharge the power bank.

Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions. (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction


Warranty and After-Sales Service


We offer 12 months of warranty, please get in touch with us if you have any questions:


1. Log in to your Amazon account

2. go to my order, find our product's order history "contact seller"

 **Manufacturer:**
Shenzhen Xuhan Technology Co., Ltd.

 **Address:**
Room 2801, Chuanghui Building, Wuhe Community, Bantian Street, Longgang District, Shenzhen

 **Email:** W17_support@163.com

 **MADE IN CHINA**

封底