


型號:A1
自帶雙快充線
使用說明書



方法：

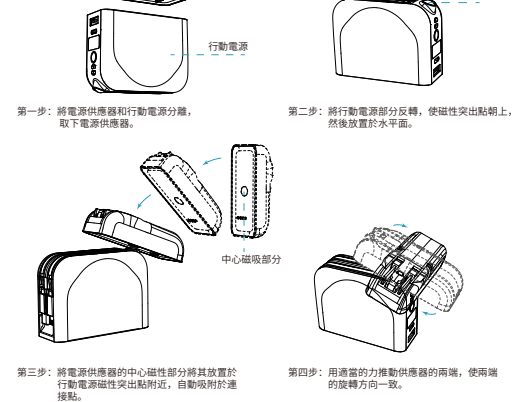

產品名稱:分離式磁吸行動電源
型號:A1
電芯類型:锂聚合物電池
供應商模式:
AC輸入:100~230V 50/60Hz 0.5A (Max)
Type-C口輸出:5V=3A/9V=2.22A/12V=1.67(Max) 觸點輸出:5V=2A(Max)
Type-C口和觸點只能同時輸出一個
供應商尺寸:207*85*31.34 ± 0.1mm
供應商重量:50±1g
行動電源模式:
觸點輸入:5V=2A(Max)
Type-C口輸入:5V=3A/9V=2A/12V=1.5A(Max)
Type-C口輸出:5V=3A/9V=2.22A/12V=1.67A(Max)
Type-C線輸出:10V=2.25A/5V=2.22A/9V=2A/12V=1.5A(Max)
Lightning線輸出:5V=3A/9V=2.22A/12V=1.67A(Max)
USB輸出:5V=2.4A(Max) 無線輸出:5V/5W 10W/15W
同時輸出:5V=3A(Max) 手錶無線輸出:2.5W
行動電源充電電壓:5Vdc: 5800mAh 5Vdc: 2800mAh 10Vdc: 2500mAh 12Vdc: 1800mAh
支持同時雙邊充電:AC輸入充電,輸出為5Vdc/1A 5VDC輸入充電,輸出為5Vdc/1A
行動電源尺寸:59.6*78.5*31.6 ± 0.1mm 行動電源重量:22.0±0.6g
公司:潮洲科技有限公司 電話:04-23803301 地址:南投縣南投市中興路63號 中國製造

1. 如果用錯誤型號的電池組替換會有著火或爆炸的危險,本產品不含任何可由用戶自行維修的部件,充電電池不可更換。

2. 將電池組投入火中或加熱爐中,或對電池組進行機械擠壓或者切割的處理可能導致爆炸;

3. 將電池組放置在極高溫度環境中可能導致爆炸或洩露可燃液體或氣體;

4. 電池組承受極低氣壓,可能導致爆炸或洩露可燃液體或氣體。

產品使用不當可能導致電氣功能失效、嚴重發熱、甚至起火、爆炸為避免給您人身、財產造成傷害，請嚴格遵照以下要求保存和使用本產品：

1. 本產品不允許兒童隨意於兒童無法觸及的位置，給兒童玩耍或使用，以免發生傷害。
2. 請務必確保符合當地安全標準（如符合BSM認證標準）的充電器與本產品充電，以免觸電或導致電池損壞。3. 請勿重傷、擊打產品並避免使產品產生嚴重發熱或導致電池使用過度，如發生上述情況，或有液體滲入「本產品」內部，可能導致電氣、電機損壞和故障，請立即停止使用並妥善處理。
3. 本產品發生鼓脹、變形、漏液、容量明顯下降等情況，請立即停止使用並妥善處理。
4. 請將本產品放在沒有可能影響到降溫的任何其他充電設備上充電。並確認與本產品不兼容的充電器、被充電器、電池等，在長時間使用後，應立即停止使用，並將其與本產品及其他設備進行充電時，不要將本產品和手機與其他設備疊放在一起，確保手機和其他設備的良好散熱。
5. 嚴禁折斷、損壞、剪斷、短路本產品或投入火中（包括靠近爐灶、暖氣等熱源）或暴露於溫度高於60°C（140°F）的環境下。
6. 天氣炎熱時，請勿將本產品放在室外，如車內或其他陽光照亮的場所。
7. 本產品中包含鋰離子聚合物電池，本產品自產自銷產品外賣，製造造成電池損壞或其他危險。

- 首次充電時，請將本品充滿電。
- 行動電源存在轉化效率，故移動電源電池容量不等於可充電容量。
- 在為本品充電或使用本品為其他設備充電時，請自行選擇提供充電的充電器和數據線。
- 對本品充電或使用时，應確保有人看管，外出或長時間離開時請拆除電源。
- 請勿將本品與水或其他液體接觸，高壓充電後，請及時將連接線拆除，以免長時間處於連接狀態產生損耗。
- 本品按國家標準生產製造，可能由於保護電路，可連接於外部充電器嘗試充電。
- 長時間不使用本品時，請將本品電量保持於約25%-50%範圍，存放於陰涼乾燥環境。避免於高濕度腐蝕的狀態下長期存放本品，以延長產品壽命。
- 如因消費者違反使用說明書及說明書及財產損害責任將自行承擔一切後果，本公司將不承擔任何法律責任。

- 行動電源*
- 說明書*1

使用環境溫度：0°C至35°C非熱帶地區
存儲環境：0°C至40°C



*將手機放置在無線充上，按一下開關按鍵，打開無線充電功能。

*當用充電器給行動電源充電，同時使用無線充功能給設備充電時，此時只有普通5W線充電功能。


*行動電源充電過程中，充滿電的狀態下，由於充電協定切換到5V輸入狀態，此時開無線充電模式，只能進行普通5W充電。當停止給行動電源充電時，將自動重啟，並無線充電可進入快充模式。

*轉換頭只在其應用國家使用，不包含台灣。

Model:A1
Mobile power adapter
Product manual



Method:

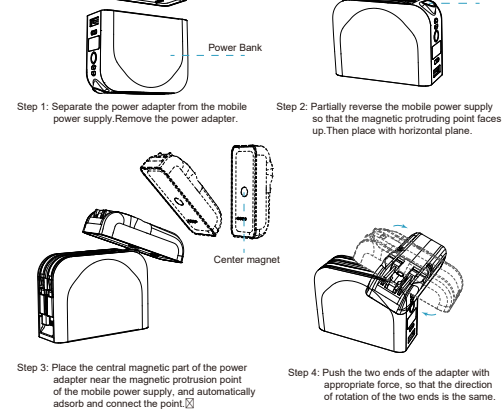[illegible]

1. If an incorrect model of battery pack is used as a replacement, there is a risk of fire or explosion. This product does not contain any user-serviceable parts, and the rechargeable battery is not replaceable.
2. Putting the battery pack into fire or heating it in an oven, as well as subjecting the battery pack to mechanical squeezing or cutting, may result in explosion.
3. Placing the battery pack in an extremely high-temperature environment may cause explosion or leakage of flammable liquids or gases.
4. Subjecting the battery pack to extremely low air pressure may cause explosion or leakage of flammable liquids or gases.

Improper use of the product may lead to battery malfunction or severe overheating, and may even cause fire or explosion. To avoid any damage to you and your property, please follow the instructions below when you use and store the product.

1. This is NOT a toy! Please place this product in areas that are not easily accessible by children. Do not allow children to operate this product, or accidents may occur.
2. Please charge this product with a charger approved by the local safety standards in case of danger or damage.
3. DO NOT apply pressure, and avoid collisions. The battery and circuit may be damaged if his product falls from a great height, experiences intense shocks, or is immersed in liquid; if so, please avoid using this product.
4. If the product suffers from deformation, leakage, or radical decline in performance, please stop using this product.
5. Do not charge or discharge the product in a place that may affect its heat dissipation. And confirm the use of this product is notBe covered by clothing, pillows, bedding or other debris, etc., in a long time to the phoneWhen charging other devices, do not stack this product with other electronic products, such as mobile phones, to ensure that mobile phones and other devices are in good conditionHeat down.
6. This product CAN NOT be disassembled, applied pressure, pierced,short-circuited, immersed in liquid, disposed of in a fire, or exposed to a high temperature or heat source with a temperature greater than140°F(60°C)
7. DO NOT place this product in areas with extremely high temperatures, such as under direct sunlight or in a vehicle with a mobile interior temperature.
8. This product contains lithium batteries. DO NOT disassemble it! Or danger or battery damage may occur.

Please fully charge this device before using it for the first time.
The power banks have conversion efficiency, so the battery capacity of power bank is not equal to the rechargeable capacity.
Please choose an appropriate charger for recharging this product and suitable cables when charging other devices.
Please ensure some supervision is in progress when recharging this product. DO NOT charge this product without any care.

Please remove the cable when done recharging this product or finished charging for any other device to preserve the product integrity.

If the indication does not light up after pressing the power button, please recharge this product.

Please preserve this product with a battery percentage between 25%-50% for long-term storage. Place this product in a cool and dry environment. To slow down battery aging, avoid storing this product in an empty or full charge for long-term storage.

Consumer shall be liable for any personal and property damage resulted from their improper use against the user manual or ignoring the warning, to which our company will not bear any legal liability.

Working temperature: non-tropical areas, 0°C to 35 °C
Storage temperature: 0°C to 40°C

! putting in fire. If severe swelling occurs, do not continue to use. Do not place in high-temperature environment. Prohibited from use after immersion in water.

*Place the phone on the wireless charger, click the switch button to turn on the wireless charging function.

* During the charging process of the mobile power supply, in a fully charged state, since the charging protocol is switched to the 5V input state, it is turned on at this time. In wireless charging mode, only ordinary 5W charging can be performed. When you stop charging the power bank, it will restart automatically, and Wireless charging can enter fast charging mode.

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

未經符合方法明確確定的任何更改或修改都不得使用以下無條件設備。

該設備符合 FCC 規則第 15 部分的要求。使用該設備受以下兩個條件的限制：

- (1) 該設備不得造成有害干擾。
- (2) 該設備必須接受任何干擾，包括可能導致必要操作性的干擾。

該設備者不得因其任何更改或修改而承擔任何責任。

注意：假使 FCC 的測試人員在該設備中發現有意或無意的干擾並建議實施 8 個數位位的限制要求。這些限制將只在安全安裝設備符合合理的防干擾標準。該設備者、使用者和所有對該設備頻率的。

如果不上架到無線電台和接收器，可能會對無線電接收造成有害干擾。然而，無法連續在特定安裝中會發生干擾。如果該設備僅會對無線電電視造成有害干擾，可以通過調整和增加設備來確定，建議用戶嘗試該位置以下一種或多種措施來糾正干擾：

- 重新調整或移動接收天線的位置，新增設備與接收器之間的距離。
- 將設備連接到接收器不同的天線的插座上。
- 諮詢經銷商或有經驗的無線電/電視技術人員尋求幫助。

該設備已通過評估，符合一定的射頻暴露標準。在可攜式設備條件下，

可以不受限制地使用該設備。



FCC

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may interfere with radio communications if it is not used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction ☑

