


1. Remote Control Panel

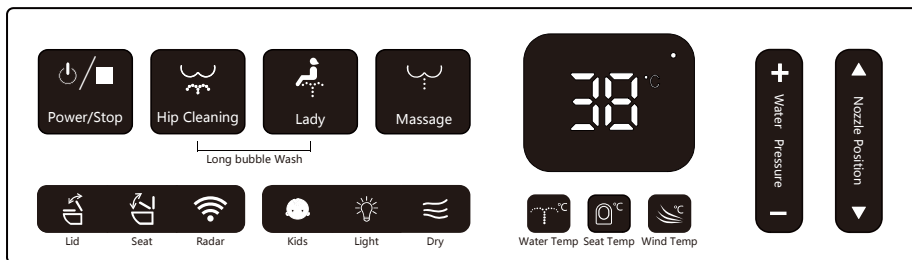

2. Instruction

2.1 Remote Matching

Long rotate the knob on the unit backward, energy saving blinking into the remote control pairing mode.

Continuously press the <Cover> button on the remote control 3 times, the buzzer chirps the end of the buzzer, press any key on the remote control, the buzzer sounded that the remote control pairing is successful.

Attention: Factory default has been matched, if the remote control can not be operated, please re-match.

2.2 Description of Remote Control

Entering the seat state: Seated means that the human body has to enter the seat to the product seat sensor identification area, and the indicator light switch light blue to yellow, for the state of the seat.

 Power/Stop	To stop the current work, short press for shutdown.
 Hip Cleaning	- With the human body on the seat, press <hip cleaning> to execute the hip cleaning function, the default is to move off. - Hip cleaning state: short press <hip cleaning>, the implementation of mobile cleaning function. - During the washing process, press <stop> to stop the washing function, if you don't press <stop>, the washing function will stop automatically after about 2 minutes. - Bubble Wash: Provides more balanced water temperature, avoiding the problem of uneven hot and cold water when rinsing in winter.
 Lady Cleaning	- When the human body is seated, short press <lady cleaning> to execute the female wash function, the default movement is off. - Under the state of lady cleaning: short press <lady cleaning>, execute the mobile washing function. - During the cleaning process, press <stop> to stop the cleaning function. If you do not press <stop>, the cleaning function will stop automatically after about 2 minutes. - Bubble wash: Provides more balanced water temperature, avoiding the problem of uneven hot and cold water when rinsing in winter. -When the human body is seated, short press <lady cleaning> to execute the female wash function, the default movement is off. - Under the state of lady cleaning: short press <lady cleaning>, execute the mobile washing function. - During the cleaning process, press <stop> to stop the cleaning function. If you do not press <stop>, the cleaning function will stop automatically after about 2 minutes. - Bubble wash: Provides more balanced water temperature, avoiding the problem of uneven hot and cold water when rinsing in winter.

 Message	When you are start poop activities, press <Message> to activate the massage function to relieve poop movement.
 Cover	Under the state of leaving the seat, short press <cover> to execute the function of opening and closing the seat (manual flip cover this button has no function).
 Seat Cover	Under the state of leaving the seat, short press <Seat Cover> to perform the function of opening and closing the seat (manually turn over the cover of this button has no function).
 Radar	- Short press <Radar> 2 beeps to turn on microwave, 1 beep to turn off microwave. Default on. - Automatic induction opening, when a person is close to the automatic flip cover, away from the seat after 90 seconds the automatic closure of the cover; - Such as toilet installation from the aisle is too close to the frequent automatic opening, you can short press the radar function key to manually close the automatic induction opening function. - When first testing radar, after closing the cover require to an interval of 30s trigger the auto-sensing opening again.
 Kids	- The indicator light color switches from light blue to yellow to enter the child wash state. - Tap child wash again to turn off child wash (knob color switches from yellow to light blue to turn off) - Children on the seat, short press <Kids>, the implementation of the children's cleaning function, the default mobile off. - When the child is washing: short press <Kids> to execute the mobile washing function. - During the cleaning process, short press <stop> cleaning function, if not short press <stop>, about 2 minutes after the automatic stop cleaning function. - Smaller water pressure than adult cleaning, more in line with the requirements of children's use.
 Light	Short press <Light>, the implementation of the night light switch, long press the implementation of <Light> energy-saving switch.
 Dry	The human body with the seat state, short press <Dry> execution of the drying function.
 Water temperature	Under the state of cleaning, short press the water temperature to adjust the water temperature, the indicator shows the gear (a total of 4 gears, 0-3 gears), the default 2 gears.
 Seat temperature	Under any state, short press <seat temperature> to adjust the seat temperature, the indicator shows the gear (total 4 gears, 0-3 gears), default 2 gears.
 Wind Temperature	Under the state of baking, short press <wind temperature> to adjust the wind temperature, the indicator shows the gear (total 4 gears, 0-3 gears), default 2 gears.
 Nozzle Position	Under washing condition, short press <nozzle position>, "<" or ">" for spray bar adjustment, total 5 speeds.
 Water Pressure	Under the state of cleaning, press <water pressure>, "+" or "-" to adjust the flow rate, a total of 4 speeds.
Attention: Press and hold the hip cleaning, lady cleaning and self-cleaning function to activate the bubble wash.	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction