


# 封面

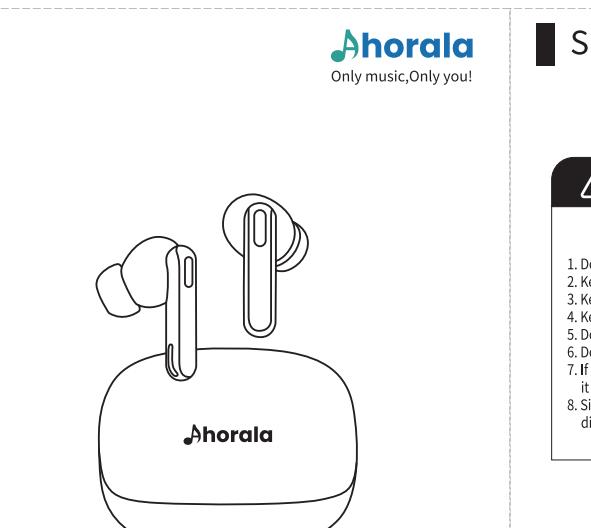


**Ahorala 007**  
True Wireless Earphones  
Noise Cancelling Earphones

## Safety Warning Section

**Warning!**


- 1. Do not dismantle or refit the product to avoid malfunction or fire hazards.
- 2. Keep away from corrosive liquids.
- 3. Keep away from extreme ambient temperatures below -10°C or above 50°C.
- 4. Keep away from children and pets.
- 5. Do not touch the earbuds with sharp objects.
- 6. Do not use the product in thunderstorm weather.
- 7. If it has not been used for more than a month, please charge and maintain it in time to ensure that it is safe.
- 8. Since the Bluetooth signal cannot be transmitted underwater, swimming, diving will cause the signal disconnected or intermittent.

## PACKAGE LIST

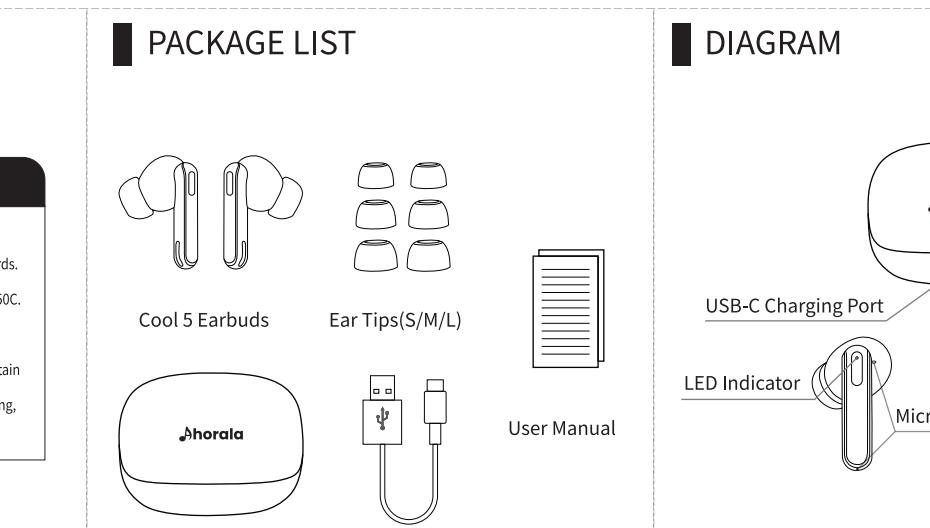


1. Cool 5 Earbuds  
2. Ear Tips (S/M/L)  
3. Charging Case  
4. USB-C Charging Cable  
5. User Manual

## DIAGRAM

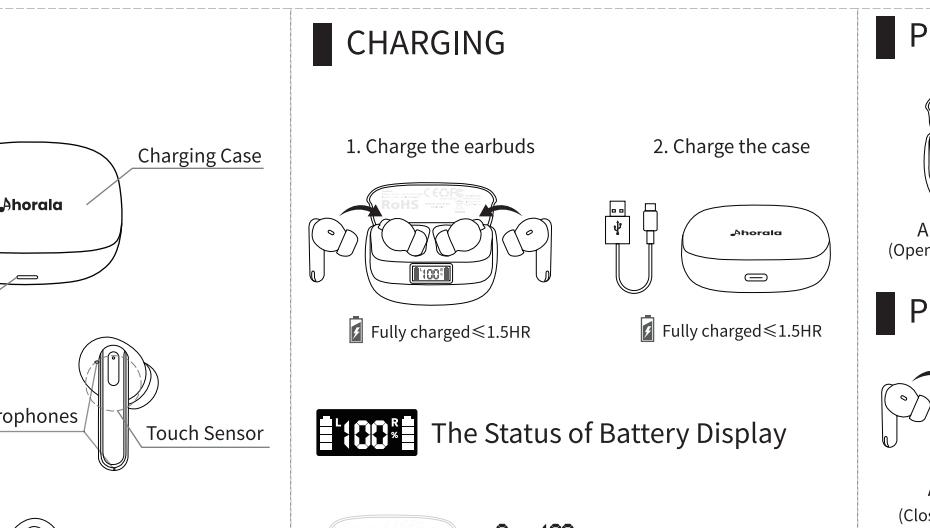

1. Charging Case  
2. USB-C Charging Port  
3. LED Indicator  
4. Microphones  
5. Touch Sensor  
6. Charging Point

## CHARGING

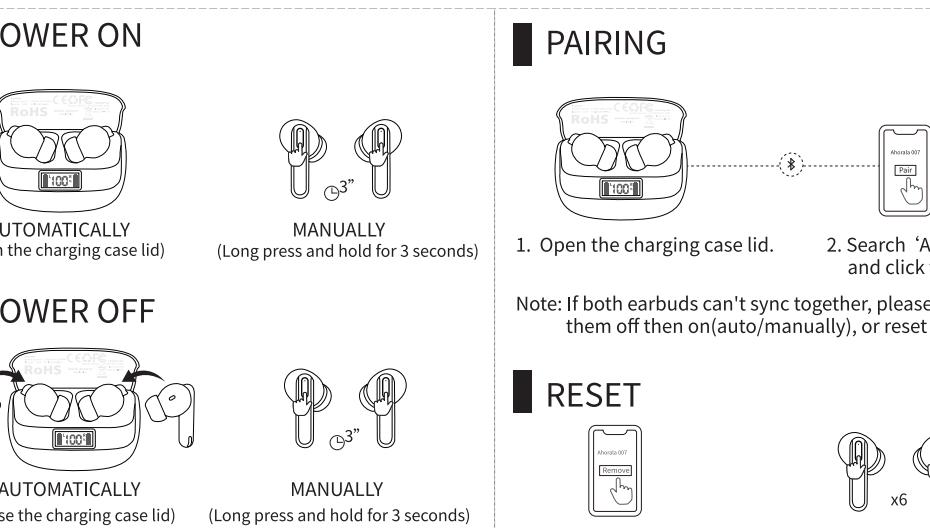


1. Charge the earbuds  
2. Charge the case  
3. Fully charged: 1.5HR  
4. Fully charged: 1.5HR

### The Status of Battery Display



Charging: The number blinks and shows the battery percentage.  
Fully charged: 100%

## PAIRING

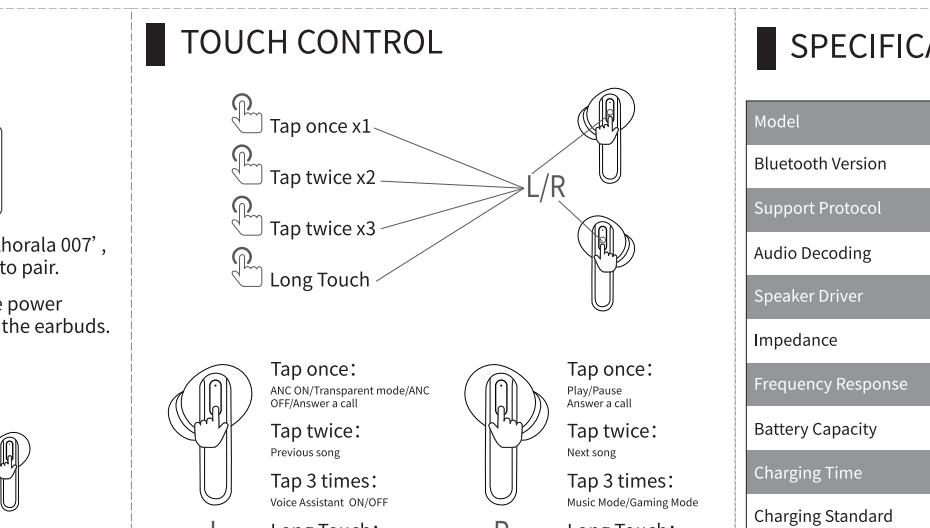


1. Open the charging case lid.  
2. Search 'Ahorala 007' and click to pair.  
3. Fully charged: 1.5HR  
4. Fully charged: 1.5HR

### POWER ON



 
1. Tap once  
2. Tap twice  
3. Tap three times  
4. Long touch

### POWER OFF




1. Tap once  
2. Tap twice  
3. Tap three times  
4. Long touch

### RESET

 

1. Remove 'Ahorala 007' from the Bluetooth list.  
2. Take both earbuds out of the charging case and tap 6 times on them simultaneously.  
3. Touch either earbud 6 times while the left and right earbuds are paired.  
4. Reconnect 'Ahorala 007'.  
Note: Due to the system, some phone models cannot sync volume with earphones.

## TOUCH CONTROL

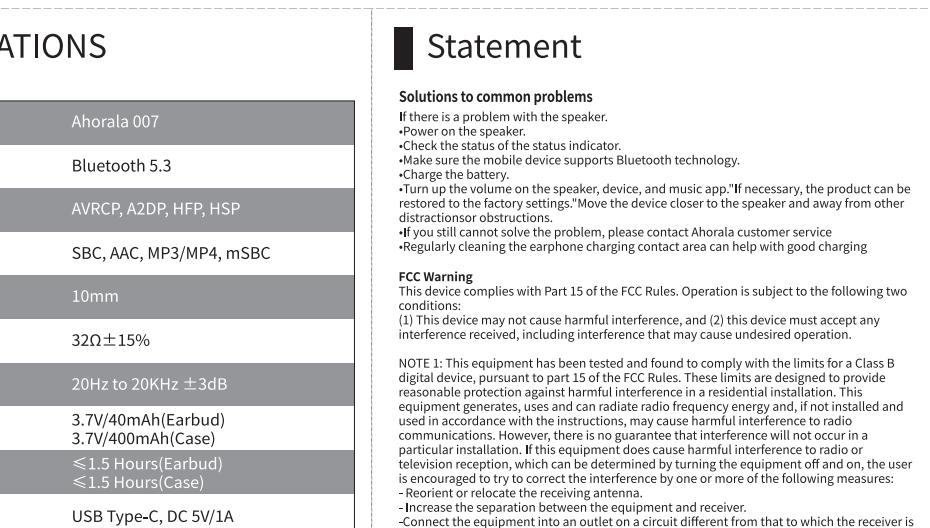

1. Tap once  
2. Tap twice  
3. Tap three times  
4. Long touch

## SPECIFICATIONS

Model	Ahorala 007
Bluetooth Version	Bluetooth 5.3
Support Protocol	AVRCP, A2DP, HFP, HSP
Audio Decoding	SBC, AAC, M/MP3/M4A/M4B
Speaker Driver	10mm
Impedance	32Ω ± 15%
Frequency Response	20Hz to 20KHz ± 3dB
Battery Capacity	3.7V/0.4mAH (Earbud) 3.7V/0.4mAH (Case)
Charging Time	≤ 1.5 hours (Earbud) ≤ 1.5 hours (Case)
Charging Standard	USB Type-C, DC 5V/1A
Applicable ambient temperature	-10~45°C

**Solutions to common problems**

- 1. If there is a problem with the speaker:
  - Check the status of the earbuds.
  - Make sure the mobile device supports Bluetooth technology.
  - Charge the battery.
  - Turn up the volume on the speaker device and music app.
  - If necessary, the product can be restored to the factory settings. Move the device closer to the speaker and away from other electronic devices.
  - If you still can't solve the problem, please contact Ahorala customer service.
  - Recharge the earbuds.
- 2. If both earbuds can't sync together, please power them off then on (auto/manual), or reset the earbuds.

**FC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

**NOTE:** Any changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in normal exposure condition without restriction.

**Battery Regulation**

This symbol on the battery(ies) or on the packaging indicates that the battery(ies) produced with this product shall not be treated as household waste. Instead, please separate batteries from other types of waste and recycle them via your local recycling system to protect environment and health. When the battery(ies) are no longer required, the symbol of the excess usage shall be marked under the separate collection symbol. For more information about the symbol, please contact your local authority or the shop where you purchased the product or battery.

## Statement

Thank you for purchasing the Ahorala 007. For any assistance or problems, please contact Ahorala customer service at 044-13751653.

**ROHS CE FCC**

封面