

User Manual

Tablet PC

NOTICE

- Keep the device and all accessories out of the reach of small children.
- Do not use or store the device in dusty, hot, cold, electric, chemical, moist, or magnetic areas.
- Do not drop, shake or knock the device. Rough handling can break the device.
- Do not leave the device into areas that may become hotter without attention, like tables in sunshine, a car with all windows closed, or on bed & charging, because the device can get to very high temperature and may cause accident.
- Never play the device while driving! Keep your eyes focusing on the road.
- Please turn off the device in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.
- Please do not disassemble the device or change the case personally, as it will void your warranty.
- Please use proper power adapter along with packing, or suggested by qualified sellers.
- Due to different marketing period, product update, regional disparities, System update or such reasons, we may, without notifications to you, change or modify some functions which could be different from the content in this page, please refer to real product received.

Main Functions Overview

- Wireless connections via Wi-Fi.
- System: Android™ 4.4
- Built-in multiple languages.
- Different applications supported (*.apk* files).
- Various music file supported.
- 1080P videos supported.
- Pictures browsing with zooming and slide-show.
- Built-in electronic calculator.
- Built-in electronic calendar
- High-speed USB connection with PC.
- External mouse and keyboard supported via OTG.

Basic Operation

Power On


Connect to power supply it will automatically turn on.

Power Off

Disconnect to power supply it to power off.

Home Screen



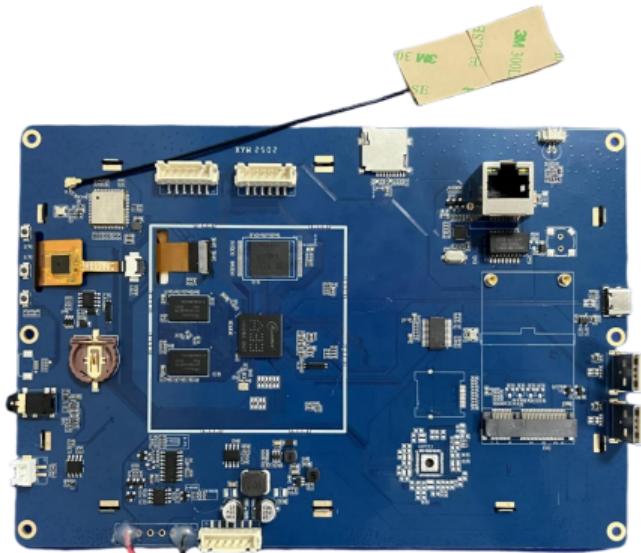


- **Notification Bar:** At the top of screen.

It displays time, Wi-Fi signals, and notification icons or previews, etc.



● **Notification Panel:** Slide down from Notification Bar. It displays switchers of functions and notifications. Tap the switchers to turn ON/OFF functions. Tap the notifications to open it, or slide it leftwards quickly to clear the notification. You can also slide the notification leftwards or rightwards

slowly, and click  to delay the notification, or click  to set notification type.

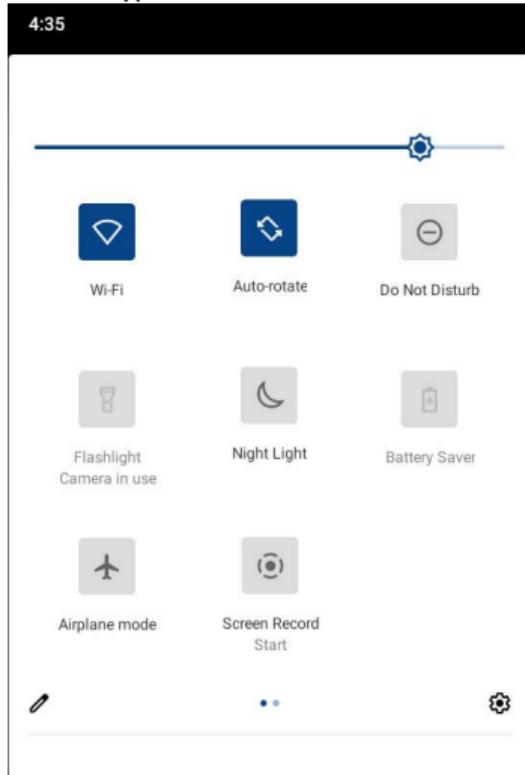

- **Navigation Button:** At the bottom of screen.

	Back Button Tap it to go to the previous page.
	Home Tap it to go to Home Screen.
	Recent Task Tap it to view recent tasks. Tap the task frame to open it, or long press it to remove from list.

- **Google Search Widget:** Tap the Widget to input keywords or tap the  icon for voice search (need network).



- **Enter App Menu:** At Home Screen, slide up to enter App menu, in which you can view all Apps list and search Apps.

- **Add Home Screen Apps:** You can add App icon to Home Screen from App menu by long pressing App icon and move to Home Screen before loosen your finger. Click App icon to

open it. Long press App icon to see most used functions and choose one to open.

- **Remove Home Screen Apps:** Long press App icon and move to top of screen to remove it.

- **Home Screen Settings:** Long press blank area of Home Screen, you can set WALLPAPERS, WIDGETS and SETTINGS from pop-up options.


Tap SETTINGS and make general Home Screen settings.

- **Set Wallpaper:** Long press blank area of Home Screen, choose WALLPAPERS, and choose a way to open wallpapers. After choose a picture, tap Set wallpaper, set wallpaper as Home screen, or Lock screen, or Home screen and lock screen.

- **Add Widgets to Home Screen:** Long press blank area of Home Screen, choose WIDGETS, and press a widget and move to Home Screen before loosen your finger.

- **Home Screen Pages:** Long press a widget or App icon on Home Screen, and move to left or right edge of screen, the widget or App icon will be moved to another page (if no existed page, it will create a new page). At Home Screen, slide leftward or rightward to switch between pages.

App Menu

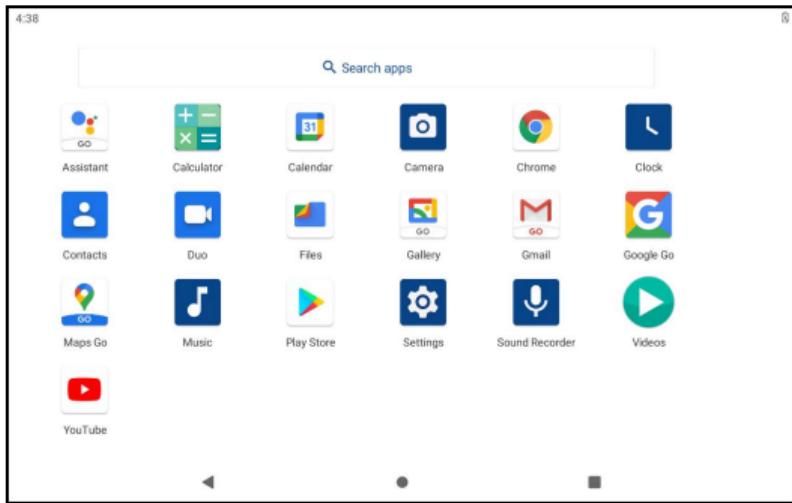

At Home Screen, slide up to enter App Menu, in which you can view all Apps list and search Apps.


At App Menu, Slide up and down to view all Apps.

Click an App icon to open it.

Click Search apps to search Apps.

Search apps

Enter keywords of App name to search for Apps. At search result, click App icon to open it.

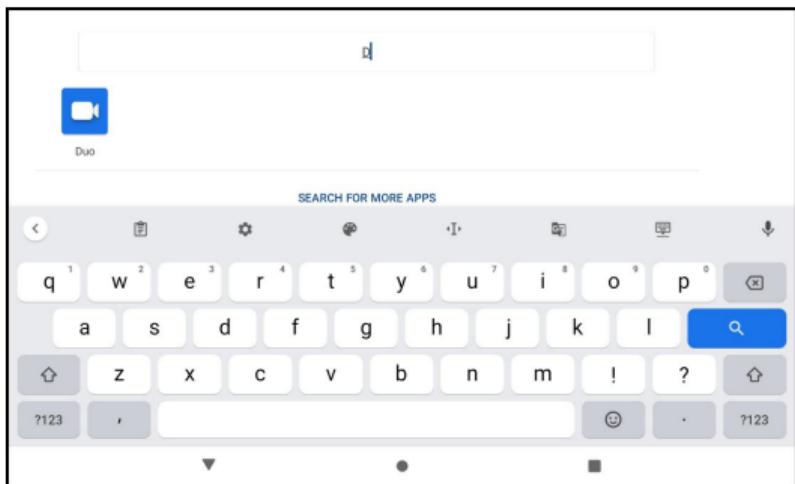

Wi-Fi

● Connect to Wi-Fi

With Wi-Fi network, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

● Activate the Wi-Fi

- (1) At App Menu, tap Settings 
- (2) Tap Network & Internet, tap Wi-Fi switcher to turn on it. You can also turn on Wi-Fi from Notification Panel.
- (3) Once you enter Wi-Fi, the device automatically searches for available Wi-Fi connection.
- (4) Tap the name to select a Wi-Fi.
- (5) Enter a password for the network (if necessary) and select CONNECT.

After Wi-Fi is connected, it displays icon at notification bar.




● Remove connected Wi-Fi


Long press a connected Wi-Fi name, choose Forget network.

USB Connections

You connect the device to a computer via USB cable to charge the device or transfer files, etc.

After USB connected, slide down from Notification Bar. It displays *Android System . Charging this device via USB*, and you can tap for more options.

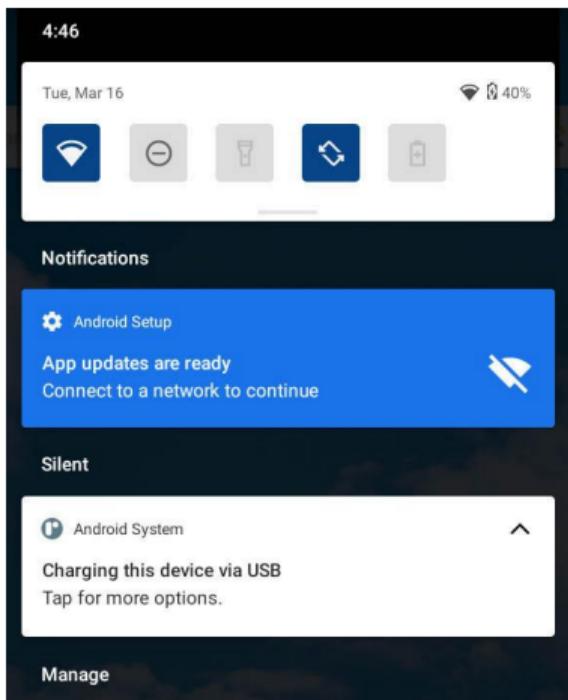

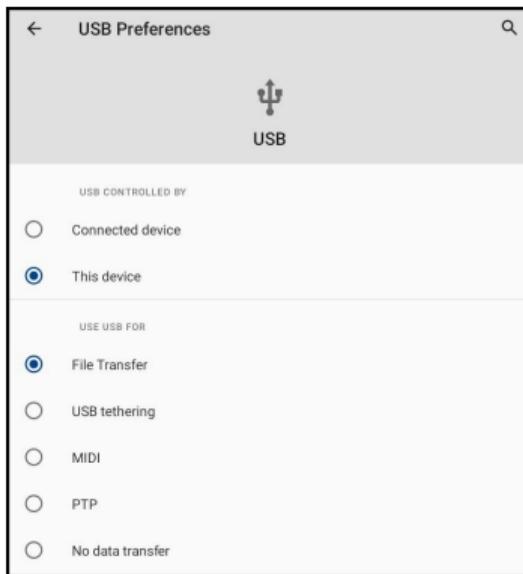

- **Charge this device:** it can just charging the device.
- **Transfer files:** You can transfer all kinds of files from available spaces.
- **Transfer photos (PTP):** You can only transfer photos from/to system default folder [DICM](#) and [Pictures](#).
- **Use device as MIDI:** Use Android devices as a peripheral controller for another Android device. For more information please visit android.com.

Apps

Install New Apps from Google Play

 Google Play allows you to easily download an abundance of Apps directly to your device. Before using the Google Play, you must have a Google Account.

- From the App Menu, tap Google Play.
- Sign in to your Google Account.
- Search for and download Apps as desired.
- Follow the on-screen instructions.

Note: All Apps offered by Google Play are developed by third party. To get the information about the developers, you can read the descriptions of each App. The original manufacturer of this Tablet PC is not liable for performance issues caused by third-party Apps.

Install unknown Apps

Besides installing Apps from Google Play, you can also download App from browser, or transfer App packages from PC or other ways.

- Tap Setting – Apps & notifications – App.
- Tap Advanced.
- Tap Special app access.
- Tap Install unknown apps, and allow different ways of install apps according to needs

Install New Apps from device storage

If you have transfer Apps' package files into the device, you can tap *ES File Explorer* to find APK files locations.

Tap the APK name to install it.

Applications management.


- Tap *Setting – Apps & notifications – App*.
- Tap App and choose *Force stop*, or set *App notifications, Permissions, Storage, Data usage, Open by default, Display over other apps, and Modify system settings* by tapping selections.



Tips: If some App cannot run correctly, you can check *Permissions* settings if you have forbid necessary permissions of the App.


Uninstall Apps

- Tap Setting – Apps & notifications – App.
- Tap See all apps to find the app you want to uninstall.
- Tap UNINSTALL and select OK.

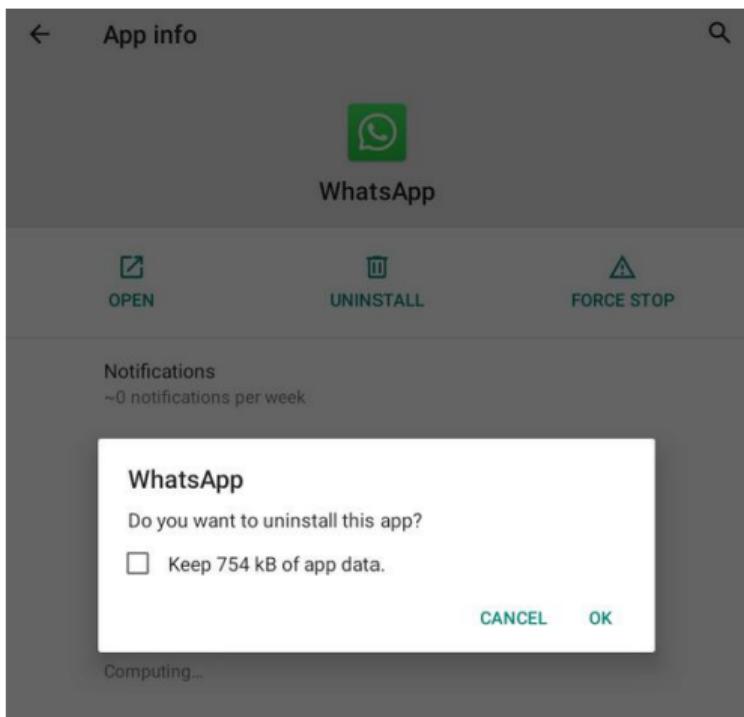

Photo

To view or organize images, send your files to other devices and set pictures as wallpapers, select Photos  from App Menu.

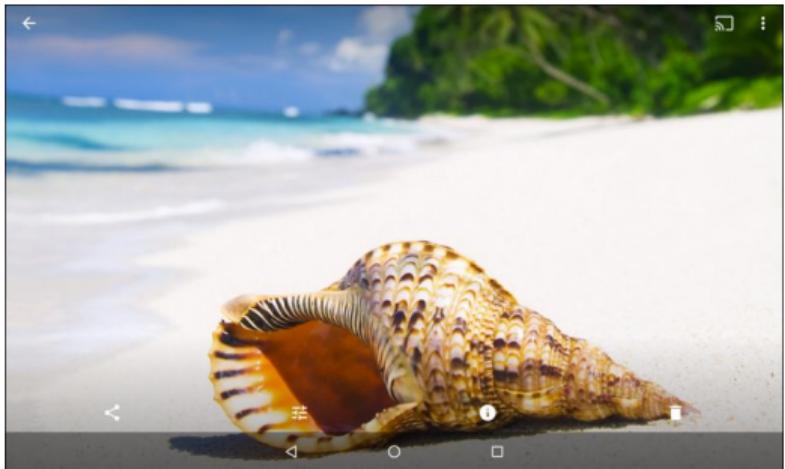

View a picture

- (1) Select a picture to view. To view more pictures, scroll left or right.
- (2) To zoom in, place two fingers on the screen and spread them apart. To zoom out, move fingers closer together.

(3) To start a slideshow, tap the option button  and then select Slideshow.

(4) To view the details of a file, tap the info button  ,

(5) To share a picture with others via Email, tap .

(6) To set a picture as wallpaper, tap the menu button  at the upper right—select Use as, select Wallpaper, Zoom in or out, and then tap SET WALLPAPER.


(7) To edit a picture effect, tap  to edit.

Video

To play or organize videos, select Photos  from App Menu.

Play a video

Tap the video preview image to play the video.

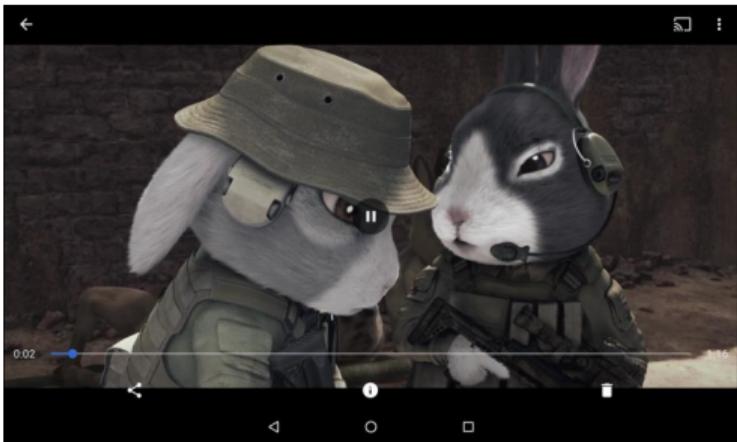

When playing, tap the screen and  icon to pause.
Tap the bin icon to move the video to bin.
Drag the line to change the playing progress.

You can also open video from [ES File Explorer](#):
Tap [Internal Storage](#), find video file location, and click video name, select [Photos](#) or other video app to play the video.

In ES File Explorer, you can also long press video files name, to copy, cut, delete, rename or do other operations to the video.

Settings



Tap Setting icon  to enter system settings, including Network & Internet, Connected devices, App & Notification, Battery, Display, Sound, Storage, Security & Location, Users & Account, Accessibility, Google, System. etc.

Quick Search



You can also tap  at the upper area of Setting interface, input keywords of settings for quick access.

Network & Internet

Set Wi-Fi, Hotspot, VPN, Airplane mode.

App & Notification

Set Apps and Notifications.

Battery

Check battery status, set up Power management, auto-sleep time of screen, etc.

Display

Set up brightness level, wallpaper, auto-sleep time of screen, auto-rotate screen, font size, display size, etc.

Sound

Set up volume of media & alarm & notification, do not disturb preferences, default notification sound, default alarm sound, screen lock sounds, charging sounds, touch sounds, etc.

Storage

Check used space, or free up spaces:

Tap FREE UP SPACE, select apps, and tap FREE UP.

Privacy

Check permissions, Account activity, personal data, etc.

Security

Check security status, set up screen lock (Swipe, Pattern, PIN, Password), Location, etc.

Accessibility

Set up Volume key shortcut (TalkBack), Text-to-speech output, Font size, Display size, Magnification, Color correction, Color inversion, Large mouse pointer, Click after pointer stops moving, Auto-rotate screen, Touch & hold delay, Audio & on-screen text, High contrast text, etc.

Google

Set up Google services: Ads, Android Auto, Cast media

controls, Location, Nearby, Restore contacts, Search, Security, Set up nearby device, Set up work profile, Firebase App Indexing, etc.

System

Add a new language: To change languages, tap [Languages & input](#), [Languages](#), [Add a language](#), after choose the language, long press the language name and move to top to set it as default language.

Manage input: Tap [Virtual keyboard](#), tap the input name to manage.

Date & time: Set up Automatic date & time, time zone, date, time, time zone, 24-hour format, etc.

Backup: turn on/off [Backup my data](#), to set up [Backup Account](#) and [Automatic restore](#).

Developer options: These are advanced settings, please don't change the default setting unless you are professional enough to manage them.

System update: check for update.

Reset options: you can choose DRM reset, Reset Wi-Fi, Reset app preferences, Erase all data (factory reset).

Factory reset: Tap Reset, and tap ERASE EVERYTHING, the reset process takes around 5 minutes, after reset, the first boot-up time will be longer than normal, please wait for around 2 minutes.

About device

Check Status, Legal information, Model, Android version, Build number, etc.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.