


Scan the QR Code

While logged into the app, use your smart device's camera to scan the QR code on the camera.


The app will then walk you through the remaining steps needed to connect your camera.

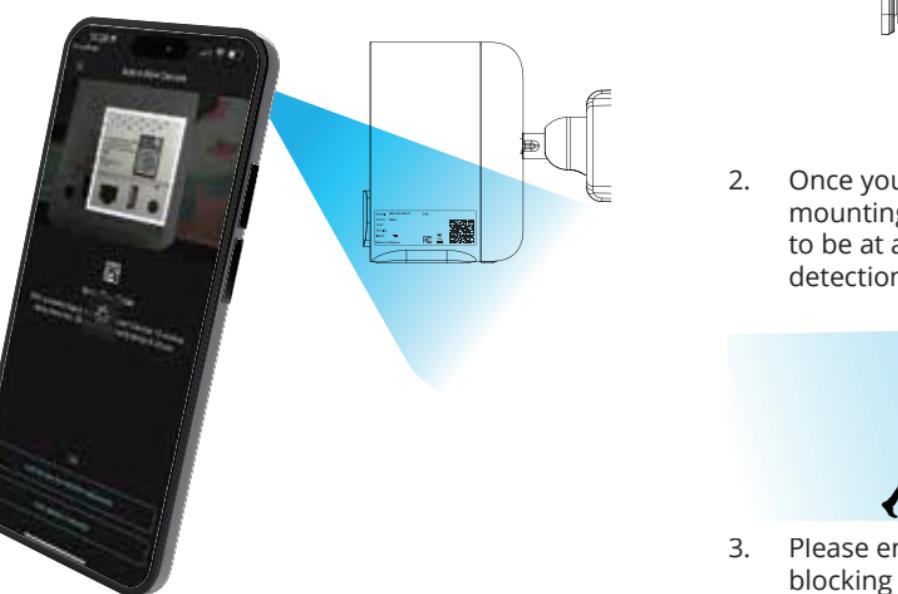


9

Battery Camera Installation

1. For best results, verify a strong Wi-Fi signal before outdoor installation. Connect to your phone's Wi-Fi and ensure a signal strength of at least 2 bars (out of 4) at the desired location.

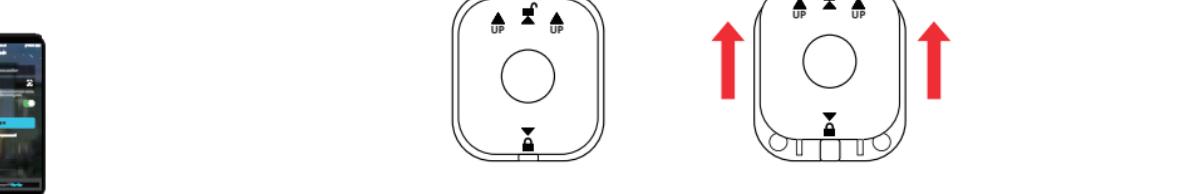

2. Once you have confirmed the cameras mounting location, we recommend installation to be at a height of 9ft to maximize the Ai detection ability.

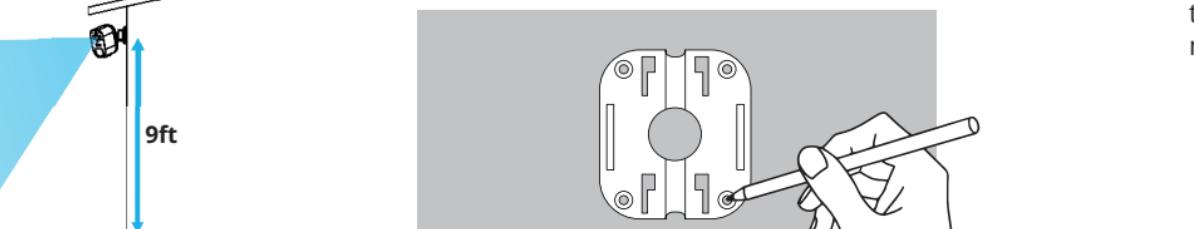

3. Please ensure that there are no obstacles blocking the view of the camera.


10

Battery Camera Installation (Continued)

1. Remove the back mounting plate by sliding the plate in the direction of the arrows shown on the mount.




2. Use the holes on the base plate as a template to mark the screw positions on the surface where you plan to mount the camera.

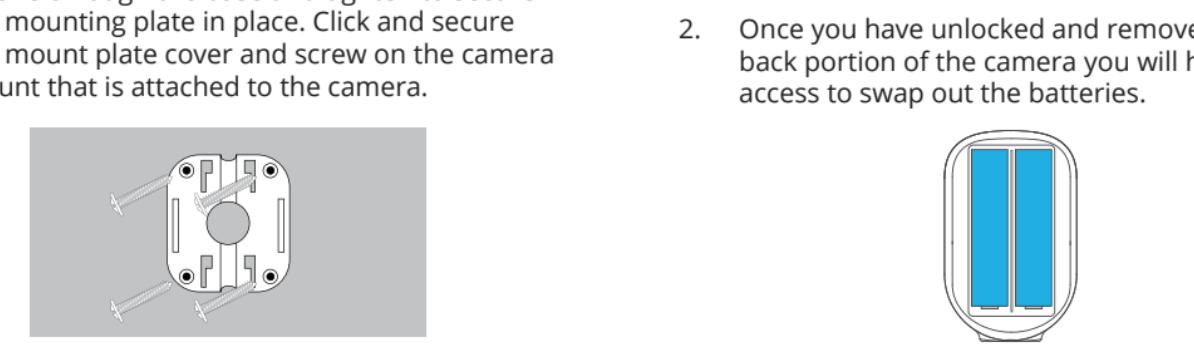


11

Battery Camera Installation (Continued)

3. Using a drill bit slightly smaller than the included screw anchors, drill into the mounting surface using the guide marks.

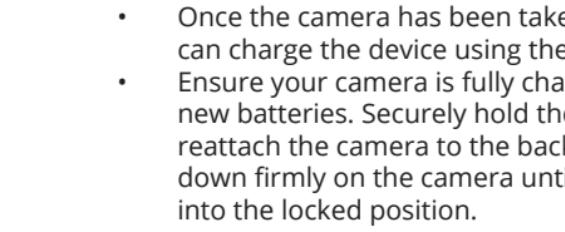

4. Insert the screw anchors. Line up the camera base holes with the screw anchors, insert the screws through the base and tighten to secure the mounting plate in place. Click and secure the mount plate cover and screw on the camera mount that is attached to the camera.

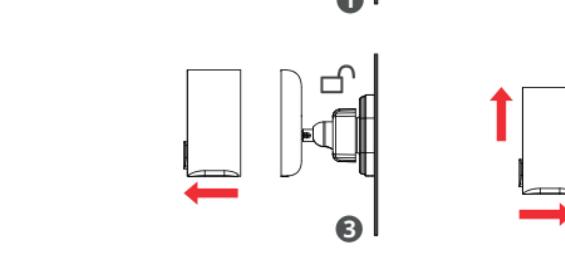

12

Changing the Batteries or Charging

1. Carefully hold the camera mount in place while pressing down on the camera to release the lock. You'll hear a "click" when it's unlocked.



2. Once the camera has been taken down you can change the device using the USB-C cable.

1. Please visit: Support.Night Owl SP.com

2. Enter BW4 into the Search bar or scan the QR code

3. Using a drill bit slightly smaller than the included screw anchors, drill into the mounting surface using the guide marks.



4. Insert the screw anchors. Line up the camera base holes with the screw anchors, insert the screws through the base and tighten to secure the mounting plate in place. Click and secure the mount plate cover and screw on the camera mount that is attached to the camera.



13

LED Status Lights

LED Status	Camera Status
Solid Red	Charging
Fast Flashing Blue	Pairing / Reconnecting
Solid Blue	Camera On and Paired
Fast Flashing Red & Blue	Firmware Upgrade



- From [here](http://Support.Night Owl SP.com), please follow the steps below to access your series support page:


1. Please visit: Support.Night Owl SP.com

2. Enter BW4 into the Search bar or scan the QR code

3. Using a drill bit slightly smaller than the included screw anchors, drill into the mounting surface using the guide marks.



4. Insert the screw anchors. Line up the camera base holes with the screw anchors, insert the screws through the base and tighten to secure the mounting plate in place. Click and secure the mount plate cover and screw on the camera mount that is attached to the camera.

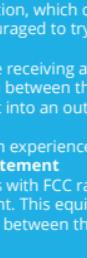

14

Need Help?



For more help, please follow the steps below to access your series support page:

1. Please visit: Support.Night Owl SP.com

2. Enter BW4 into the Search bar or scan the QR code

3. Using a drill bit slightly smaller than the included screw anchors, drill into the mounting surface using the guide marks.




4. Insert the screw anchors. Line up the camera base holes with the screw anchors, insert the screws through the base and tighten to secure the mounting plate in place. Click and secure the mount plate cover and screw on the camera mount that is attached to the camera.



15

Q-SGW4-6-105

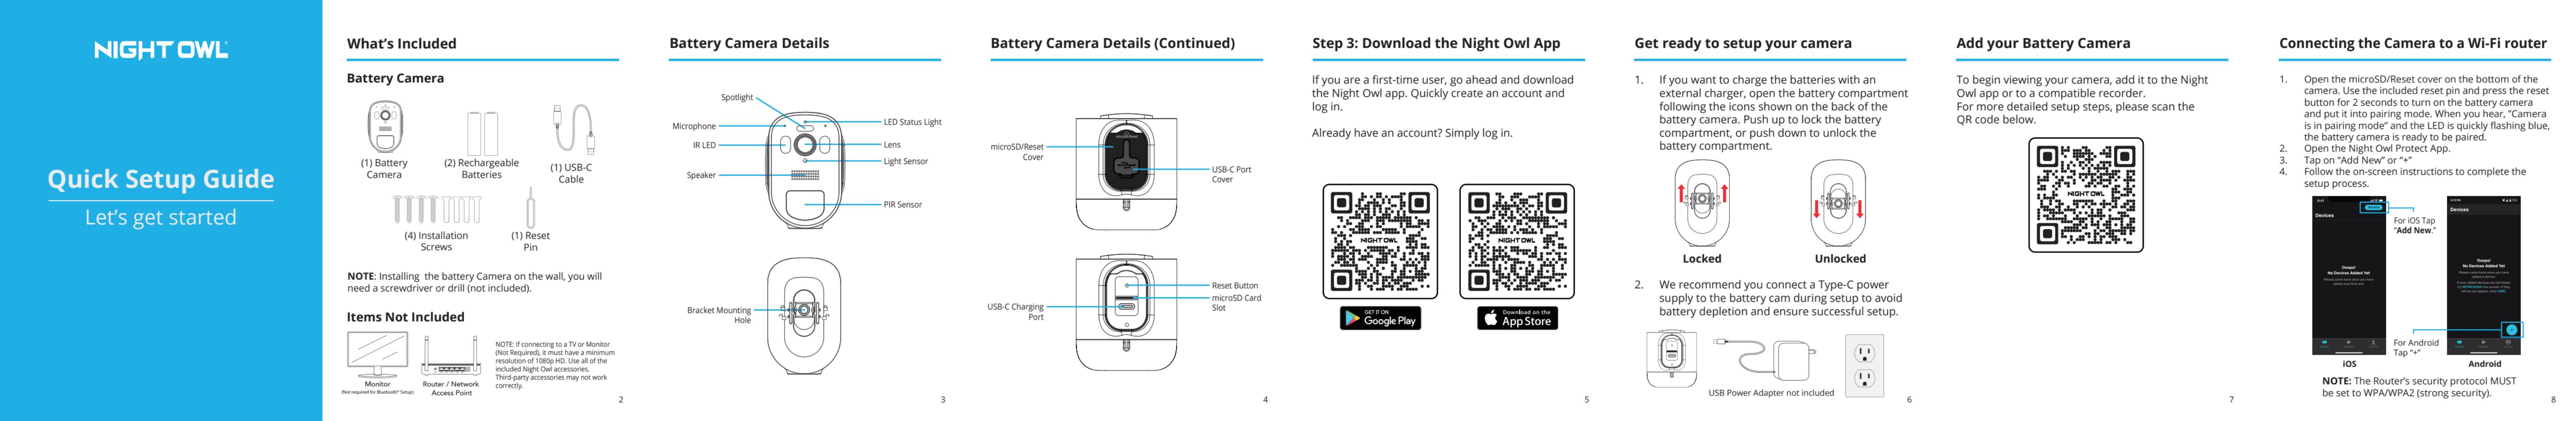

NIGHT OWL

Quick Setup Guide


Let's get started

What's Included


Battery Camera



(1) Battery Camera

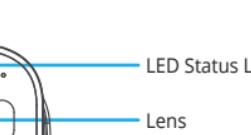

(2) Rechargeable Batteries

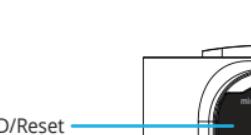

(1) USB-C Cable



(1) Reset Pin

Items Not Included



Monitor
(Not required for Bluetooth® Setup)





Router / Network Access Point

NOTE: Installing the battery Camera on the wall, you will need a screwdriver or drill (not included).

NOTE: If connecting to a TV or Monitor (Not Required), it must have a minimum resolution of 1080p HD. Use all of the included Night Owl accessories. Third-party accessories may not work correctly.

Battery Camera Details

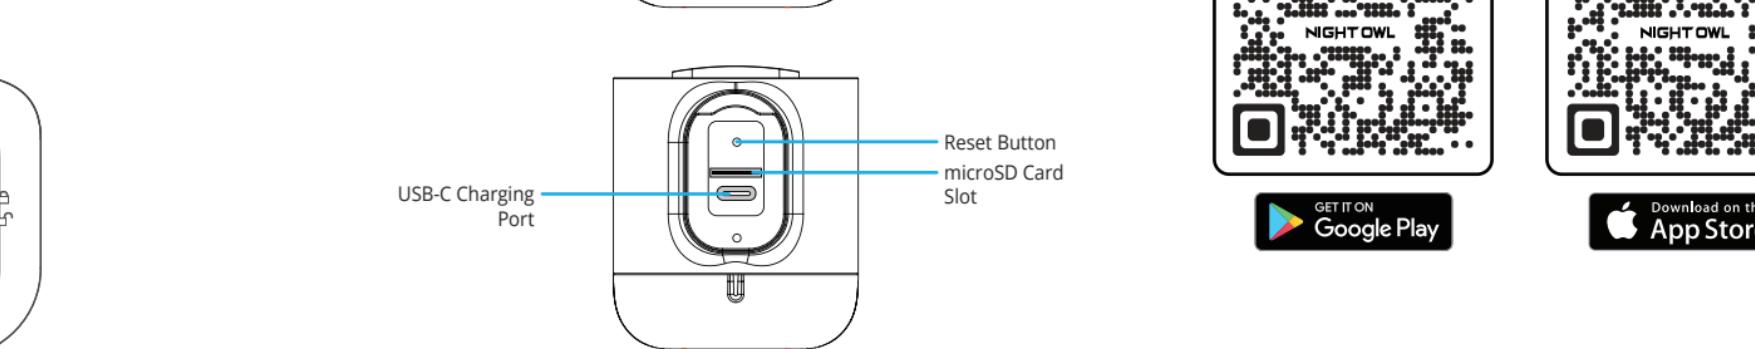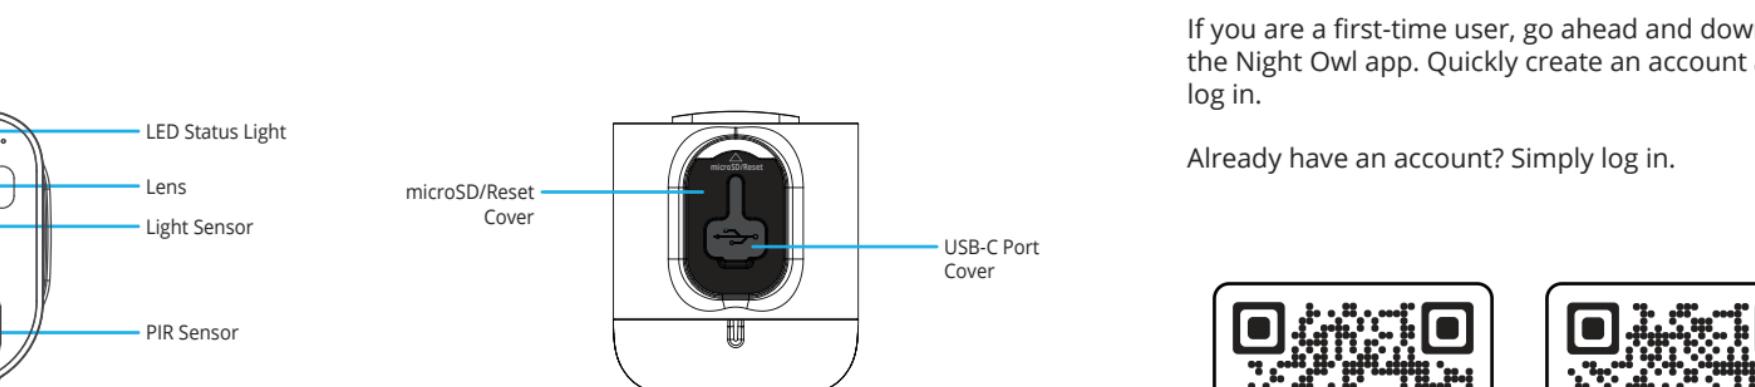

Battery Camera Details (Continued)

Step 3: Download the Night Owl App

If you are a first-time user, go ahead and download the Night Owl app or a compatible recorder. For more detailed setup steps, please scan the QR code below.

Already have an account? Simply log in.

1. Open the microSD/Reset cover on the bottom of the camera. Use the included reset pin and press the reset button for 2 seconds to turn on the battery camera and put it into pairing mode. When you hear "Camera is in pairing mode" and the LED is quickly flashing blue, the battery camera is ready to be paired.

2.


Open the Night Owl Protect App.

3.

Tap on "Add New" or "+"

4.


Follow the on-screen instructions to complete the setup process.

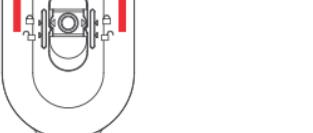

Locked



Unlocked

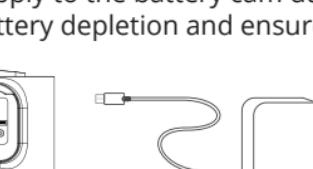

USB-C Charging Port

Reset Button

microSD Card Slot

Get ready to setup your camera

Add your Battery Camera

To begin viewing your camera, add it to the Night Owl app or a compatible recorder. For more detailed setup steps, please scan the QR code below.

1. Open the microSD/Reset cover on the bottom of the camera. Use the included reset pin and press the reset button for 2 seconds to turn on the battery camera and put it into pairing mode. When you hear "Camera is in pairing mode" and the LED is quickly flashing blue, the battery camera is ready to be paired.

2.


Open the Night Owl Protect App.

3.

Tap on "Add New" or "+"

4.

Follow the on-screen instructions to complete the setup process.

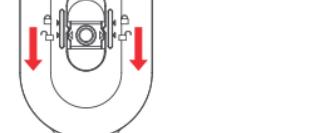

Locked



Unlocked



USB-C Charging Port

Reset Button

microSD Card Slot

Step 3: Download the Night Owl App

Connecting the Camera to a Wi-Fi Router

1. If you want to charge the batteries with an external charger, open the battery compartment following the icons shown on the back of the battery camera. Push up to lock the battery compartment, or push down to unlock the battery compartment.

2.

Open the Night Owl Protect App.

3.

Tap on "Add New" or "+"

4.

Follow the on-screen instructions to complete the setup process.



Locked



Unlocked



USB-C Charging Port

Reset Button

microSD Card Slot

Step 3: Download the Night Owl App

Get ready to setup your camera

1. If you want to charge the batteries with an external charger, open the battery compartment following the icons shown on the back of the battery camera. Push up to lock the battery compartment, or push down to unlock the battery compartment.

2.

Open the Night Owl Protect App.

3.

 
Tap on "Add New" or "+"

4.

Follow the on-screen instructions to complete the setup process.



Locked



Unlocked



USB-C Charging Port

Reset Button

microSD Card Slot

Step 3: Download the Night Owl App

Connecting the Camera to a Wi-Fi Router

1. Open the microSD/Reset cover on the bottom of the camera. Use the included reset pin and press the reset button for 2 seconds to turn on the battery camera and put it into pairing mode. When you hear "Camera is in pairing mode" and the LED is quickly flashing blue, the battery camera is ready to be paired.

2.

Open the Night Owl Protect App.

3.

Tap on "Add New" or "+"

Follow the on-screen instructions to complete the setup process.



Locked



Unlocked



USB-C Charging Port

Reset Button

microSD Card Slot

Step 3: Download the Night Owl App

Get ready to setup your camera

1. If you want to charge the batteries with an external charger, open the battery compartment following the icons shown on the back of the battery camera. Push up to lock the battery compartment, or push down to unlock the battery compartment.


2.

Open the Night Owl Protect App.

3.

Tap on "Add New" or "+"


Follow the on-screen instructions to complete the setup process.

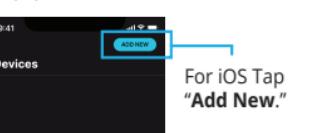

Locked



Unlocked

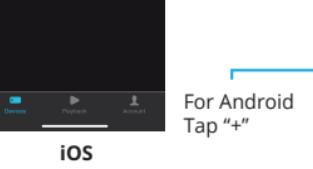

USB-C Charging Port

Reset Button

microSD Card Slot

Step 3: Download the Night Owl App

Connecting the Camera to a Wi-Fi Router

1. Open the microSD/Reset cover on the bottom of the camera. Use the included reset pin and press the reset button for 2 seconds to turn on the battery camera and put it into pairing mode. When you hear "Camera is in pairing mode" and the LED is quickly flashing blue, the battery camera is ready to be paired.


2.

Open the Night Owl Protect App.


3.

Tap on "Add New" or "+"


Follow the on-screen instructions to complete the setup process.

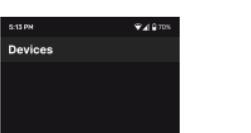

Locked

 

Unlocked

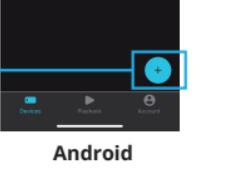

USB-C Charging Port

Reset Button

microSD Card Slot