

Swift Block  
Page 1  
Swift Warriors Quick Start Guide  
wiSlide Manual

In the cosmos exists a mysterious organization known as the “Drift Guardians” dedicated to safeguarding universal peace. Its members are called “Drift Warriors”. Among them stands the Block Kid, renowned for extraordinary intellect and the ability to unravel any unsolved mysteries.

One day, the Block Kid receives an urgent mission from Earth: a mysterious force is invading the planet. It seeks to control humanity by sealing off various Earth nations. Bearing this heavy responsibility the Block Kid must utilize his intelligence to unlock the sealing mechanisms on Earth one by one and rescue its people.

wiSlide is one of the mechworks responsible for Earth's lockdown, while Slide Verse APP is a key to unlock the world. Now, the Block Kid extends a formal invitation to you: join the Drift Guardians, search for the secret to beat the game following the Warriors Quick Start Guide. Together with the Block Kid, let's save the world.

Dear Swift Warrior

Thanks for accepting the Blocky's invitation to embark on the puzzle-solving journey of WiSlide. Please accept 3 puzzle challenges:

Move the 2x2 Klotski Piece with a Becky sign to the middle position at the bottom of the smart board for victory.

Number B-Puzzle

Restore the numbers to the right order for victory.

Number 15-Puzzle

Restore the numbers to the right order for victory.

**Game Target:** Return the 2x2 Klotski Pieces to this position.

\*The pieces for the Number Puzzle need to be purchased separately.

#### Mystery of the wislide & Kit

You should have received the following items in your wiSlide Kit

Exit/Cancel

LCD Screen

Smart Board

Klotski Pleces

Up/Down

Power/Confirm (Long press to turn on/off short press to confirm)

Smart Board (With Klotski Pieces) \*1

Manual\*1

Extra 1x1 Klotski Pieces\*2

Storage Bag\*1

Page 4  
Mystery of the Features  
More features are waiting for you to unlock !

Main Features

2000+ build-in levels

Precise Automatic Timer

Dual Play Online PvP (APP connected)

Offline Challenges

AI Tutorial

High Precision Magnet Sensors

Additional Features

Supports 6 languages:

Chinese (Traditional & Simplified) /English/French/German/Spanish/Japanese

10 Levels of Brightness Adjustment

10 Levels of Volume Adjustment

Remaining Battery Level Indicator

Page 5  
How to play wiSlide online  
Offline & Online, it's all up to you!

**1.Offline Mode**

offline Challenges

AI Tutorials

In offline mode, press the OK button and follow the instructions to get into the AI tutorials.

**2. How to play with APP**

Slide Verse App

Challenges

Top the Leader board

Online PvP

Socializing

By connecting to the Slide Verse App, you can sync with the wiSlide in real time.

Slide Verse App: Without connecting to the wiSlide device, you can still experience the challenge mode, socialize with friends, and enjoy some of the AI tutorials by simply opening the app.

Download APP

①Scan QR code to download Slide Verse APP

②Register and log in, authorize GPS and Bluetooth; \*The displays on Android and iOS are slightly different.

③Turn on the wiSlide device, search for the name of your device in “Setup-Device Information”

④Turn on the APP, click “connect ”on the top of the homepage, connect as prompted.

Page 6  
Guide Tour of WiSlide  
Ready? GO!

Getting Started

1. Choose your game mode and level.
2. Follow the on-screen instructions to set up the Smart Board

\*The type and location of each piece shall be the same as the instruction, otherwise you will receive error alarm.

Klotski

Number B-Puzzle

Number 15-Puzzle

1×1 klotski Piece

1×2 klotski Piece

2×2 klotski Piece

3. After all the pieces are set, click OK button to confirm, the timer will be activated when you slide the pieces.

4. Victory.

Cations:

Auto-sleep after 1 minute of inactivity. auto-shutdown after 50 minutes of inactivity.

Battery: CR2032

Battery Life\* ≈ 150 Hours

\*Actual battery life may vary depending on screen brightness and volume settings in different scenarios.

#### Basic Battery Parameters

After each use of the product, please kindly use dry cleaning cloth to wipe away surface stains and dust before placing the block pieces and chessboard back into the storage bag.

FAQs

1. Unable to power on. The battery may be out of charge, please replace the battery.
2. Unable to connect Please ensure that the wiSlide is powered on If it is already connected to another device, it must be disconnected before another device can detect it. For Android devices, please confirm that the location function is enabled and the app has been granted location permission.
3. “Smart Board” alert. According to the rules of Klotski, block pieces must remain on the smart board throughout the game. If the system detects that a block piece has been off the board for more than 2 seconds, it will give an “Smart Board” alert.

In this case, please follow the on-screen prompts to reposition the block pieces, and press the ok/confirm button to resume the current game.

4. System error. When unable to power on/off, you can forcefully shut down the system by press the power button for more than 10 seconds, and then press the power button to turn on again.

#### ① WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.

#### FCC Statement:

**This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Please scan the QR code to download and install the SildeVerse App.