

140mm


100mm

100mm

### MATTERS NEEDING ATTENTION


1. Please fix this product on a solid and reliable surface. When hitting the ball, please hit the ball within the hitting area and strictly prohibit hitting the corner area to avoid hand injury or equipment damage.
2. This product is suitable for adult use, and children should use it under adult guidance.
3. Beginners should not exert too much force to avoid hand injuries. When exercising, safety should be the top priority, and hitting the legs and knees is strictly prohibited.
4. It is strictly prohibited to hit the horn area.
5. If the device cannot be turned on or malfunctions, please check if the battery level is too low and charge it promptly. The charging time should not exceed 8 hours. If not used for a long time, it is recommended to charge every 1-2 months.
6. This product is not waterproof. When wiping boxing targets, please use a dry cloth and do not get wet.
7. Please keep the instruction manual properly for future use.

3

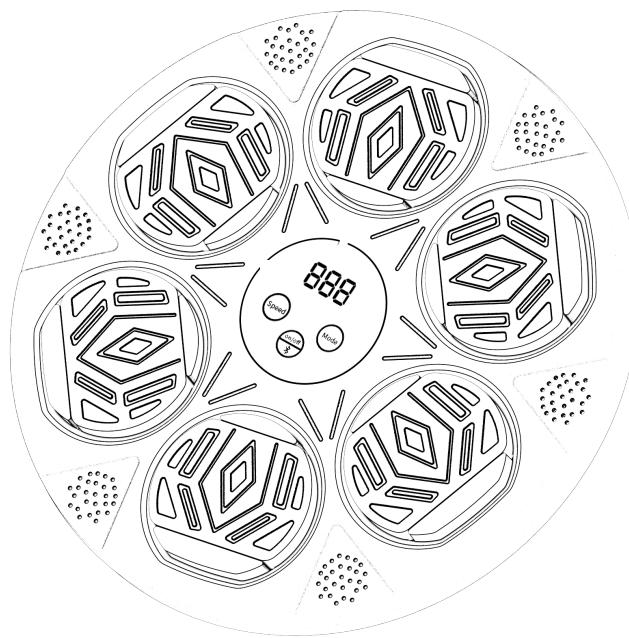


### MUSIC BOXING TARGET USER MANUAL

### PRODUCT

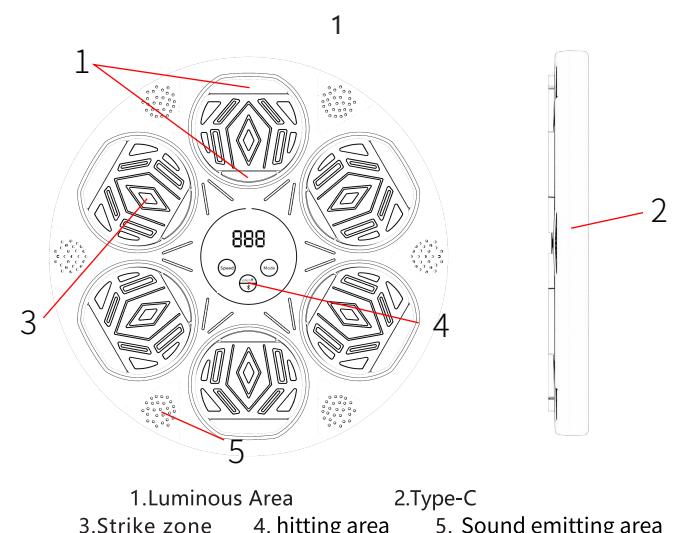

### 安装

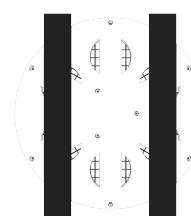

Installation method 1:  
 Firstly, peel off the sticker on one side of the EVA double-sided backing tape.  
 2. Align the outer contour of the EVA sticker with the outer contour of the product back and paste it properly.  
 3. Peel off the sticker on the other side of the EVA backing adhesive.  
 4. First adjust the digital display direction of the product, and then choose the appropriate striking height to stick the product on the wall.

Installation method 2:  
 1. First adjust the direction of the product's digital display and stick a shorter set of Velcro vertically and parallel on the back of the product.  
 2. Attach the longer set of Velcro stickers to the shorter set of Velcro stickers on the back of the product, and peel off the longer set of Velcro stickers.  
 3. Adjust the product to the digital display direction, then choose the appropriate striking height and stick the product along with Velcro to the wall.

### OPERATION INSTRUCTIONS

1. Long press the switch button to turn on the device, the light will light up, and music will play.
2. Press and hold the switch button for 2-3 seconds to turn off the device
3. If there is no operation for about 15 minutes after successful boot, the device will automatically shut down.
4. Turn on your phone and set the Bluetooth connection device to play music on your phone.\*Bluetooth device name: The device name starts with "Bluetooth"

1

### TROUBLESHOOTING

Serial Number	symptom	cause analysis	Troubleshooting
1	No light or sound	The product is not powered on	Long press switch
2	No light or sound	Battery depleted	Please charge
3	Flashing lights	Low battery	Please charge
4	Long press switch unable to open	Due to long-term non startup, the main chip capacitor has insufficient power	Long press the switch again
5	The banging sound inside the equipment	Internal active stress structure release	Normal phenomenon

2

140mm

100mm

100mm

## MATTERS NEEDING ATTENTION

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.  
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

5



## MUSIC BOXING TARGET USER MANUAL