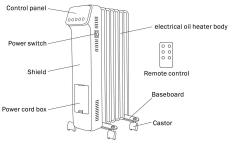


 <p>Zokop Oil-Filled Radiators User Instruction Manual</p> <p>Model: NSC-150-7A2R MADE IN CHINA</p>	<p>● Thank you very much for buying our products. ● Please read the instructions carefully before using it. ● Please keep the instructions properly.</p> <p>IMPORTANT INSTRUCTIONS</p> <p>With the exception of the following instructions, general safety precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hypothermia, including the following:</p> <ol style="list-style-type: none"> 1) Read all instructions before using this heater. 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles or knobs when necessary. Do not let children or pets climb on or around this heater. Do not let children play with the heater. 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended. 4) Keep the heater at least 3 feet from any wall or other surface. 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Consult a qualified technician for service. 6) Do not use outdoors. 7) Do not use in areas where water is used for bathing, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water holding container. 8) Do not cover cord under carpeting. Do not cover cord with throw rugs, runners, or anything that blocks heat or traps the cord. 9) Do not use where a cord or plug is subject to damage from traffic and where it will not be tripped over. 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause fire or damage to the heater. 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use this heater near flammable materials, when there is a fire, or where gasoline, paint, or flammable liquids are used or stored. 12) A heater has hot end sensing or low-temperature mode. Do not use in areas where gasoline, paint, or flammable liquids are used or stored. 13) Do not use this heater in areas where there is a risk of explosion. Do not use in areas where there is a risk of explosion. Do not use in areas where there is a risk of explosion. 14) Always plug heaters directly into a wall outlet / receptacle. Never use with an adapter, extension cord, or power strip. 15) Hypothermia can result in death. Symptoms of hypothermia include high body temperature, shivering, loss of coordination, lack of energy, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hypothermia, turn off the heater and seek medical attention. <p>-1-</p>	<p>16) To avoid excessive room temperatures which can cause hypothermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities. DO NOT keep this heater at least 12 inch (31cm) from the wall.</p> <p>17) Keep this heater at least 12 inch (31cm) from the wall.</p> <p>18) Do not use this heater in areas where there is a risk of explosion. Do not use in areas where there is a risk of explosion. Do not use in areas where there is a risk of explosion.</p> <p>19) Do not bring heater to a pet's sleeping area; do not cover the heater.</p>	<p>SPECIFICATION PARAMETER</p> <table border="1"> <thead> <tr> <th>Model</th> <th>Rated voltage</th> <th>Rated frequency</th> <th>Rated Input Power</th> <th>Specification</th> </tr> </thead> <tbody> <tr> <td>NSC-150-7A2R</td> <td>220V</td> <td>60Hz</td> <td>1500W</td> <td>7 hrs</td> </tr> </tbody> </table> <p>Product structure diagram</p>  <p>-2-</p>	Model	Rated voltage	Rated frequency	Rated Input Power	Specification	NSC-150-7A2R	220V	60Hz	1500W	7 hrs				
Model	Rated voltage	Rated frequency	Rated Input Power	Specification													
NSC-150-7A2R	220V	60Hz	1500W	7 hrs													
<p>Assembly of casters</p>  <ol style="list-style-type: none"> 1. Insert the electrical oil heater with bottom up. 2. Fix the casters board on the electrical oil heater body with waterfall holders. 3. Apply the adhesive to the base. 4. After assembly, turn the electrical oil heater over with casters on the ground and rest it for 3 to 5 minutes before use. <p>Method of use</p> <ol style="list-style-type: none"> a. Open the packing box, take out the box and confirm whether the product is correct. b. Before use, please make sure the power cord is correctly connected to the power socket is 220V, and the power cord is reliable and sure grounding device. c. The electrical oil heater can only be used after the casters are properly assembled. d. Method of using the type: <ul style="list-style-type: none"> ① Power button: When this button is pressed, the heater will start at a low speed; pressing again, the heater will stop working. ② Display button: Repeatedly press this button so that the heater switches in the order of "Low speed -> High speed -> Off". ③ TIME SETTING button: When this button is under working, if the button is pushed, the timing status and the setting at this time is 1 hour. The timing can be selected from 1 to 24 hours. When the setting is set to 24h, if this button is pushed, the timing selection will be converted. ④ + - TEMPERATURE SETTING button: Press this button in the temperature setting mode, the temperature setting range is 40-95 °C. Notes: (1)If only press "④ + -" key or don't set exact temperature, when the room temperature reaches the set temperature, the machine will stop working, and stop in standby state. When the temperature is lower than the set temperature, the machine starts to heat up again. (2)A protection device is connected to the live line, no matter how many hours of timing, when the room temperature reaches the set temperature, the machine will stop working and will not automatically restart. <p>-3-</p> 	<p>Cleaning and maintenance</p> <ol style="list-style-type: none"> 1. When the machine is not used for a long time, please clean. 1. After it is dry, put the machine body and components into the packaging box according to the original packaging. 2. Before cleaning, please cut off the power supply and wait until the machine is completely cooled down. 3. Do not wash the machine with water. Wipe it with a clean soft cloth containing a little neutral detergent. 4. After cleaning, the machine can be powered on for use only after it is fully dried. <p>Troubleshooting</p> <table border="1"> <thead> <tr> <th>PROBLEM</th> <th>PROBABLE CAUSE</th> <th>SOLUTION</th> </tr> </thead> <tbody> <tr> <td>Unit does not start</td> <td>The power cord is not plugged in or the power switch is not turned on.</td> <td>Plug the power cord into electrical outlet and turn on the power switch.</td> </tr> <tr> <td>Overheat protection is reached.</td> <td>Overheat protection is reached.</td> <td>Unplug the heater and wait 10 minutes to cool down. If the overheat protection still reaches, please turn off the power and wait 12 hours.</td> </tr> <tr> <td>Unit unable to run</td> <td>Desired temperature setting is not reached.</td> <td>Check your thermostat setting. If the setting is not reached, please turn on the power and wait.</td> </tr> <tr> <td></td> <td>TipOver protection.</td> <td>Place the heater firmly on flat, level and stable surface.</td> </tr> </tbody> </table> <p>Disposal</p> <p>Environmental Protection: Waste electrical and electronic equipment should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.</p> <p>-4-</p>	PROBLEM	PROBABLE CAUSE	SOLUTION	Unit does not start	The power cord is not plugged in or the power switch is not turned on.	Plug the power cord into electrical outlet and turn on the power switch.	Overheat protection is reached.	Overheat protection is reached.	Unplug the heater and wait 10 minutes to cool down. If the overheat protection still reaches, please turn off the power and wait 12 hours.	Unit unable to run	Desired temperature setting is not reached.	Check your thermostat setting. If the setting is not reached, please turn on the power and wait.		TipOver protection.	Place the heater firmly on flat, level and stable surface.	<p>1. Download the Tuya App. </p> <p>2. How to connect the heater.</p> <ul style="list-style-type: none"> • Plug in and switch the power on. • Press the timer key for 3 seconds till the led light flash. • Start the App. Press + to add the heater. • Fill in WiFi account and code. • Finish connect. <p>3. How to use App.</p>  <p>-5-</p>
PROBLEM	PROBABLE CAUSE	SOLUTION															
Unit does not start	The power cord is not plugged in or the power switch is not turned on.	Plug the power cord into electrical outlet and turn on the power switch.															
Overheat protection is reached.	Overheat protection is reached.	Unplug the heater and wait 10 minutes to cool down. If the overheat protection still reaches, please turn off the power and wait 12 hours.															
Unit unable to run	Desired temperature setting is not reached.	Check your thermostat setting. If the setting is not reached, please turn on the power and wait.															
	TipOver protection.	Place the heater firmly on flat, level and stable surface.															
<p>FCC WARNING</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.</p> <p>However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. <p>To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.</p>																	