
80mm



Age 8 & Up.This is not a toy. Y433.92 MHz Y433.92 MHz 10door Rated Wo AA(not inclu INSTRUCTIONS

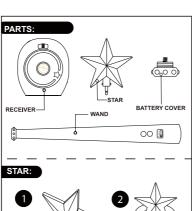

INSTRUCTIONS:

- Insert star top into grooves and turn 90 degrees to secure.
- Screw battery cover securely until light blinks once
- · Plug receiver directly into wall socket.
- Plug light item into receiver.
- If light(s) have an on/off switch, ensure it is in the 'on' position.
- Wand and receiver must be on same frequency to work, (example: A-A, B-B, C-C).

Press ON to turn lights on and hear enchanting sound.

BATTERIES: 2 AA

Rotate 90°

to secure




TROUBLE SHOOTING:

- Quick Tips

 Always use fresh premium batteries and install correctly according to instructions. Low batteries may appear to work light and sound on wand, but may not have enough power to send signal to receiver.
- Make sure wand and receiver frequency switches are both positioned on the same frequency, i.e., A-A, B-B, or C-C. Refer to diagram for instructions.
- May not work with various power strips, certain LED lights, or 3- Way Lamps.
- Receiver has a 65 ft range and a 1000 watts capacity.
- Receiver is rated for INDOOR USE ONLY. Receiver should be shielded from weather and water at all times

FREQUENCY: A, B or C

Insert into grooves

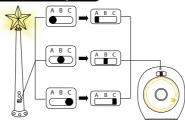

FAQs:

Q: Can I use multiple receivers in one house?

A: Yes. Our system is designed so your wand can turn on multiple recievers at one time, or separately accordingly to the frequency set on each receiver. Refer to diagram for instructions.

Q: Why are my lights turning off and on automatically?

A: Most likely, your neighbor is using the same frequency with their Magic Light Wand. So, try changing the wand and receiver to another frequency.

LIGHTING MODES:

o Wand has 4 lighting modes.

Light Mode 1: On/Off

Light Mode 2: Fade On/OFF

Light Mode 3: Continuous Slow Fade

Light Mode 4: Blink

Cycle through the light features by either:

- 1) Holding down ON button on the wand until sound, or
- 2) Pressing button on face of receiver.
 - * Easier to cycle features when lights are on.

WARNING:

Changes or modifications could void authority to operate. Changes or modinications could void authority to operate. Do not exceed rated voltage and frequency specification. Only plug into properly grounded outlet that meets codes. Do not disassemble or repair. Unplug when not in use for an extended period. Do not install in area that may exceed 12Of (49c).

Keep Magic Wand dry.
Do not use for other than intended purpose.
Read and follow all instructions.

This product is not a toy. Adult supervision should be exercised when product is used by children.

300mm