

outside back panel

outside front panel

Compliance Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment or receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in a damp and/or corrosive conditions, use only with compatible chargers. Never dispose of the batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F)

Warranty Information

30 Day Limited Warranty
Territory - United States

LIMITED WARRANTY TO ORIGINAL CONSUMERS

To obtain warranty service:

Visit our customer support at contact@deskolite.com and send copy of receipt with description of the repair and photo's if possible.

Your product will be repaired or replaced at our option for the same or similar model of equal value if the examination by the service center determines this product is defective. Products received as damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided:

This warranty does not cover damage resulting from accidents, misuse, abuse, improper operation, lack of responsible care, or unauthorized modifications. The warranty is voided in the event of any unauthorized person open, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged and insured for full value of product in the event it is lost or damaged in transit to the repair service center.

All product names, trademarks, and registered trademarks are property of their respective owners. All company products, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

DESKOLITE™



Instruction Manual
Multi-Color Disco Speaker
DESKOLITE

Designed in USA
Printed in China
v1 04-2024

inside panels

Before You Start...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support

For any questions or problems with your product, please visit our website at www.deskolite.com or email us at contact@deskolite.com

Caution!

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer approved chargers, accessories and supplies.

THIS DEVICE IS NOT A TOY, keep away from Children and pets.

Do not disassemble, modify, or repair the device.

Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.

Do not submerge in water.

Low power may cause poor Bluetooth® connection or sound distortion.

Do not over charge battery.

If using with a USB adapter, make sure the adapter is not damaged.

Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult with local authorities on the correct way to dispose of this device.

In the Box

Multi-Color Disco Speaker (1)
Remote Control (1)
USB-C Charger (1)
User Manual (1)

Location of Controls



Charging the Speaker:

Please charge the speaker fully before the first use.

To charge the speaker, insert the small connector of the supplied USB charging cable into the USB port on the device. Insert the other end of the cable (larger side) into a USB power source, such as a computer or wall socket with USB compatible ports.

The charging LED indicator light will turn RED while charging and will turn off when fully charged.

If not connected to a device, the speaker will automatically power off after 10 minutes.

Powering ON/OFF:

Slide the Power switch to the ON position to power on. A tone will be heard and the LED lights will light up.

The LED lights will cycle through colors when the device is powered on.

The speaker will automatically enter Bluetooth® pairing mode and will search for Bluetooth® devices.

Slide the Power switch to the OFF position to power off.

Bluetooth® Speaker Operation:

Power the unit on by sliding the Power switch to the ON position. The device will automatically enter Bluetooth® pairing mode.

Open the Bluetooth® function on your device and search for Deskolite.

After selecting Deskolite, your device will pair without a password.

Play music from your device, keep the device within 33 feet (10 meters) of the speaker.

Adjust the volume of your device to desired level.

Control play/pause, volume up/down, and track prev/next from your device.

Turn off the unit when not in use.

Getting Started

Remote Control Use:

ON/OFF

LED lights color selections

LED lights pulse/fade

Speed rotation of mirror ball (SLOW/FAST)

Volume UP/DOWN

