


63.00 mm

100.00 mm


儿童故事机 型号K19 使用说明书

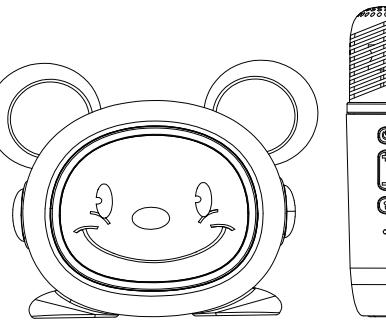

温馨提示:

为了更好的发挥产品性能,请您在使用产品前详细阅读使用说明。首次使用产品时,请先充满电。使用说明书内容如与实际产品不一致,以实际产品为准。


Story Machine Model No. K19 Manual Instruction

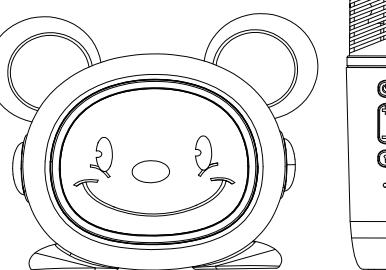


Warm Tips

Please read the instruction carefully before using the product. In order to better use the product performance, please make it fully charged when using it in the first time.

功能指示图

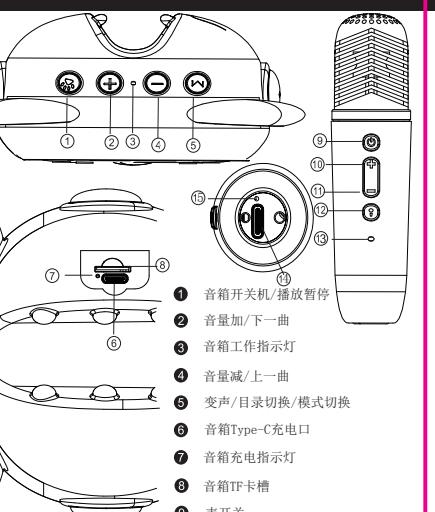

Function Diagram

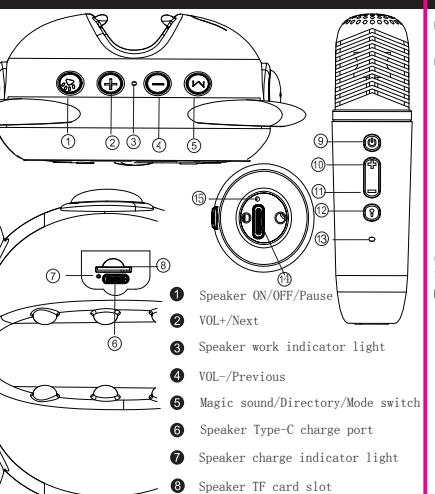

操作说明

音箱开关/播放暂停
长按约2秒,开启或关闭音箱。短按,暂停或播放。

模式切换/变声/目录切换/消原音
开机默认蓝牙模式,双击转换模式,蓝牙/TF,依次循环。
蓝牙模式下,单击音箱模式键或麦的变声键,可切换声效,默认KTV声效,依次单击, KTV-魔音-男神-女神-娃娃音-原声,以此循环。
插卡模式下,单击音响模式键切换TF卡播放目录。

长按麦的变声键,开启或关闭消原音功能。

上一曲/音量减
蓝牙/TF卡模式播放音乐时,长按切换至上一曲;短按,音量减。

下一曲/音量加
蓝牙/TF卡模式播放音乐时,长按切换至下一曲;短按,音量加。

麦开关
长按约2秒,开机或关机;短按,开启或关闭麦静音。

麦音量加/麦音量减
短按,麦音量加或麦音量减。


充电指示灯
充电过程中,红色指示灯亮起。充电结束后,指示灯自动熄灭。

注意事项

如果音箱发出噪音,可能是因为环境噪音,信号干扰,话筒靠近喇叭太近等,请重新调整话筒与音箱的距离。
请勿在高温或潮湿环境中存放本产品。
当本产品发出“滴滴”的提示音时,表示产品电量过低,请关闭产品并及时充电,充电过程中请勿使用产品,以免产生电流声。
若搜不到蓝牙时,请确保产品和手机在有效连接范围内,检查产品是否处于蓝牙搜索模式,以及产品是否已经和其他手机处于配对中。
若连不上蓝牙时,请检查手机是否连接其他设备的配对名过多,请及时清除不需要的连接设备。若以上步骤未能解决疑难,请将产品关机充电或将您的手机关机后重新启动。

音响功能

开关机操作
长按开关机键2秒进行开机,并发出开机提示音,表示设备开启成功。产品使用完毕后,长按开关机键进行关机,并发出关机提示音。

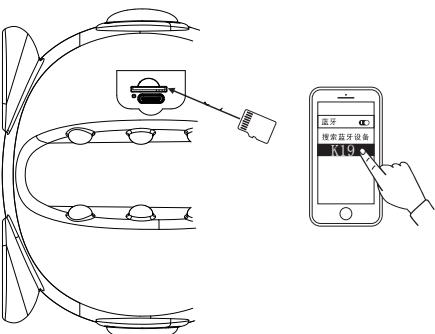

蓝牙听歌

产品开启后,自动进入搜索配对状态,此时打开手机蓝牙功能,搜索蓝牙设备,当出现K19名称时,点击进入配对,配对成功后会有提示音,此时打开手机音乐软件即可播放歌曲。


TF卡

在产品开机状态下,将TF卡插入卡槽(注意方向),此时便会自动播放TF卡的歌曲。

Speaker Function

ON/OFF Operation

Long press the ON/OFF key about 2 seconds to turn on/off the product, and you can hear starting up prompt tone, it means product already starts on. After finishing using, Long press the ON/OFF key about 2 seconds to turn off the product, and then you can hear the shutdown prompt tone.

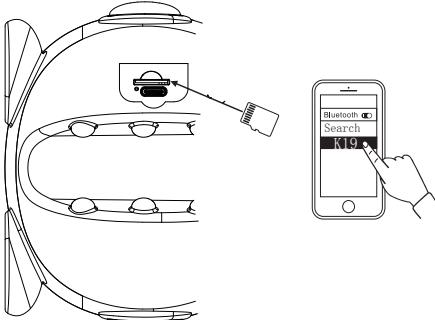

Bluetooth Listening Music



After the product is turned on, it enters the searching and matching status. At this point, turn on the cellphone's bluetooth function, search the device. When the K19 name appears, click to enter matching. After finishing matching, there will be a prompt tone, and then you can play the song on the cellphone.

TF Card Music Listening

Please turn on the product and insert TF card, then the product will automatically enter TF card playing mode.

录音和充电



蓝牙K歌和录音
苹果或安卓手机可下载K歌软件进行安装。适当调整麦克风和音响达到更好效果,打开手机K歌软件点击K歌伴奏即可K歌。

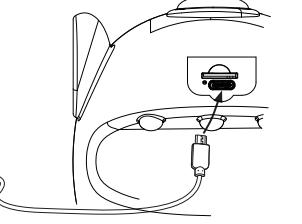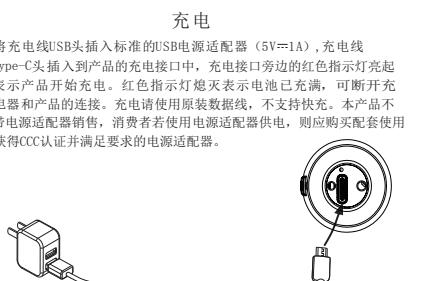

Recording And Charging

Bluetooth Karaoke And Recording
Apple or Android cellphones can download karaoke app for installation, and we can adjust the product to achieve the best effect. We can karaoke through the app of cellphone under the accompaniment.

Charging
We prepare a charging cable with USB plug on one end and Type-c plug on the other end. Insert the USB plug into standard power adapter(5V/1A), and the type-c plug into the product, then we can see the bottom charge indicator light turns red, always on. After full charging, the red light will be off, and we just unplug the cable. Please use the original cable for charging, not suprising fast charging. This product is sold without a power adapter. You should purchase a power adapter that has obtained certification and meets the standard requirements.

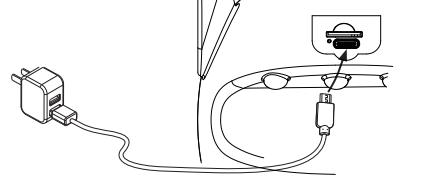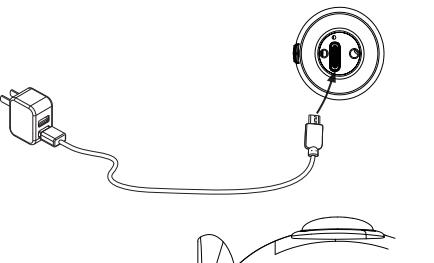

Product Specification

Product Name: Microphone player
Model Number: K19
Pickup Type: condenser pickup
Reverb Mode: Echo reverberation
Transmission Distance: about 10m(no barrier)
Operating Frequency: 2.402G-2.480GHz
Transmitting Power: 4dB
Receiving Sensitivity: -85dB
SNR: over 80dB
THD: less than 3%
Output Power: 8W
Speaker Specification: 74mm 4Ω / 8W
Frequency Range: 100Hz-18KHz
Power Supply: 5V/1A
Charge Time: about 3-4 hours
Play Time: about 6-8 hours
Speaker Battery Capacity: 2000mA/3.7V
Microphone Battery Capacity: 500mA/3.7V
Speaker size: 130*75*125mm
Microphone size: 130*28mm
Speaker Net Weight: about 469g
Microphone Net Weight: about 29g

The above data is obtained from manufacturer, but the actual use is slightly different due to environment and tool factors.

Accessories
Ipcx instruction manual
Ipcx charging cable with type-c plug

The illustrations of product, accessories and user interface in the instruction manual are schematic diagrams for reference only. Due to updating and upgrading the actual product may be slightly different from the schematic diagram. Please refer to the actual situation.

CE ROHS



FCC warning:

1. This device should be installed and operated with minimum distance 0cm between the radiator&your body.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.