


HOW TO RE-PAIR YOUR WIRELESS OR VOICE COMMAND REMOTE CONTROL TO YOUR TV

If you are experiencing issues when using a wireless remote control, or when using the  (Mic) button/voice command function on your Voice command remote control, follow these steps to unpair and then re-pair the remote control:

NOTES:


- After you replace your voice command remote control, the remote must be paired again in order to have voice search functionality.
- After updating your TV, the remote may need to be paired again in order to have voice search functionality.

For Android TV™ released in 2016 or later




If you are using this type of remote control, follow these steps:



1. Unpair the Voice command remote control from the TV:

1. Press the **HOME** button on the remote.
2. Select  **Settings**.
3. The next steps will depend on your TV menu options:
 - Select **Remotes & Accessories** – **Bluetooth Settings** – **SONY TV RC MIC 001** or **SONY TV VRC 001** – **Unpair** – **OK**.
 - Select **Bluetooth settings** – **SONY TV RC MIC 001** or **SONY TV VRC 001** – **Unpair** – **OK**.

2. Re-pair the Voice command remote control to the TV:

- **Fast Pairing** : Press the  button on the remote. According to indication to add remote, press and hold **VOL-** and  button for 2 seconds to pair remote control.
- Press **SETTING** button on the remote-**Bluetooth-Remote control**, According to indication to add remote, press and hold **VOL-** and  button for 2 seconds to pair remote control.

3. Follow the on-screen instructions.

NOTE: Pairing can fail if the battery level is too low. If this is the case, replace the batteries with new ones before attempting to pair again.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.