



成品尺寸: 85x110mm

材质: 128G双铜, 正反面单色印刷, 折页

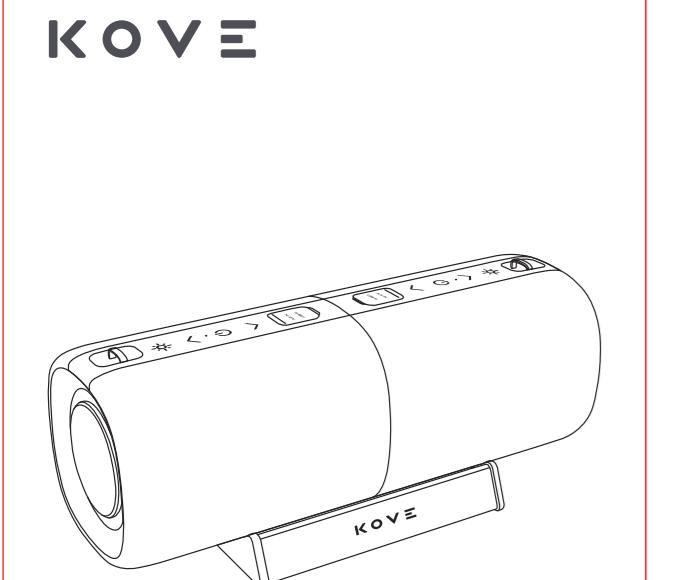

KOVE


USER MANUAL

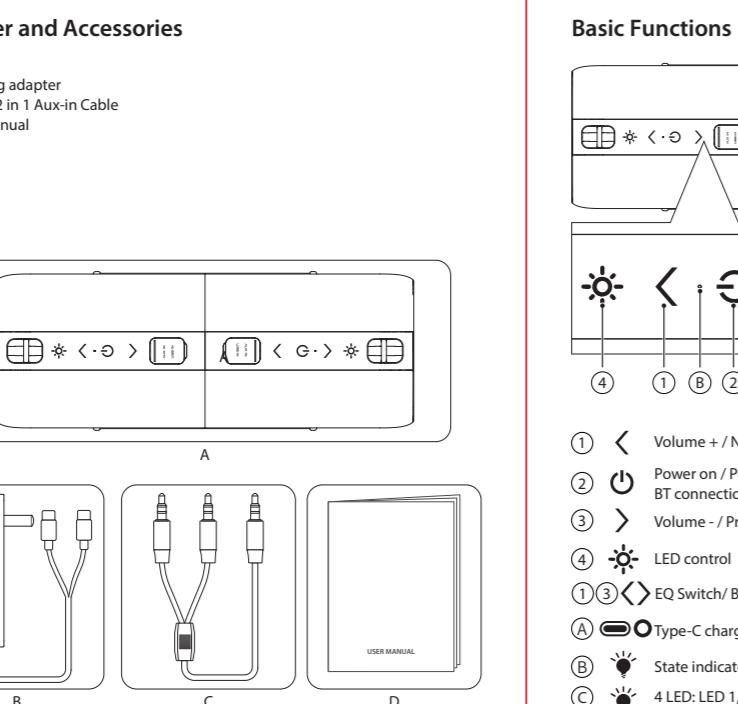

Speaker and Accessories

- A. Speaker
- B. Charging adapter
- C. 3.5mm 2 in 1 Aux-in Cable
- D. User manual


01

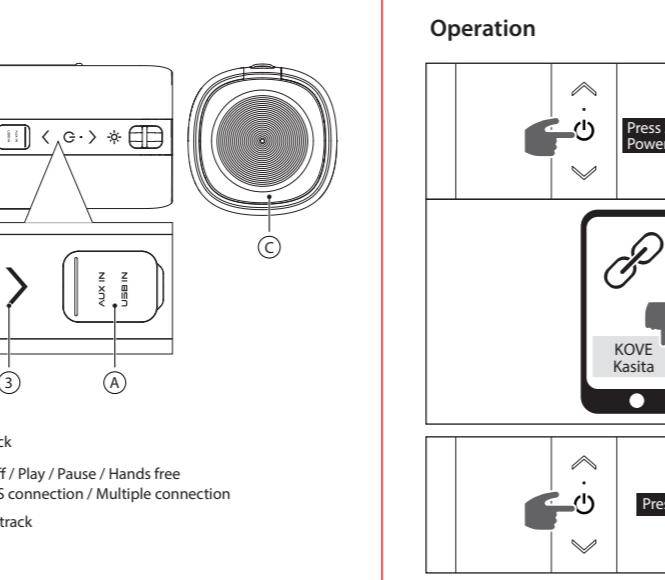

Basic Functions

- ① < Volume + / Next track
- ② ⏪ Power on / Power off / Play / Pause / Hands free BT connection / TWS connection / Multiple connection
- ③ > Volume - / Previous track
- ④ ⚡ LED control
- ⑤ ⚡ EQ Switch/ BT disconnection / Clear pairing history
- ⑥ ⚡ Type-C charging / Aux-in / Reset
- ⑦ ⚡ State indicator (BT Blue, AUX Green, Charging Red)
- ⑧ ⚡ 4 LED: LED 1, LED 2, LED 3, LED 4


02

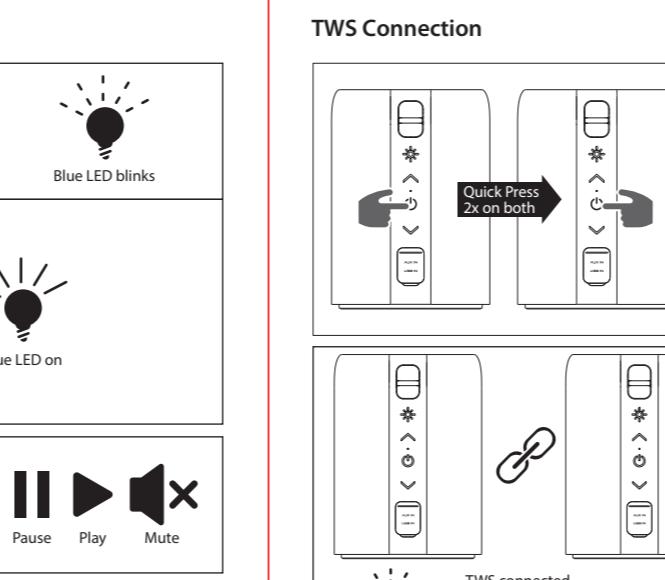

Operation

- 1. Press 2s Power on
- 2. Blue LED blinks
- 3. Press 1x
- 4. Blue LED on
- 5. Press 1x
- 6. Pause, Play, Mute
- 7. Press 2s Power off
- 8. LED off


03

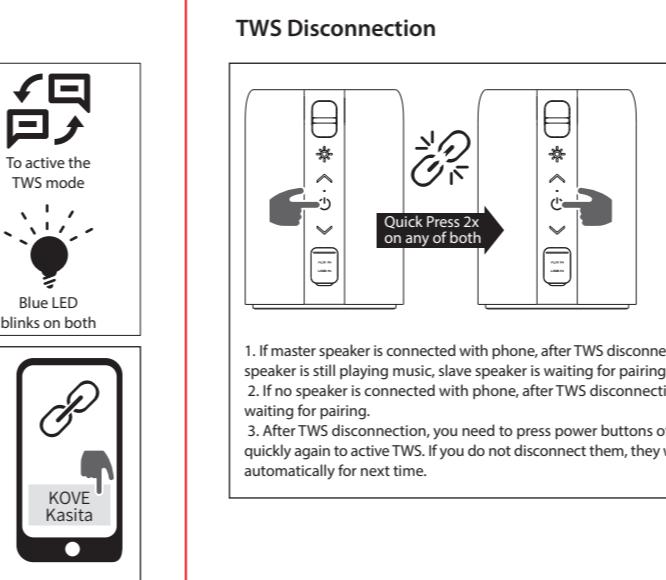

TWS Connection

- 1. Quick Press 2x on both
- 2. Blue LED blinks on both
- 3. TWS connected
- 4. Master speaker - Blue LED Blinks
- 5. Slave speaker - Blue LED solid on


04

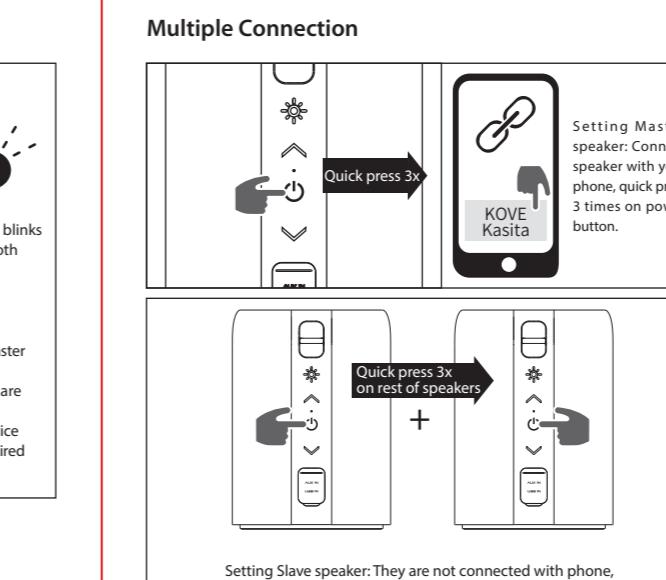

TWS Disconnection

- 1. Quick Press 2x on any of both
- 2. Blue LED blinks on both
- 3. 1. If master speaker is connected with phone, after TWS disconnection, master speaker is still playing music, slave speaker is waiting for pairing.
- 2. If no speaker is connected with phone, after TWS disconnection, both are waiting for pairing.
- 3. After TWS disconnection, you need to press power buttons of both twice quickly again to active TWS. If you do not disconnect them, they will be paired automatically for next time.
- 4. Setting Slave speaker: They are not connected with phone, quick press 3 times on their power buttons.


05

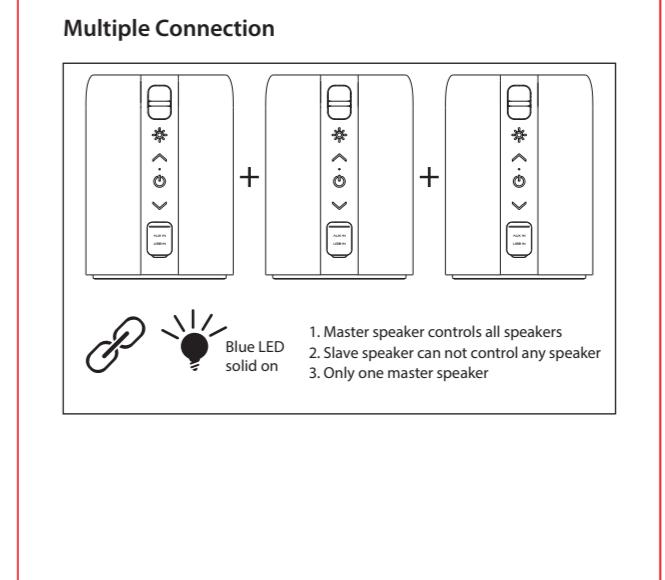

Multiple Connection

- 1. Master speaker controls speakers
- 2. Slave speaker can not control any speaker
- 3. Only one master speaker
- 4. Setting Master speaker: Connect speaker with your phone, quick press 3 times on power button.
- 5. Setting Slave speaker: They are not connected with phone, quick press 3 times on their power buttons.

06

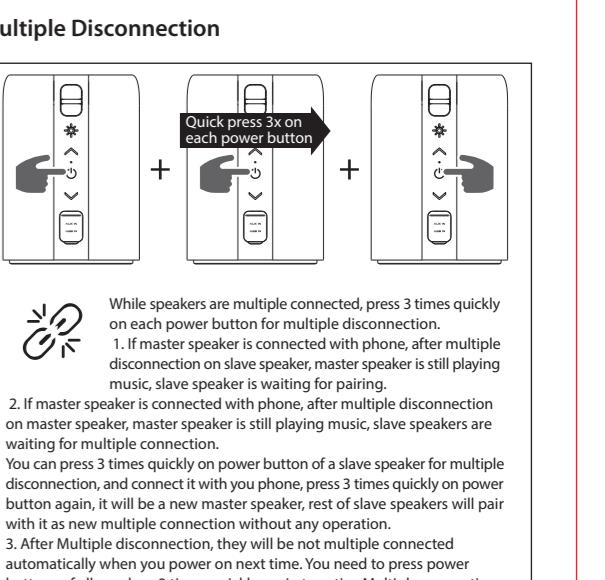

Multiple Disconnection


- 1. We have speakers are multiple connected, press 3 times quickly on each power button for multiple disconnection.
- 2. If master speaker is connected with phone, after multiple disconnection on slave speaker, master speaker is still playing music, slave speakers are waiting for multiple connection.
- 3. You can press 3 times quickly on power button of a slave speaker for multiple disconnection, and connect it with a phone, press 3 times quickly on power button again, it will be new master speaker, rest of slave speakers will pair with it as new multiple connection with your operation.
- 4. After multiple disconnection, they will not multiple connected automatically with your power on next time. You need to press power button of all speakers 3 times quickly again to active multiple connection. If you do not disconnect them, they will be paired automatically for next time.
- 5. If master speaker is connected with phone, after multiple disconnection, master speaker is still playing music, slave speakers are waiting for multiple connection. You can press 3 times quickly on power button of a slave speaker for multiple disconnection, and connect it with a phone, press 3 times quickly on power button again, it will be new master speaker, rest of slave speakers will pair with it as new multiple connection with your operation.
- 6. After multiple disconnection, they will not multiple connected automatically with your power on next time. You need to press power button of all speakers 3 times quickly again to active multiple connection. If you do not disconnect them, they will be paired automatically for next time.

08

反面

K


FCC ID: 2BKLO-KOVE-KASITA

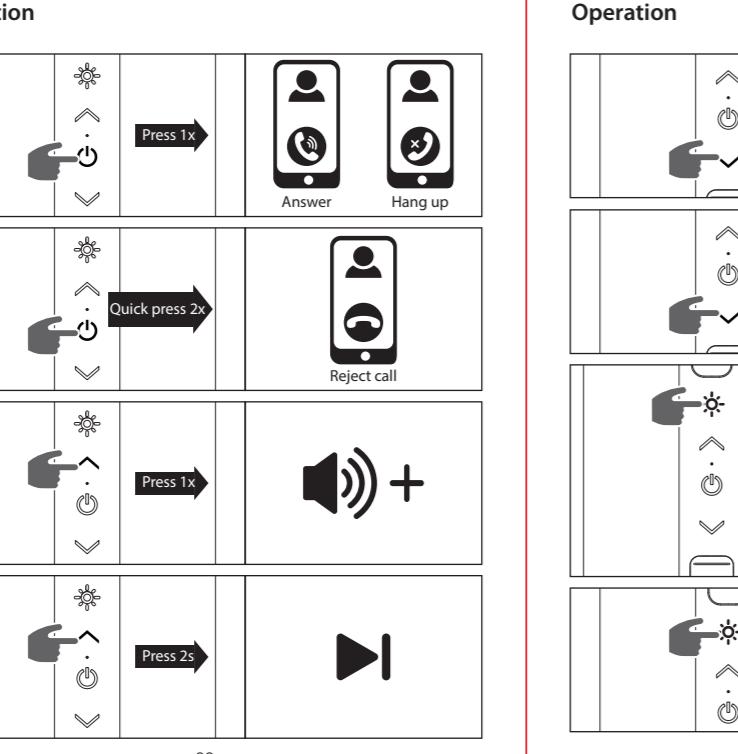

Operation

- 1. Press 1x
- 2. Answer, Hang up
- 3. Quick press 2x
- 4. Reject call
- 5. Press 1x
- 6. +
- 7. Press 2s
- 8. ⏪


09

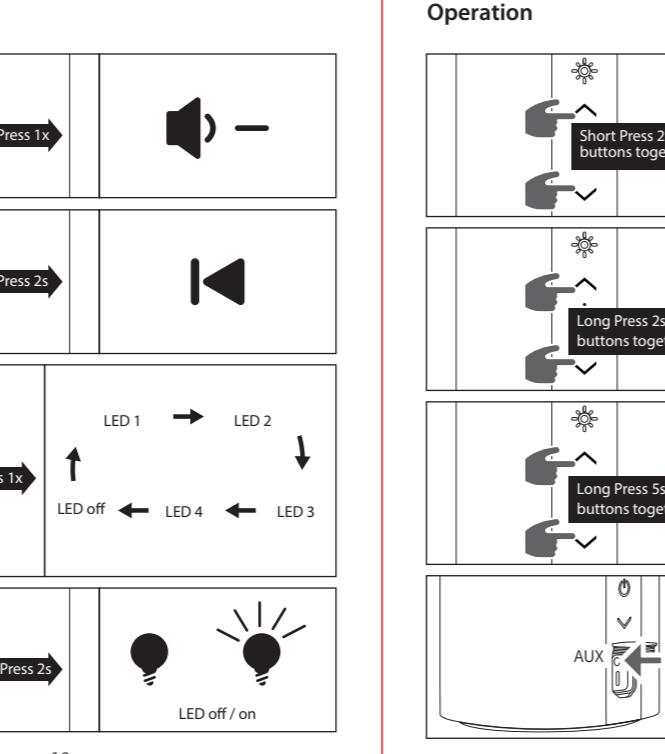

Operation

- 1. Short Press 2 buttons together
- 2. ⏪
- 3. Press 2s
- 4. ⏪
- 5. Press 1x
- 6. LED 1, LED 2
- 7. LED off, LED 4, LED 3
- 8. Press 2s
- 9. LED off/on
- 10. Press 2s
- 11. AUX
- 12. Green LED solid on


10

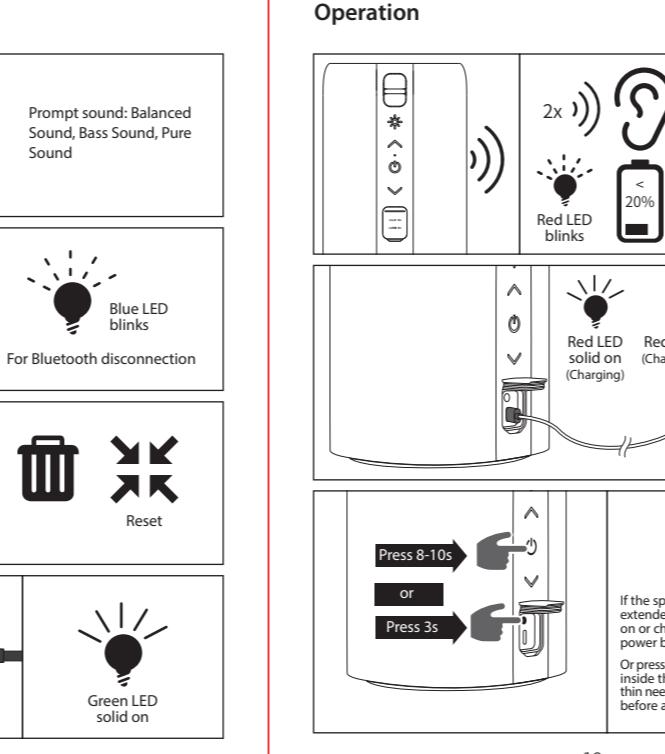

Operation

- 1. Long Press 2s on 2 buttons together
- 2. Red LED blinks
- 3. Long Press 2s on 2 buttons together
- 4. Blue LED blinks
- 5. LED 1, LED 2
- 6. LED off, LED 4, LED 3
- 7. LED off, LED 4, LED 3
- 8. Long Press 5s on 2 buttons together
- 9. ⏪
- 10. AUX
- 11. Green LED solid on

11

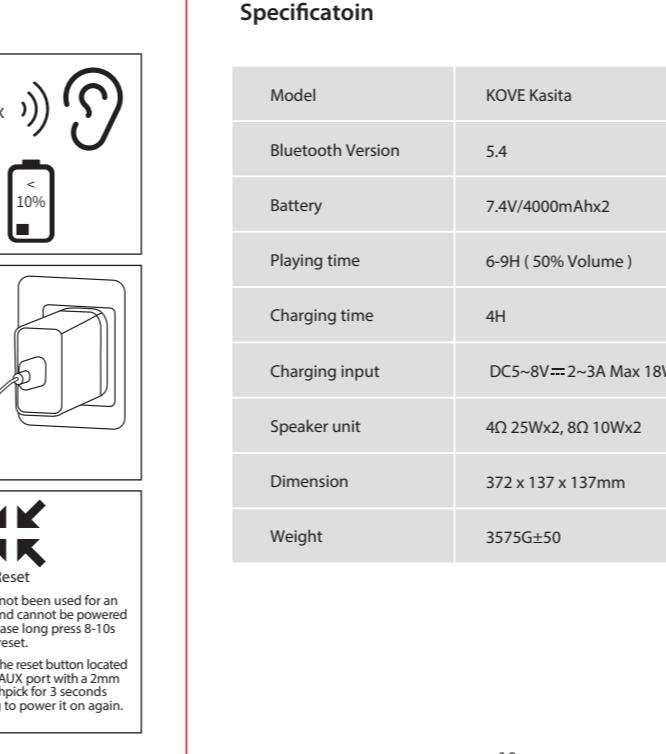

Operation

- 1. If the speaker has not been used for an extended period and cannot be turned on or charged, please plug it into a power source. While charging, press and hold the reset button located inside the 3.5mm AUX port with a 2mm thin needle or toothpick for 10 seconds, then continue charging for 10 minutes before attempting to turn it on again.
- 2. Press 8-10s
- 3. Press 3s
- 4. AUX
- 5. Green LED solid on

12

