

80mm

KEY FINDER INSTRUCTION



Introduction:

This remote key finder can help you quickly find lost keys, remotes, purses, eyeglasses, canes, and other easily lost items. With just one press on the A-B-C-D-E-F button, the beep sound will lead you to the lost items.

Battery Installation:

Follow the steps below to install battery into the transmitter & receiver:

Transmitter



Receiver



Operation:

1. Attach the A-B-C-D-E-F receivers to your frequently lost items with the key rings or double-sided adhesive tape.
2. Press the corresponding A-B-C-D-E-F button on the transmitter.
3. If the receiver is in the range of about 30 meters, it will sound to help you find the items.
4. If no beep is heard, change your location or replace a new battery and press the button again.

Specification:

- Battery: CR2032*7 Pcs (including transmitter and receivers)
- Working Range: 30-40 meters (Open Space)
- Sound: 80-90 dB
- Frequency: 433.92 MHZ

⚠ WARNING

INGESTION HAZARD: This product contains a button cell or coin battery. **DEATH** or serious injury can occur if ingested. A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours. **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.** **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



FCC Statement

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SCHLÜSSELFINDER ANLEITUNG



Model : X01

Einführung:

Mit diesem Schlüsselfinder mit Fernbedienung können Sie verlorene Schlüssel, Fernbedienungen, Geldbörsen, Brillen, Gehstöcke und andere Gegenstände, die leicht verloren gehen, schnell wiederfinden. Mit nur einem Druck auf die A-B-C-D-E-F-Taste führt Sie ein Piepton zu den verlorenen Gegenständen.

Einlegen der Batterie:

Befolgen Sie die nachstehenden Schritte, um die Batterie in Sender und Empfänger einzulegen:

Sender



Empfänger



Bedienung:

1. Befestigen Sie die A-B-C-D-E-F-Empfänger mit den Schlüsselringen oder doppelseitigem Klebeband an Ihren häufig verlorenen Gegenständen.
2. Drücken Sie die entsprechende A-B-C-D-E-F-Taste am Sender.
3. Befindet sich der Empfänger in einer Reichweite von ca. 30 Metern, ertönt ein Signalton, der Ihnen bei der Suche nach den Gegenständen hilft.
4. Wenn kein Signalton zu hören ist, wechseln Sie Ihren Standort oder setzen Sie eine neue Batterie ein und drücken Sie die Taste erneut.

Spezifikation:

- Batterie: CR2032*7 Pcs (einschließlich Sender und Empfänger)
- Arbeitsbereich: 30–40 Meter (offenes Gelände)
- Ton: 80–90 dB
- Frequenz: 433.92 MHz

⚠ WARNING

INGESTION HAZARD: This product contains a button cell or coin battery. DEATH or serious injury can occur if ingested. A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
KEEP new and used batteries OUT OF REACH OF CHILDREN.
Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



Manufacturer: SHENZHEN HSJY TECHNOLOGY CO., LTD.
Address: 5th Floor, Building G, Hongzhu Yongqi IndustrialZone, Lezhujiao, Baoan Dist.Shenzhen City,GD Province,China
Manufacturer: shenzhenshi chimao dianzi shangwu youxian gongsi
Address: Henggang Street, Overseas Chinese Village Community, Rongde International Yuchen Apartment, B2509, Longgang District, Shenzhen, Guangdong, 518000, CN

Warning:

EN:

1. Do not mix old and new batteries.
2. Do not mix Alkaline, standard(carbon-zinc), or rechargeable batteries.

DE:

1. Mischen Sie keine alten und neuen Batterien.
2. Mischen Sie keine Alkali-, Standard- (Kohle-Zink) oder wiederaufladbaren Batterien.

FR:

1. Ne mélangez pas des piles neuves et usagées.
2. Ne mélangez pas des piles alcalines, standard (carbone-zinc) ou rechargeables.

IT:

1. Non mischiare batterie vecchie e nuove.
2. Non mischiare batterie alcaline, standard (zinco-carbone) o ricaricabili.

ES:

1. No mezcle pilas nuevas y viejas.
2. No mezcle pilas alcalinas, estándar (carbóno-zinc) o recargables.