

4K UHD Integrated Dual-Lens USB Camera




 SCAN ME

For User Manual of the Camera

Setup Guide

Step 1 Connect the camera to the network using the network cable, switch or router.

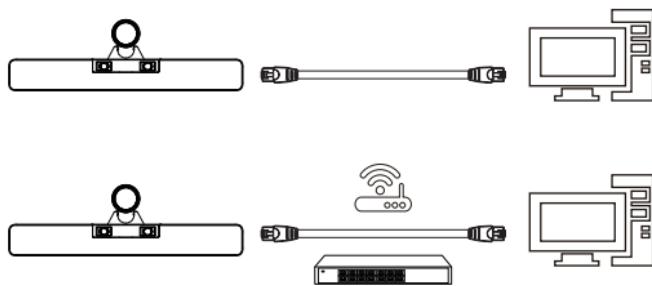


Step 2 Check the default IP address, username and password on the camera's label.

Step 3 Visit the VLC website (<http://www.videolan.org/vlc/>) to download and install the VLC media player.

Step 4 Click “Media > Open Network Stream”.

Step 5 Enter the URL to stream via VLC.

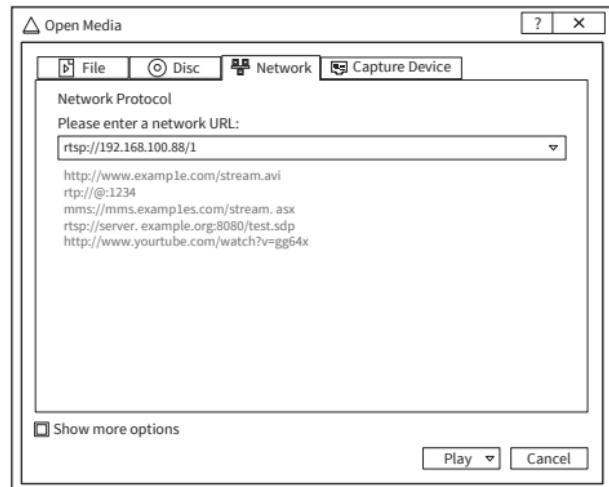

Step 6 Please visit the web settings page for more settings.



Note

- rtsp://ip: port number/1 (First Stream);
- rtsp://ip: port number/2 (Second Stream);
- When the rtsp is the default value of 554, the port number can be omitted.

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.